ADA2000 User's Manual

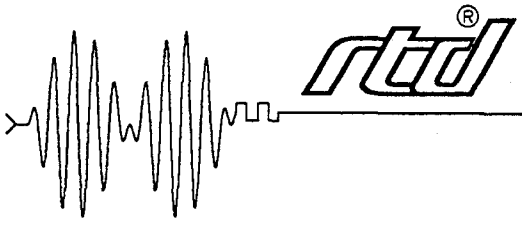

Real Time Devices, Inc.

"Accessing the Analog World"™

ISO9001 and AS9100 Certified

ADA2000

User's Manual

REAL TIME DEVICES, INC.
820 North University Drive
Post Office Box 906
State College, Pennsylvania 16804
Phone: (814) 234-8087
FAX: (814) 234-5218

Published by
Real Time Devices, Inc.
820 N. University Dr.
P.O. Box 906
State College, PA 16804

Copyright © 1991 by Real Time Devices, Inc.
All rights reserved

Printed in U.S.A.

Rev. C 9234

TABLE OF CONTENTS

Page

INTRODUCTION

How to Use This Manual i-2
When You Need Help i-2

CHAPTER 1 — QUICK START—GETTING YOUR ADA2000 RUNNING

What Comes With Your ADA2000 1-1
The Hardware 1-1
- Functions You Can Set 1-1
- Setting the Base I/O Address 1-2
- Digital I/O Circuitry 1-4

Installing the ADA2000 in Your Computer 1-7
The Software 1-8
- Demo Disk 1-8
- Backing Up Your Disk 1-8

Initializing Your ADA2000 1-9
Selecting an Analog Input Channel 1-10
Setting the Input Gain 1-11
Taking an A/D Reading 1-12
Controlling the D/A Converter 1-13
- Loading the D/A Converter Data 1-13
- Output Voltage Range and Resolution 1-14

CHAPTER 2 — FUNCTIONAL DESCRIPTION

Analog-to-Digital Conversion Circuitry 2-2
- Multiplexers 2-2
- Gain Control Circuitry 2-2
- Sample and Hold Circuitry 2-2
- A/D Converter 2-2

Digital-to-Analog Conversion Circuitry 2-3
- D/A Converter 2-3
- Output Amplifiers 2-3

Programmable Peripheral Interfaces 2-3
- PPI1 2-4
- PPI2 2-4

Programmable Interval Timer (PIT) 2-4

CHAPTER 3 — JUMPER SETTINGS

S1 — Analog Input Signal Type DIP Switch 3-2
P2 — Base I/O Address Header Connector 3-2
P3 — Programmable Interval Timer (PIT) I/O Header Connector 3-2

Page

P4, P5, P7, and P11 — Interrupt Header Connectors 3-4
P4 — EXTINT1 and PPI1 INTRA Interrupts 3-5
P5 — PIT Output Interrupts 3-5
P7 — A/D End-of-Convert (EOC) Interrupt 3-5
P11 — EXTINT2 and PPI2 INTRA and INTRB Interrupts 3-6
P6 — End-of-Convert (EOC) Monitor Header Connector 3-6
P9 — A/D Converter Voltage Range Header Connector 3-7
P10 — D/A Converter Voltage Range Header Connector 3-7
P12 — Digital I/O Header Connector 3-7
Digital I/O — Buffers, Shunts, and Resistor Networks 3-8
Mode 0 Operation 3-9
Mode 1 Operation 3-9
Mode 2 Operation 3-9
Resistor Networks 3-10

CHAPTER 4 — PROGRAMMING YOUR ADA2000

Selecting an Analog Input Channel 4-1
Setting the Input Gain 4-1
Taking an A/D Reading 4-1
Controlling the D/A Converter 4-1
Programming the Programmable Peripheral Interfaces 4-1
Programming the Programmable Interval Timer 4-3
Hardware Interrupts 4-3
A/D End-of-Convert (EOC) Signal 4-4
PPI Interrupts 4-4
PIT Interrupts 4-4

CHAPTER 5 — CALIBRATION PROCEDURES

Required Equipment 5-1
A/D Calibration 5-1
Unipolar Calibration 5-2
Bipolar Calibration 5-2
Gain Circuitry Calibration 5-3
D/A Calibration 5-3
Unipolar Calibration 5-3
Bipolar Calibration 5-4

APPENDIX A — ADA2000 Specifications A-1
APPENDIX B — Connector Pin Assignments B-1
APPENDIX C — Component Data Sheets C-1
APPENDIX D — Configuring the ADA2000 for SIGNAL*MATH D-1
APPENDIX E — Configuring the ADA2000 for ATLANTIS E-1
APPENDIX F — Warranty F-1

LIST OF ILLUSTRATIONS

Figure		Page
i-1	Typical Laboratory Setup	i-1
1-1	ADA2000 Board Layout	1-2
1-2	Base I/O Address Header Connector, P2	1-4
1-3	8255 PPI Functional Block Diagram	1-4
1-4	PPI2 Functional Block Diagram	1-6
1-5	Pull-up Resistor Block Diagram	1-7
1-6	A/D Conversion Word Format	1-12
2-1	ADA2000 Functional Block Diagram	2-1
2-2	EOC Timing Diagram	2-3
3-1	ADA2000 Board Layout	3-1
3-2	DIP Switch S1	3-2
3-3	PIT I/O Header Connector P3	3-3
3-4	PIT Functional Block Diagram	3-4
3-5	Interrupt Header Connector P4	3-5
3-6	Interrupt Header Connector P5	3-5
3-7	Interrupt Header Connector P7	3-6
3-8	Interrupt Header Connector P11	3-6
3-9	EOC Monitor Header Connector P6	3-6
3-10	A/D Converter Voltage Range Header Connector P9	3-7
3-11	D/A Converter Voltage Range Header Connector P10	3-7
3-12	Digital I/O Header Connector P12	3-8
3-13	PPI2 Circuitry	3-8
3-14	PPI2 Port A Pull-up/Pull-down Resistor Circuitry	3-10
4-1	PPI Mode Definition Format	4-2
5-1	ADA2000 Board Layout	5-1

INTRODUCTION

This manual shows you how to operate and provides technical data for Real Time Devices' ADA2000 multifunction data acquisition board. The ADA2000 features 12-bit high-speed multichannel differential or single-ended analog-to-digital conversion and two channels of digital-to-analog conversion. This versatile interface allows your IBM PC/XT/AT or compatible computer to effectively operate in the real-time environment of data acquisition and control to sense and generate both analog and digital signals. Figure i-1 shows a typical laboratory setup using a PC for data collection.

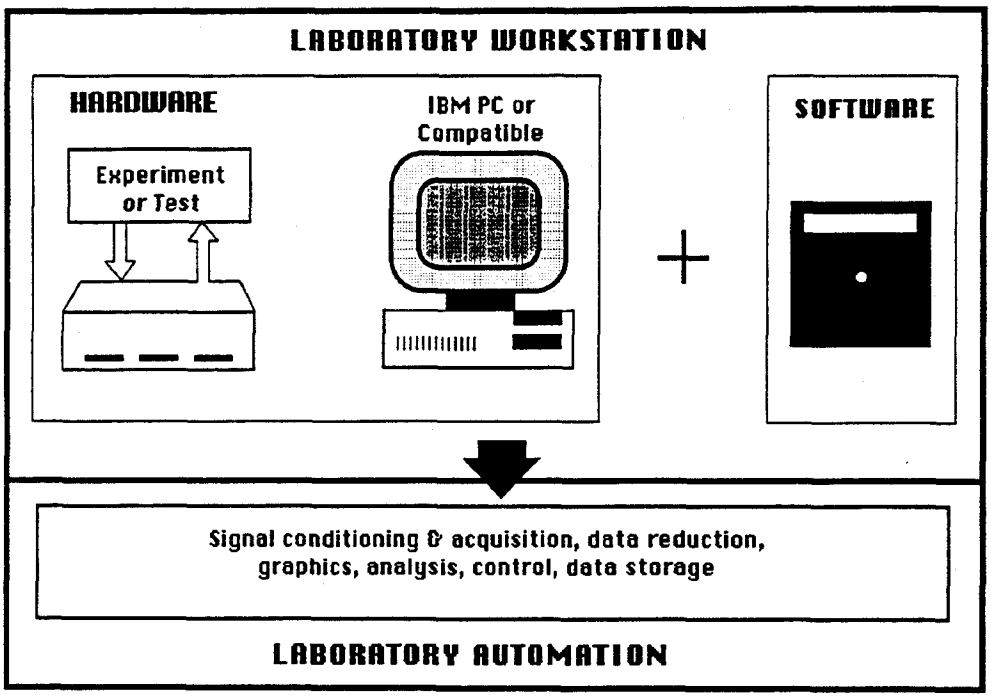

Fig. i-1 — Typical Laboratory Setup

The ADA2000 features high-resolution (12-bit) analog-to-digital and digital-to-analog converters, digital I/O, and timer/counters that provide flexibility for many applications. Its six-layer construction, including separate power and ground planes, enhances board performance and low-noise characteristics. It plugs directly into any unused expansion slot in the computer. All external I/O connections, including PC bus-sourced power, are accessible at the rear panel of the computer when the board is installed.

Several of the ADA2000's functions can be readily adapted for your specific requirements. Through programming and/or jumper or switch settings made on the board, you can:

- Select the base I/O address,
- Choose 8 differential or 16 single-ended analog input channels,
- Select the active channel,
- Select the channel gain,
- Select the analog input voltage range and polarity,
- Select the analog output voltage range and polarity,
- Control 40 TTL/CMOS-compatible digital I/O lines,
- Control three 16-bit, 8 MHz timer/counter circuits (the programmable interval timer),
- Monitor the A/D conversion using the end-of-convert (EOC) signal,
- Generate interrupt signals.

Many of these functions are set up at the factory, based on typical data collection requirements and customer specifications when ordering. Therefore, you can successfully install and run the ADA2000 with minimal understanding about changing and controlling them. On the other hand, you may want to understand everything about your board so that you can effectively use each feature. With this in mind, this manual provides basic information to get the board up and running, as well as detailed information for a full understanding of each function.

How to Use This Manual

This manual is designed to help you install and get your ADA2000 running quickly, while also including sufficient detail about each board function. Begin by reading Chapter 1 in order to use your board as quickly as possible. This chapter and the accompanying demonstration software included with your ADA2000 package will allow you to promptly use your interface. To fully understand and control the ADA2000 functions, read Chapters 2 through 4. Chapter 5 contains board calibration procedures.

The chapters and appendixes in this manual are described in detail below.

Chapter 1, "Quick Start—Getting Your ADA2000 Running," provides the instructions necessary to install the board and use its basic functions. The information contained in this chapter does not cover how to change the board setup, except for the base I/O address.

Chapter 2, "Functional Description," provides a block diagram and a functional discussion of the board.

Chapter 3, "Jumper Settings," describes each header or jumper circuit on the board and how it is controlled.

Chapter 4, "Programming Your ADA2000," describes how the board can be programmed using the demonstration software.

Chapter 5, "Calibration Procedures," provides instructions for board calibration.

Appendix A, "ADA2000 Specifications," contains a complete listing of board specifications.

Appendix B, "Connector Pin Assignments," contains the pinouts of the external I/O connectors and the mating connectors' part numbers.

Appendix C, "Component Data Sheets," contains manufacturers' data sheets for major board components.

Appendix D, "Configuring the ADA2000 for SIGNAL*MATH," contains information about setting board jumpers and and initializing the board to run the SIGNAL*MATH acquisition and analysis program.

Appendix E, "Configuring the ADA2000 for ATLANTIS," contains information about setting board jumpers to run the ATLANTIS data acquisition and real-time monitoring program.

Appendix F, "Warranty," contains board warranty information.

When You Need Help

When you are working with the ADA2000 interface board, this manual and the demo software included in your package will provide sufficient information to properly control all of the board's functions. If, however, after carefully reviewing the manual, you are unable to obtain proper responses from the board, Real Time Devices' technical staff is ready to assist you. For assistance, call (814) 234-8087 during regular business hours, eastern standard time or eastern daylight time, or send a FAX requesting assistance to (814) 234-5218. Be sure to include your company's name, your name, your telephone number, and a brief description of the problem.

CHAPTER 1

QUICK START—GETTING YOUR ADA2000 RUNNING

To get started using your ADA2000 interface board, you must:

- Select by jumper a base I/O address which does not contend with any other peripheral device.
- Install the board into your PC.
- Connect a signal to one of the analog input channels.
- Run the ADA2000 software.

Unless you have other requirements, these steps are all that are necessary to use your ADA2000 board.

This chapter explains how to install your ADA2000 and use its basic functions. You will learn how to:

- Change the base I/O address setting,
- Install the board in your PC,
- Initialize the board,
- Select the analog input channel and gain,
- Take an A/D reading,
- Generate analog outputs.

This chapter allows you to immediately start using the basic functions of your ADA2000 board for data collection applications. This chapter does not explain how to control the more intricate board functions such as the programmable interval timer, the various digital I/O configurations, or interrupts, nor does it explain how to change hardware-controlled settings except for the base I/O address. The functions not covered here are described in Chapters 2 through 4.

What Comes With Your ADA2000

The standard ADA2000 board package includes:

1	ADA2000 10.4-inch (264mm) interface board
1	ADA2000 demo disk
1	user's manual

Additional items, such as the ADA2000 cable set (order number XK40-2), extender boards or SIGNAL*MATH or ATLANTIS application software, are available for this board and are included on an as-ordered basis.

All signals on your board are made easily accessible with Real Time Devices' XB40 I/O extender board and XC40 expansion cable. The extender board has two 20-pin terminal strips and a prototype area to support any special circuitry you may require to condition the signals. For example, if you are prototyping solid-state relays or optoisolators, this can easily be done with an XB40. The expansion cable terminates in a 40-pin wire-wrap header connector suitable for installation in standard 0.1 inch spacing perf-board material available from most electronic distributors.

The Hardware

The ADA2000 interface board is shown in Figure 1-1. A complete listing of the board specifications is contained in Appendix A. The ADA2000 has several features which are user-controlled through hardware or software. Most of the hardware-controllable features are jumper-controlled; the remaining are switch-controlled.

All of the board components are mounted on a 10.4-inch printed circuit board which fits in any unused full-size expansion slot in an IBM PC/XT/AT or compatible computer. Three 40-pin connectors on the board, P8, P14, and P15, accommodate all of the board's external I/O. In operation, these connectors are cabled so that all 120 lines are accessible at the rear panel of the computer (see the board installation instructions later in this chapter).

Functions You Can Set

To allow the ADA2000 interface board to be adapted to your needs, several functions can be set up to perform specific tasks by changing the hardware configuration or through software. Table 1-1 lists each function you can control, the factory (or default) setting if applicable, and where in this manual you can find information about its settings.

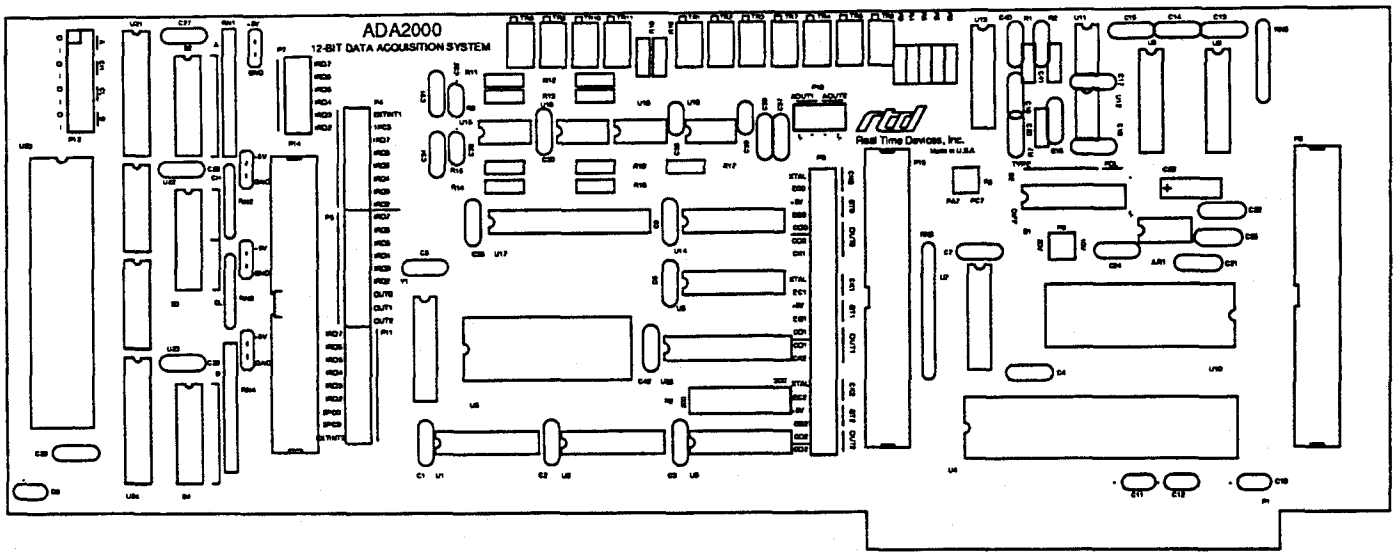

Fig. 1-1 — ADA2000 Board Layout

The functions which you can control through hardware are:

- Base I/O address,
- Analog input channel type,
- Analog input channel voltage range and polarity,
- End-of-convert monitor,
- Analog output voltage range and polarity,
- Digital I/O (hardware and software),
- PIT timer/counters (hardware and software),
- Interrupts.

The functions which you can control through software are:

- Analog input channel selection,
- Analog input gain selection,
- Digital I/O (software and hardware),
- PIT timer/counters (software and hardware),
- Board initialization.

Setting the Base I/O Address

Starting with the base I/O address (BA), the ADA2000 uses 28 consecutive address locations in your computer's I/O space. Table 1-2 lists the I/O map for the ADA2000. It is important to recognize that some of your computer's I/O address locations will already be occupied by internal I/O and other peripherals. If your ADA2000 board tries to use I/O address locations already in use by another device in your system, address contention will result. Hence, the board will not operate, or at best will operate erratically.

I/O address contention is one of the most common problems encountered when adding an interface device to your computer system. To avoid this problem, a base I/O address jumper circuit is provided on the ADA2000 board. By changing the position of the jumper on the header connector labeled P2 (located just to the right of center, near the bottom of the board), the base I/O address setting can be changed to any one of eight locations.

Table 1-1—ADA2000 Board Functions and Settings

FUNCTION	FACTORY SETTING	USER INFORMATION
Base I/O Address	300 hex (768 decimal)	To change this setting, see "Setting the Base I/O Address," Chapter 1
Analog Input Channel Type	8 differential channels	To select 16 single-ended channels, see S1 discussion, Chapter 3
Analog Input Channel Selection	Software-controllable	See "Selecting an Analog Input Channel," Chapter 1, and demo disk
Analog Input Gain Selection	Software-controllable	See "Setting the Input Gain," Chapter 1, and demo disk
Analog Input Voltage Range and Polarity	User-specified when ordering	To change these settings, see S1 and P9 discussions, Chapter 3.
End-of-Convert (EOC) Monitor	Connected to PA7	See P6 discussion, Chapter 3.
Analog Output Voltage Range and Polarity	Voltage range factory-set to same polarity as analog input	To change these settings, see P10 discussion, Chapter 3.
Digital I/O		
16 I/O Lines from PPI1 (unbuffered)	Software-controllable	See "Programming the PPIs," Chapter 4 and demo disk
24 I/O Lines from PPI2	Buffered inputs; software-controllable	See "Digital I/O Circuitry," Chapter 1; P12 and digital I/O discussions, Chapter 3; Programming the PPIs," Chapter 4; and demo disk
Programmable Inverval Timer (PIT) Circuitry		
Modes	Software-controllable	See "Programming the PIT," Chapter 4 and demo disk
I/O Configuration	Clock Input: 5 MHz Gate Input: +5 V Clock Output: To P8	See P3 discussion, Chapter 3
Interrupts	Disabled	See P4, P5, P7, and P11 discussions, Chapter 3, and "Interrupt Considerations," Chapter 4

Figure 1-2 shows the base I/O address header connector, P2, with the jumper installed at the factory-set location of 300 hex. The jumper must be installed vertically across one of the eight pairs of pins on P2. The hexadecimal base I/O address setting corresponding to each pair of pins, from left to right, is as follows:

200 240 280 2C0 300 340 380 3C0

For example, if the base I/O address is changed to 280 hex, then for the 28 operations listed in Table 1-2, BA equals 280. Thus, to send the channel selection and gain data to port B of PPI1, its address of BA + 1 becomes 281 hex.

If the factory setting of 300 hex will cause contention in your system, position the jumper to the desired base I/O address setting. Once you have set the base I/O address, make a note of its value on the table inside the back cover of this manual. You will need to know this setting for use in your programs.

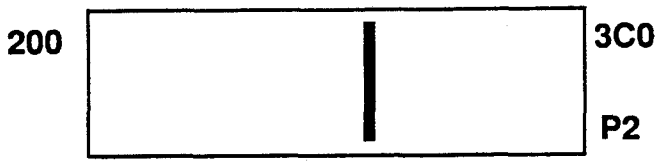

Fig. 1-2 — Base I/O Address Connector, P2

Digital I/O Circuitry

Two 8255 programmable peripheral interfaces (PPIs) provide 40 TTL/CMOS-compatible digital I/O lines which can be configured by the user for a wide range of I/O functions. Each PPI has 24 digital I/O lines, as shown in the 8255 block diagram in Figure 1-3. Eight of these lines on PPI1 support the board's analog-to-digital conversion function and are not available for other use. The remaining 16 lines from PPI1 and 24 lines from PPI2 are available to the user.

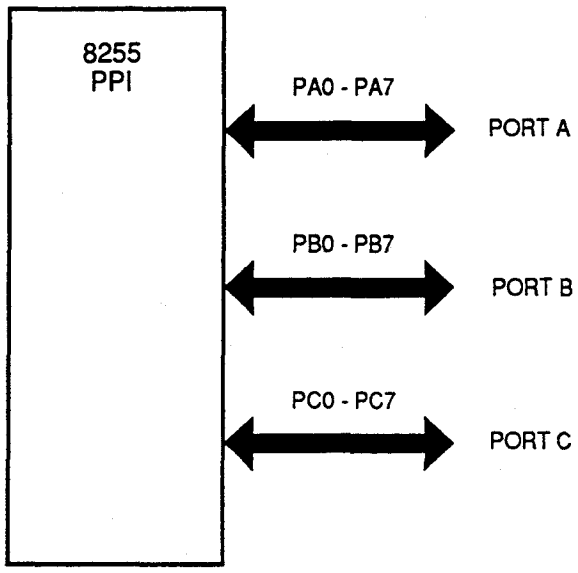

Fig. 1-3 — 8255 PPI Functional Diagram

The 24 lines of PPI2 can be set as buffered or shunted lines using on-board DIP switches to support individual user requirements. All 24 lines are factory-set as buffered inputs, and this is the setting which will be used in this chapter.

PPI2, U20, and its associated buffer ICs and DIP switches are located on the left-hand portion of the board (near I/O connector P14). The board is shipped with buffer ICs installed and with the DIP switches set to the OPEN (OFF) position. P12 is jumpered so that the I/O lines are configured as buffered inputs. All of these settings are explained in Chapter 3.

Table 1-2—ADA2000 I/O Map

FUNCTION	A4	A3	A2	A1	A0	R/W	BA + HEX
PPI1							
Port A	0	0	0	0	0	R/W	0
Port B (Channel Sel & Gain)	0	0	0	0	1	W	1
Port C	0	0	0	1	0	R/W	2
Control Word	0	0	0	1	1	W	3
A/D Conversion Circuitry							
Start 12-bit Conversion	0	0	1	x	0	W	4 or 6
Start 8-bit Conversion	0	0	1	x	1	W	5 or 7
Read MSB	0	0	1	x	0	R	4 or 6
Read LSB	0	0	1	x	1	R	5 or 7
D/A Conversion Circuitry							
Program AOUT1 LSB	0	1	0	0	0	W	8
Program AOUT1 MSB	0	1	0	0	1	W	9
Program AOUT2 LSB	0	1	0	1	0	W	A
Program AOUT2 MSB	0	1	0	1	1	W	B
Convert /Update AOUT1/AOUT2	0	1	1	x	x	W	C, D, E, or F
Clear AOUT1/AOUT2	1	0	0	x	x	W	10, 11, 12, or 13
Programmable Interval Timer							
Counter 0	1	0	1	0	0	R/W	14
Counter 1	1	0	1	0	1	R/W	15
Counter 2	1	0	1	1	0	R/W	16
Control Word	1	0	1	1	1	W	17
PPI2							
Port A	1	1	0	0	0	R/W	18
Port B	1	1	0	0	1	R/W	19
Port C	1	1	0	1	0	R/W	1A
Control Word	1	1	0	1	1	W	1B

NOTE: x = don't care setting

Note that if you change any DIP switch settings to the CLOSED (ON) position as described in that chapter, you must remove the corresponding buffer from the board. Figure 1-4 shows the operation of PPI2.

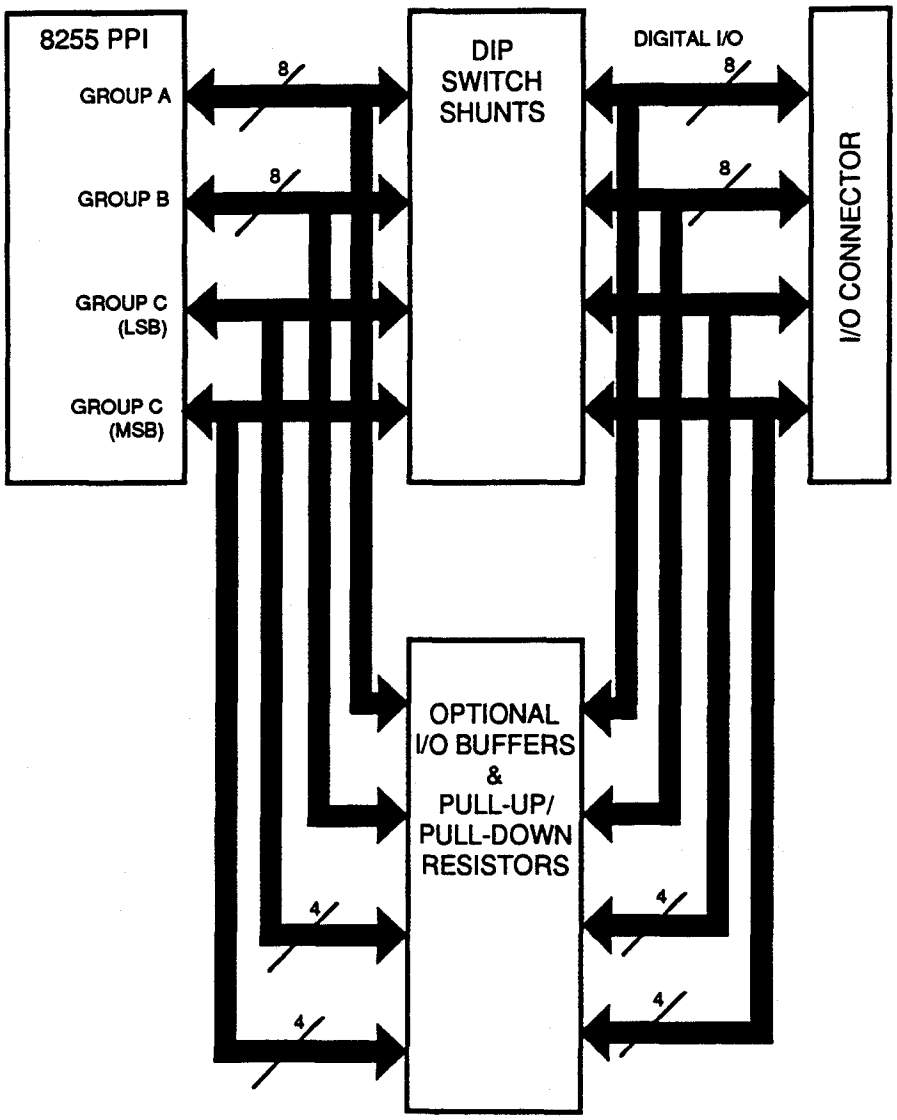

Fig. 1-4 — PPI2 Functional Block Diagram

Single in-line resistor networks can be installed at the factory (if ordered as an option) or by the user in IC locations RN1 through RN4 on the left side of the board. These networks allow the PPI2 digital I/O lines to be pulled up or pulled down for certain applications. These networks are connected to a voltage source (pull-up) or ground (pull-down) by jumper settings on header connector P13. Figure 1-5 shows a typical pull-up resistor application. Details on configuring the PPI circuitry are included in Chapter 3.

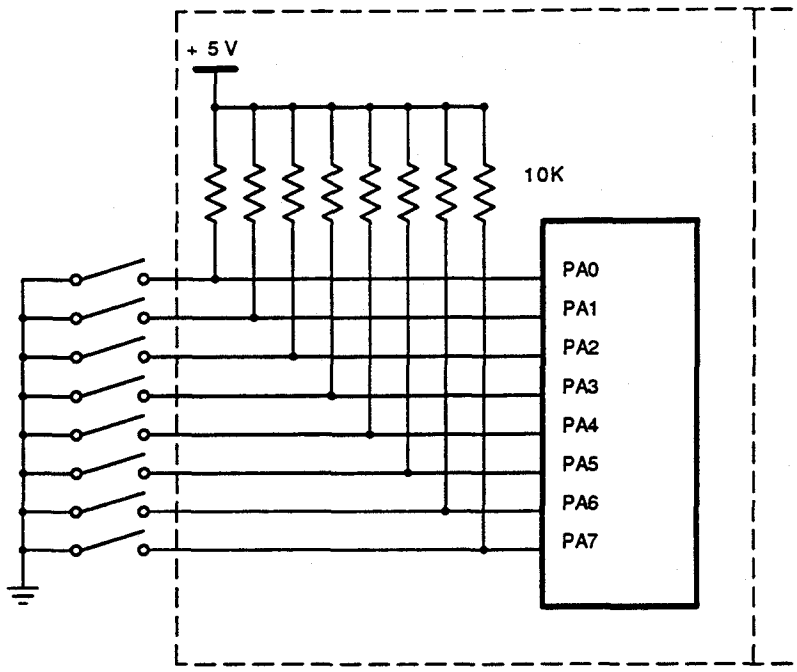

Fig. 1-5 — Pull-Up Resistor Block Diagram

Installing the ADA2000 in Your Computer

Before installing the ADA2000 in your computer, make sure that the base I/O address has been properly selected and all the hardware settings have been configured to support your requirements. This chapter explains how to control the base I/O address. Other hardware settings are set at the factory, as listed in Table 1-1, and remain at their factory settings unless you change them. The interrupts generated by your ADA2000 are disabled (not connected) when you receive your board. If you intend to use the interrupts, they must be configured appropriately before installing the board. Information about these and other functions not covered in this chapter is provided in Chapters 2 through 4. Use these chapters as necessary to configure your board before installation.

To install your ADA2000, follow these step-by-step procedures:

1. TURN OFF THE POWER TO YOUR COMPUTER FIRST. Refer to the owner's manual for your computer, and remove the top cover.
2. Select an unused expansion slot in which to install your board and remove its corresponding blank bracket from the rear panel of the computer by removing the screw at the top of the bracket.
3. Before placing the board into the computer, three ribbon cable assemblies must be installed on board connectors P8, P14, and P15. If you have purchased the ADA2000 cable set, first install the twisted pair cable analog I/O connector P8. Then install the standard cables on P14 and P15. Each cable is a 40-line external I/O cable which extends through the connector slot in the rear panel of the computer. All three cables run through a single slot where they provide 120 lines of external I/O to the board. This configuration allows substantial board I/O through a single expansion port in your computer. Appendix B lists the signal carried on each pin of these connectors. To install the cables:
   a. Remove the strain relief clamp attached to the ADA2000 bracket located on the right side of the board.
   b. Connect the socket connector to board connector for each cable. When installing, observe the connector keying and press firmly to make sure that each socket connector is fully seated on the board. Each cable provided is labeled with the connector's P number for easy

identification. The cables have strain reliefs on one connector and not on the other. The connector without the strain relief is to be installed on the board. After the cables are installed on the board, position them so that they pass over the flange in the board's bracket.

c. Re-attach the clamp to the bracket using the hardware supplied with your ADA2000, securing the ribbon cables in place.

4. After checking that the cables are correctly installed on the board, orient the board inside the computer so that the cables extend through the rear panel opening and the card edge connector lines up with the expansion slot connector. Then, press down on the metal bracket tab and the top of the board until the board is firmly seated in the expansion slot connector.
5. Secure the bracket back in place with the screw and put the cover back on your computer.

Now your board is ready to be connected via the external connectors at the rear of the computer. After these connections have been made, the board is ready for operation.

The Software

The ADA2000 operates under software control. Programming includes the analog input channel selection and gain, control of the the A/D and D/A conversions, the programmable peripheral interfaces (PPI1 and PPI2), and the programmable interval timer. The analog input channel and gain selections, taking an A/D reading, and controlling the D/A converter are covered in this chapter. Digital I/O control through PPI1 and PPI2 and control of the programmable interval timer are more complex, and are described in Chapter 4, "Programming Your ADA2000."

Regardless of what programming language you use, you can write programs that control the ADA2000 board. The demonstration disk which accompanies your ADA2000 contains examples in Turbo C, Turbo Pascal, and BASIC.

Nearly all modern MS-DOS-based PC languages have I/O reference instructions. These are the instructions to control the data transfers to and from the I/O ports. Consult your programming language reference to find these instructions for your favorite language. Listed below are the I/O reference instructions used by some common languages.

	BASIC	TURBO PASCAL	TURBO C
input:	INP	Port	inportb
output:	OUT	Port	outportb

Demo Disk

Included with your ADA2000 is a demo disk which provides programming instructions and example programs for controlling the functions of your interface board. This demo disk is divided into directories, each of which is named according to the language used to write the programs it contains. The files within each directory contain example programs and a documentation file with general information. In addition, your demo disk contains a README.DOC file which provides programming information for your board.

Each example program shows you how to control a particular board function, such as selecting an input channel or input gain, controlling the A/D and D/A converters, controlling digital data transfers, and setting the timer/counter circuitry. These programs should be used to become familiar with these functions.

Also included in your ADA2000 package is the ATLANTIS data acquisition software demo disk. ATLANTIS is a powerful software package written exclusively for Real Time Devices' A/D conversion boards. More information about this easy-to-use software is available from Real Time Devices, Inc.

Backing Up Your Disk

The demo disk provided with the ADA2000 is a double-sided format which can be read by all DOS versions 1.1 and above. Before using the software included with your board, make a backup copy of the disk. You may make as many backups as you need. To copy the original to any other DOS-formatted disk, insert the disk to be copied into drive A of your computer, and from DOS enter:

COPY A:*.* B: (or other destination drive specifier)

Initializing Your ADA2000

Before you can operate the ADA2000, it must be initialized. This step must be executed every time you start up, reset, or reboot the computer. This sets up PPI1 to properly communicate with the A/D converter circuitry. If the board is not initialized, it will not respond to the software commands and will probably lock up, requiring you to reboot your system.

As described earlier, the ADA2000 uses 28 consecutive address locations in the computer's I/O space. These address locations start with the base I/O address (BA) and go through BA + 1B (hex). Table 1-2 provides the ADA2000 I/O map, defining what function each of the 28 addresses controls. Recall that the base I/O address is factory-set at 300 hex. On the demo disk, the base I/O address is usually stored in the variable "board." Remember to use the correct base I/O address in the demo disk programs or your own programs. The demo disk explains how to change the base I/O address in the programs.

The ADA2000 is initialized by simply writing a control byte to the PPI1 control register mapped at the I/O location base address + 3 (hex). The control byte must conform to this general form:

1xxx x00x where x = don't care

This ensures that the eight I/O lines making up port B of PPI1, which are used to control the multiplexer and gain circuitry, are configured as outputs. The don't care (x) positions control the direction of the remaining 16 digital I/O lines available on PPI1. These lines can be configured as inputs, outputs, or in other more complex configurations.

For example, when the control byte bit pattern is:

100000000 (decimal 128)

the ADA2000 is initialized as follows:

```
out base_address+3,128
```

When this value is used to initialize the ADA2000, the eight port C lines of PPI1 will all be configured as outputs. You can transfer data to these lines with the command:

```
out base_address+2,data
```

If instead, the decimal value 137 (1000 1001) is used to initialize the ADA2000, the port C lines will be set up as inputs. You can input data from port C with the command:

```
data = inp(base_address+2)
```

Note that port A, bit 7 (PA7) of PPI1 is factory-set to monitor the end-of-convert (EOC) signal. PPI1 must be programmed so that port A is an input if you are going to monitor the EOC signal through PA7. The control byte must then conform to the general form of 1xx1 x00x, where the underlined 1 is the data bit which sets up port A as an input.

A functional description of the PPIs is contained in Chapter 2, "Functional Description," and hardware configurations are described in Chapter 3, "Jumper Settings." Information about how you can control the digital I/O lines is contained in Chapter 4, "Programming Your ADA2000," and is not covered here because of its complexity.

As mentioned earlier, the eight lines of port B on PPI1 are used to select the analog input channel and gain. The four LSBs, PB (for Port B) 0 through PB3, control the channel selection, and the four MSBs, PB4 through PB7, control the gain selection. The bit assignment of this port is:

MSBs	LSBs	
7 6 5 4	3 2 1 0	PPI Port B (Base Address +1)
gain select	channel select	
0000 = 1x	0000 = channel 1	
0001 = 2x	0001 = channel 2	
0010 = 4x	0010	
0100 = 8x	0011	
1000 = 16x	0100	
	0101	
	0110 .	
	0111 .	
	1000 .	
	1001	
	1010	
	1011	
	1100	
	1101	
	1110 = channel 15	
	1111 = channel 16	

After the ADA2000 is initialized, the port B register is loaded with the default setting of 0000 0000. This selects channel 1 as the input channel with a gain of 1. To change this value, for example, to a gain of 2x on channel 16, enter these commands:

BA + 1 (hex)	selects port B
0001 1111	sets gain to 2x and channel to 16

Recall that the board's default channel setting is eight differential channels. Therefore, only the channel select binary values for channels 1 through 8 apply. Channels 9 through 16 are used in the single-ended channel mode only.

Now your board is initialized and ready to operate. The following sections describe how to select the analog input channel, set the input gain, take an A/D reading, and control the D/A converter. Mastering these operations will allow you to effectively use your board for data acquisition applications.

Selecting an Analog Input Channel

After the ADA2000 has been initialized you can select the analog input channel. The analog input channel is selected by writing to PPI1 port B, mapped at I/O location base address (BA) + 1.

The input channel and the input gain can be set individually by setting only the four LSBs (channel select) or only the four MSBs (gain) of the eight-bit control word sent to PPI1 port B. Before you change either the input channel or the gain, you MUST preserve the current state of port B. Failure to do so will result in changing both the channel select and the gain when you intended to change only one of these two settings.

The general algorithm for setting the channel (changing just the four LSBs of the control word while preserving the four MSBs) is:

1. Read the current state of port B:
   current_state = inp(base_address+1)
2. Preserve the upper four bits since they contain gain data:
   current_state = current_state AND $F0
3. Logically OR the current_state with the desired channel number minus 1:
   current_state = current_state OR (channel - 1)
4. Write it back out to port B:
   out base_address+1,current_state

A BASIC program to select channel 2 is:

```
100 BASE_ADDRESS% = 768
110 CHANNEL% = 2
120 STATUS% = INP(BASE_ADDRESS% + 1)
130 STATUS% = STATUS% AND &HF0
140 STATUS% = STATUS% OR (CHANNEL% -1)
150 OUT BASE_ADDRESS% + 1,STATUS%
```

Setting the Input Gain

The gain is set by writing to the upper four bits of PPI1 port B at BA + 1. The bit pattern for each of the five gain values supported by the hardware are:

0000 = gain of 1
0001 = gain of 2
0010 = gain of 4
0100 = gain of 8
1000 = gain of 16

It is recommended that no other bit patterns be used when setting the gain.
The general algorithm for setting the gain is:

1. Read the current state of port B:
   current_state = inp(base_address+1)
2. Preserve the lower four bits since they contain channel information:
   current_state = current_state AND $0F
3. Logically OR the current_state with a bit pattern that activates the desired gain:
   current_state = current_state OR gain bit pattern:
   - 1x bit pattern = 0
   - 2x bit pattern = 16
   - 4x bit pattern = 32
   - 8x bit pattern = 64
   - 16x bit pattern = 128
4. Write the current_state back to port B:
   out base_address+1,current_state

A BASIC program to set a gain of 2 is:

```
100 BASE_ADDRESS% = 768
110 GAIN% = 2
120 STATUS% = INP(BASE_ADDRESS% + 1)
130 STATUS% = STATUS% AND &H0F
140 IF GAIN% = 1 GOTO 160
150 STATUS% = STATUS% OR (GAIN% * 8)
160 OUT BASE_ADDRESS% +1,STATUS%
```

Taking an A/D Reading

After you have selected an analog input channel and set the gain, you can take an A/D reading. It is important to note that once the gain and channel are set, they stay at those settings until you change them; that is, they are latched. You do not have to set the gain or channel every time you take a reading.

Each time an A/D conversion is completed, an end-of-convert (EOC) signal is generated to signify the end of the conversion. This signal can be used in a number of ways. One way is to use this line to monitor the A/D conversion status. Setting up the EOC signal to be monitored involves configuring bit 7 of PPI1 port A or port C as an input line and connecting the EOC signal to it. This procedure is detailed in Chapter 3, "Jumper Settings." The EOC signal is factory-set to be monitored through PA7 on header connector P6.

The general algorithm for taking an A/D reading is:

1. Start a 12-bit conversion by writing to base_address + 4 (or 6):

   ```
   out base_address+4,0
   ```

   (Note that the value you send is not important. The act of writing to this I/O location is the key to starting a conversion.)
2. Delay at least 20 microseconds or monitor PPI1 Port A or C, bit 7 for a transition. Polling permits the fastest data acquisition.
3. Read the least significant bit from base_address + 5 (or 7):

   ```
   lsb% = inp(base_address% +5)
   ```
4. Read the most significant bit from base_address + 4 (or 6):

   ```
   msb% = inp(base_address% +4)
   ```
5. Combine them into the 12-bit result by shifting the LSB four bits to the right. The MSB must also be weighted correctly:

   ```
   result% = (msb% * 16) + (lsb%/16)
   ```

For a 12-bit conversion, the A/D data read is left justified in a 16-bit word, with the least significant four bits equal to zero, as shown in Figure 1-6. Because of this, the two bytes of A/D data read must be scaled to obtain a valid A/D reading. Once it is calculated, the reading can be correlated to a voltage value by scaling it, in the case of bipolar input ranges (±5 or ±10 volts), and then multiplying by the appropriate bit weight, as shown in the table at the top of the following page:

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
DB12	DB11	DB10	DB9	DB8	DB7	DB6	DB5	DB4	DB3	DB2	DB1	0	0	0	0

Fig. 1-6 — A/D Conversion Word Format

Input Range	Scale Factor	Bit Weight
±5 volts	Subtract 2048	2.4414 mV
±10 volts	Subtract 2048	4.8828 mV
0 to +10 volts	None	2.4414 mV

For example, if the A/D reading is 1024 and the input range used is ±5 volts, the analog input voltage is calculated as follows:

(1024 - 2048) bits * 2.4414 mV/bit = -2.49999 volts.

For a ±10 volt input range, the voltage is calculated as follows:

(1024 - 2048) bits * 4.8828 mV/bit = -4.99999 volts.

For a 0 to +10 volt input range, no scaling is required and the voltage is calculated as follows:

1024 bits * 2.4414 mV/bit = 2.49999 volts.

The input voltage range and polarity are factory-set according to customer specifications when ordering the board. If, after receiving your board, you wish to change the input voltage, see Chapter 3, "Jumper Settings." Whenever the voltage polarity is changed (unipolar to bipolar or vice versa), the A/D converter should be recalibrated as described in Chapter 5, "Calibration Procedures."

Note that eight-bit A/D conversions can also be performed. This is accomplished by writing to I/O location BA + 5 (or 7). While an eight-bit conversion has a lower resolution than the 12-bit conversion, it is performed much more rapidly, in about 13 microseconds. A 12-bit conversion takes about 20 microseconds. Therefore, when speed is essential, you can use the eight-bit conversion capability.

Controlling the D/A Converter

The two analog output channels, channel AOUT1 and channel AOUT2, can be independently programmed by writing to internal registers of the AD7537 D/A converter. The outputs can be set to one of four possible output voltage ranges, two unipolar and two bipolar. These ranges are 0 to +5 volts, 0 to +10 volts, ±5 volts, or ±10 volts. The range of the full-scale output voltage is controlled by the factory-installed voltage reference at IC location U15. The voltage range is specified when ordering the board. REF-01 provides a +10-volt reference and REF-02 provides a +5-volt reference. If, after receiving your board, you wish to change the voltage reference for the analog outputs, you must change the IC in location U15. Replace the IC with PMI REF02 or equivalent to set up a +5 volt reference or PMI REF 01 to set up a +10 volt reference.

The analog output channels can be independently configured for unipolar or bipolar output ranges. Jumpers installed on header connector P10 select the range desired for each output. Both outputs are factory-set to the same polarity as that specified for the A/D inputs. Chapter 3, "Jumper Settings," details how to change these settings. Note that only one jumper should be installed for each channel. Whenever the voltage range or polarity is changed, the D/A converter should be recalibrated as described in Chapter 5, "Calibration Procedures."

Loading the D/A Converter Data

Each D/A channel has two eight-bit internal input registers which receive the data for the D/A conversion. The channels are programmed independently by writing data to these registers. The D/A converters used on the ADA2000 board have a resolution of 12 bits. Two write operations are required to load the 12-bit data field into these registers. One register loads the least significant byte of the data field and the other register loads the most significant byte of the data field. Each byte contains bits 0 through 7, with bit 0 being the least significant bit and bit 7 being the most significant bit in the byte. Data bits DB0 through DB7 are loaded into the least significant byte, and data bits DB8 through DB11 are loaded into bits 0 through 3 of the most significant byte. The setting of bits 4 through 7 of the most significant byte does not matter since they are not used. A sample Turbo Pascal program for generating a channel AOUT1 output is:

```
Begin
        board := $300
        Write('Data for channel AOUT1:');
        Read ln(a);
        amsb := (a div 256);
        alsb := (a - (amsb*256));
        Port[Board+$8] := alsb;
        Port[Board+$9] := amsb;
        Port[Board+$C] := 0;
end.
```

The I/O locations that control the D/A converter functions are listed below from Table 1-2.

Function	A4	A3	A2	A1	A0	R/W	BA + HEX
Program AOUT1 LSB	0	1	0	0	0	W	8
Program AOUT1 MSB	0	1	0	0	1	W	9
Program AOUT2 LSB	0	1	0	1	0	W	A
Program AOUT2 MSB	0	1	0	1	1	W	B
Convert /Update AOUT1/AOUT2	0	1	1	x	x	W	C, D, E, or F
Clear AOUT1/AOUT2	1	0	0	x	x	W	10, 11, 12, or 13

The input registers for each D/A converter are loaded by using the corresponding base address + hex values listed above. To start a D/A conversion, a write operation to I/O location base address + C, D, E, or F (select one of these locations) must be executed. It does not matter what is written; the act of writing to one of these four I/O locations will initiate a D/A conversion in both channels. To clear the outputs of both channels, simply write to I/O location base address + 10, 11, 12, or 13. Again, the act of writing to any one of these four locations will clear the outputs; the data written is not important. Note that these outputs are also cleared every time a hardware system reset occurs.

Output Voltage Range and Resolution

The voltage range and bit weight (resolution) of the analog outputs depend on the reference IC used and whether the channel is set up for unipolar or bipolar outputs. The reference IC can be 5 or 10 volts for both channels, depending on the IC type installed on the board. Each channel can be individually controlled to have a unipolar or bipolar output, depending on the setting of the jumpers on header connector P10. The reference voltage is customer-specified when ordering, and the output default setting for both channels is the same polarity as that specified for the A/D converter.

The possible ranges and their corresponding bit weights are:

Range	Bit Weight
0 to +4.9988 V	1.22 mV
0 to +9.9976 V	2.44 mV
-4.9976 to +5.0000 V	2.44 mV
-9.9951 to +10.0000 V	4.88 mV

The data written to each pair of D/A channel input registers represents a 12-bit digital value of the desired output voltage. When the output is unipolar, a data value of zero corresponds to zero volts, and a full-scale value (all ones) corresponds

to the positive full-scale voltage, either 4.9988 volts or 9.9976 volts. Intermediate voltage values are determined by multiplying the D/A data by the appropriate bit weight, 1.22 millivolts or 2.44 millivolts.

In bipolar operation, the direction of the voltage changes from positive to negative as the data value increases. A data value of zero corresponds to the positive full-scale output voltage, +5.0000 volts or +10.0000 volts. A full-scale value (all ones) corresponds to the negative full-scale output voltage, -4.9976 volts or -9.9951 volts. An algorithm for determining the bipolar output voltage is given by the following equation:

Analog output voltage = +FS voltage - (D/A value)(bit weight)

where:

+FS voltage is the positive full-scale voltage (+5 or +10 volts)

D/A value is the digital data converted by the D/A converter

Bit weight is either 2.44 mV or 4.88 mV.

The correlation of the D/A data values to the output voltages is summarized below:

	Analog Output			
	Unipolar		Bipolar	
D/A Data	+5 V	+10 V	±5 V	±10 V
0000 0000 0000	0	0	+5.0000	+10.0000
1000 0000 0000	+2.5000	+5.0000	0	0
1111 1111 1111	+4.9988	+9.9976	-4.9976	-9.9951

CHAPTER 2

FUNCTIONAL DESCRIPTION

This chapter describes the major functions of the ADA2000 interface board. Figure 2-1 shows a block diagram of the board. The functions discussed in the following sections are:

- Analog-to-digital conversion circuitry
- Digital-to-analog conversion circuitry
- Programmable peripheral interface 1 (PPI1)
- Programmable peripheral interface 2 (PPI2)
- Programmable interval timer (PIT) circuitry

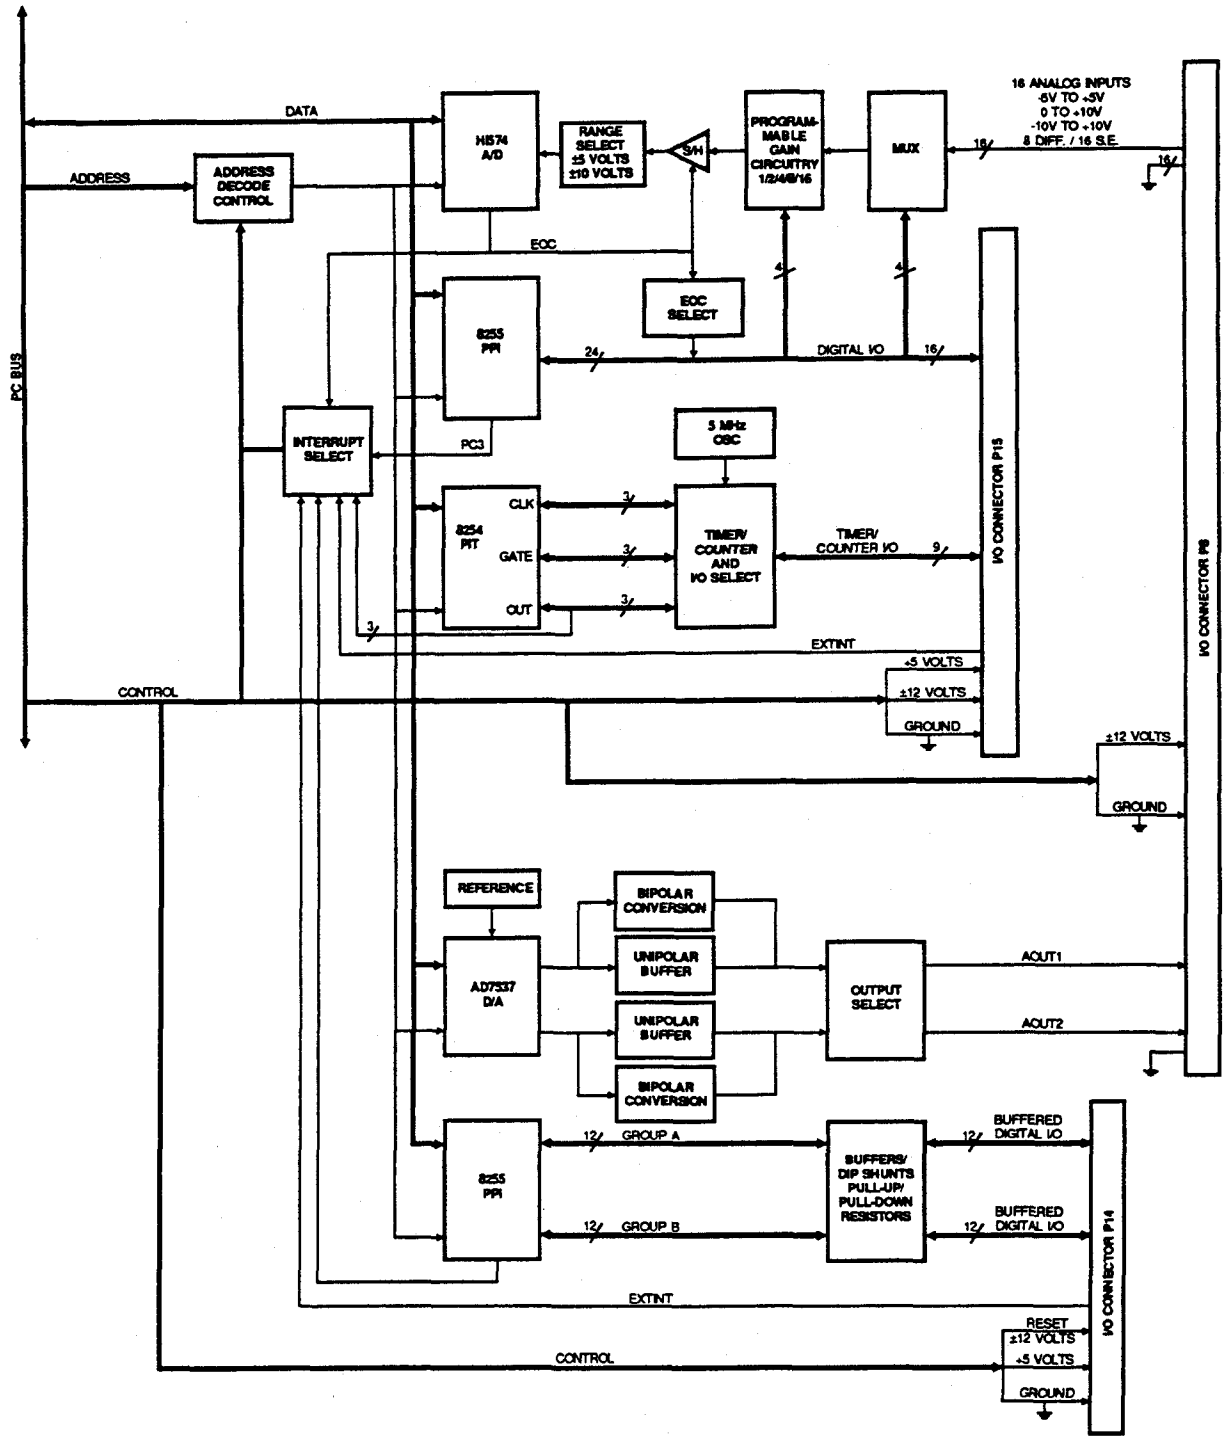

Fig. 2-1 — ADA2000 Functional Block Diagram

Analog-to-Digital Conversion Circuitry

One of the main functions of the ADA2000 interface board is to provide high-speed analog-to-digital conversion capability for data acquisition. The analog-to-digital (A/D) conversion circuitry receives inputs from eight differential or 16 single-ended analog channels, selects one active channel, and performs an analog-to-digital conversion of the voltage value read at that channel. The conversion throughput rate is typically 38 kHz.

Multiplexers

Two eight-bit analog multiplexers are used to connect either one of 16 single-ended or one of eight differential analog channels to the gain circuitry. The leftmost three switches on DIP switch S1 set up the multiplexer at IC location U9 to receive either single-ended or differential inputs. When these three switches are up, the multiplexer is configured for single-ended inputs, and when they are down, the multiplexer is configured for differential inputs. Note that these three switches are always set as a group to the same position (see "S1 Switch Settings," Chapter 3). A channel is selected through software control, by writing to Port B of PPI1, as described in Chapter 1.

Gain Control Circuitry

The programmable gain control circuitry can provide a gain factor of 1, 2, 4, 8, or 16. The gain selection is made by writing to Port B of PPI1, as described in Chapter 1. The gain factor is controlled by the setting of four analog switches. For a gain of 2, 4, 8, or 16, this write operation will close one of the four switches; for a gain factor of 1, all switches are open. Note that programming gain factors other than the five listed here is not recommended.

Sample and Hold Circuitry

A sample and hold (S/H) amplifier is used between the gain control circuitry output and the A/D input to ensure that dynamic analog signals are accurately digitized by the A/D converter. The .001 µF hold capacitor used in this circuit is a polystyrene type selected for its low dielectric absorption. Its low value minimizes the acquisition time (6 microseconds, typical), and minimizes hold step voltage and droop. The sample and hold time and rate are determined by the EOC signal generated by the A/D converter and fed back into the S/H circuit. When the EOC signal is high (logic 1), the amplifier samples the analog input; when the EOC signal is low (logic 0), the amplifier holds the input.

A/D Converter

The A/D converter is a high-speed 12-bit conversion IC which performs conversions in approximately 20 microseconds. Eight-bit conversions can also be performed when speed is more critical than resolution. An eight-bit conversion takes about 13 microseconds, allowing rapid conversions of dynamic analog inputs. The converter supports 10- or 20-volt analog input signals; however, it cannot support a 20-volt unipolar input range because its supply voltage in the ADA2000 application is only +12 volts. The analog input voltage ranges supported by the ADA2000 are listed in the specifications in Appendix A. Calibration circuitry is included for unipolar and bipolar calibration of the A/D converter. Calibration procedures are described in Chapter 5.

An 8- or 12-bit conversion is initiated by a write operation to the appropriate I/O address. Once a conversion is begun, the conversion status can be monitored by reading the A/D converter status (STS) signal which is output from the A/D converter IC and inverted before being made available to other circuitry on the board as the end-of-convert (EOC) signal. The EOC signal can be monitored by one of two digital input lines on PPI1, PA7 or PC7. Note that if either line is selected as the EOC monitor, a jumper must be installed for the selected line on P6 and that line must be configured as an input. The EOC signal is factory-set to be monitored through PA7 on P6. The EOC signal is low (logic 0) during a conversion. Figure 2-2 shows the EOC timing diagram. Also, the three-state A/D output buffers remain in a high-impedance state, and, therefore, data cannot be read. While a conversion is in progress, any transitions of the digital inputs which control the conversion will be ignored, so that the conversion cannot be prematurely terminated or restarted. Once the conversion is complete (EOC is now high, or logic 1), the A/D data can be read in two bytes, the MSB and the LSB, in any order. For a 12-bit conversion, the data is left-justified in a 16-bit word. In the case of an eight-bit conversion, the data is completely contained in the eight-bit MSB.

Refer to Chapter 1, "Taking an A/D Reading," and the demo disk for more information about using the A/D converter.

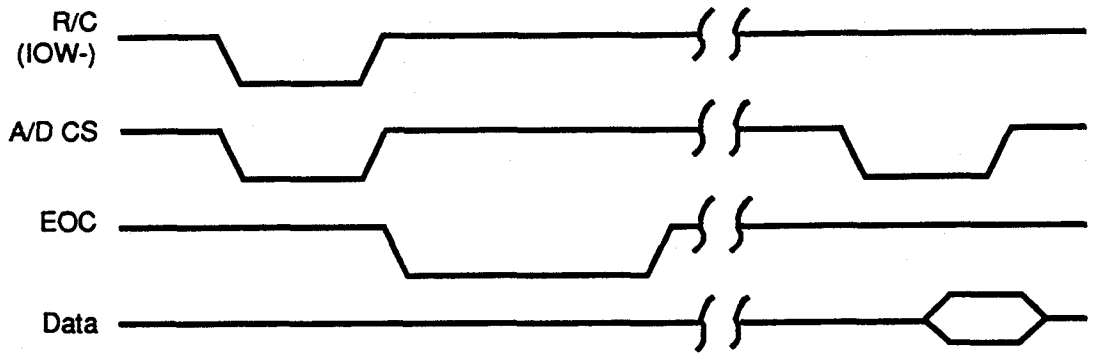

Fig. 2-2 —EOC Timing Diagram

Digital-to-Analog Conversion Circuitry

By providing a digital-to-analog (D/A) conversion capability, the ADA2000 interface board can output the digitized data as analog voltages to be displayed on strip charts, oscilloscopes, and other such devices. The data can be output slow or fast to support specific requirements. The D/A conversion circuitry receives 12-bit digital words (mapped into a right-justified two-byte data field) in its two independent channels and converts them to voltage outputs.

D/A Converter

The D/A converter consists of two closely matched 12-bit current output D/A converters in one monolithic IC to provide two analog output channels available at external I/O connector P8. By using dual converters in a single package, excellent thermal tracking and monotonicity across the 12-bit range are maintained. Both D/A converter channels are internally double-buffered and can be updated simultaneously to prevent voltage glitches on the outputs. Both converters support a 5- or 10-volt, unipolar or bipolar output voltage range, depending on the board configuration.

The two converters are identical 12-bit multiplying D/A converters, each with two pairs of input registers to allow simultaneous updating of both channels. A conversion is initiated by first loading data into the first pair of registers. This data is contained in two bytes (eight bits in the LSB and four bits in the MSB) which are written into the registers as described in Chapter 1, "Controlling the D/A Converter." After the input registers are loaded, an update command written to the D/A converter starts the actual conversion process. The output of the converter is a current value which accurately represents the 12-bit data word. Both channels can be cleared by writing to the appropriate I/O address location.

Output Amplifiers

The D/A converter's current output from each channel is fed through a high-speed precision monolithic operational amplifier where it is converted into a proportional voltage for output on external I/O connector P8. This voltage is either a unipolar or bipolar value, depending on the configuration of the board. Both op amps are contained in one IC package, providing excellent slew rate and tracking characteristics.

Programmable Peripheral Interfaces

Two 8255 programmable peripheral interfaces (PPI1 and PPI2) provide 40 TTL/CMOS digital I/O lines which can be configured in a number of ways to support user requirements. Each PPI has 24 digital I/O lines. These lines are grouped into three eight-bit ports, port A, port B, and port C. Port C is further subdivided into two four-bit ports, port C lower (PC0-PC3) and port C upper (PC4-PC7) in certain modes of operation. The PPI data sheet is included in Appendix C.

The PPI is capable of three modes of operation:

Mode 0 — Basic input/output. Provides simple input and output operations for each port. Data is written to or read from a specified port.

Mode 1 — Strobed input/output. Provides a means for transferring I/O data to or from port A or port B in conjunction with strobes or handshaking signals.

Mode 2 — Strobed bidirectional input/output. Provides a bidirectional means of communicating with another device on a single eight-bit bus. Handshaking signals are similar to mode 1. This mode applies to port A only.

In mode 0, all four ports (A, B, C lower, and C upper) are available as I/O lines. Sixteen configurations are possible in this mode, and any port can be configured as an input or an output. The outputs are latched, but the inputs are not latched.

In mode 1, the four ports are grouped into two groups. Each group contains one eight-bit data port (port A or port B) and one four-bit control/data port (port C lower or port C upper) which is used for control and status of the eight-bit port. The eight-bit data port in each group can be configured as an input or an output. Both inputs and outputs are latched.

In mode 2, port A is an eight-bit bidirectional bus and port C is a five-bit control port. Port B cannot be used in this mode, but is available for use in mode 0 or mode 1 while port A is in mode 2. Both inputs and outputs are latched.

Each PPI is configured by writing a control word to the appropriate I/O address location, as described in Chapter 4, "Programming Your ADA2000."

The control word can also be used to individually set or reset the port C bits. This feature allows any bit of port C to be set or reset without affecting the other port C bits. The data sheet included in Appendix C explains this feature.

The PPI can also be used to generate interrupts in mode 1 or mode 2 operation. In these modes, the interrupt enable (INTE) mask is used to enable the INTRA and INTRB interrupt signals. Note that the INTRB signal for PPI1 cannot be used since port B of this PPI is always configured as mode 0 output and is reserved for channel selection and gain control. Interrupt functions are further explained in the data sheet in Appendix C.

PPI1

PPI1 provides 16 digital I/O lines at external I/O connector P15 (see Table B-4, Appendix B). The lines available for digital I/O are port A and port C. The eight bits of port B are reserved for A/D channel selection and gain control, and cannot be configured for I/O use. Ports A and C can be configured in any of the three operating modes described above.

The ADA2000 board provides a header connector which can jumper the A/D converter end-of-convert (EOC) signal to a PPI1 bit where it can be monitored to provide A/D conversion status. The EOC signal can be jumpered to either PA7 (port A, bit 7) or PC7 (port C, bit 7). The default setting of the jumper is PA7. The port used to monitor the EOC signal must be configured as a mode 0 input port.

PPI2

PPI2 has some special circuitry on the ADA2000 board which enhances its capabilities. All 24 I/O lines available from PPI2 can be buffered or shunted, as well as pulled up or pulled down. These signals are provided at external I/O connector P14 (see Table B-3, Appendix B).

The buffer circuitry allows PPI2 to drive long cables with output signals and provides noise immunity for input signals. However, buffers cannot be used for some ports when operating in modes 1 or 2, or when dynamically changing the port direction through software control. On-board DIP switches are included to bypass the buffers. When these DIP switches are closed and their corresponding buffers are removed, then the I/O lines controlled by them are shunted. Each of the four ports, A, B, CL, or CH, is controlled by one DIP switch and buffer. The circumstances under which shunts are required in place of the buffers are detailed in Chapter 3, "Jumper Settings."

Resistor networks are also provided to allow any or all of the ports to be pulled up or pulled down. These networks can be used only when the associated ports are configured as inputs. Resistor network use is explained in Chapter 3, "Jumper Settings."

Programmable Interval Timer (PIT)

The programmable interval timer (PIT) can be configured for a variety of timing and counting functions. This versatile IC contains three independently clocked 16-bit timer/counter circuits, TC0, TC1, and TC2, which operate as down counters. These down counters can resolve time increments down to 125 nanoseconds. This circuit's most common application is to provide accurate time delays under software control. Upon command, the PIT can count out a programmed delay and interrupt the PC when it has finished its tasks. All three counter outputs are brought out to external I/O connector P15.

The three 16-bit timer/counters are each loaded by two one-byte write operations to the appropriate I/O location. The bytes are latched into a 16-bit internal count register, where they are stored until the count sequence starts. The countdown starts when the count register contents are transferred (in parallel) to the down counter. The timer/counter circuits can be programmed for binary or BCD countdowns.

A 5 MHz crystal oscillator on the ADA2000 can be used to clock any timer/counter circuit. Or, the timer/counter can be clocked by a source external to the board through external I/O connector P15. Rates of dc to 8 MHz can be used to clock the timer/counters.

Each timer/counter can be configured for one of six modes of operation. These modes are:

Mode 0 — Interrupt on end of count. The OUT signal changes from low to high when the countdown is completed.

Mode 1 — Re-triggerable one-shot. A low-level pulse triggered by the GT input is output on the OUT pin.

Mode 2 — Rate generator.

Mode 3 — Square wave generator.

Mode 4 — Software-triggered strobe.

Mode 5 — Hardware-triggered strobe (re-triggerable).

The timer/counter count modes, as well as the count type (binary or BCD), read/write mode, and counter/timer selection mode, are all part of the control word which is written to the PIT control register to initialize the circuit. When the PC is powered up, the timer/counter circuits are not defined until the appropriate control words are written to the circuits to program them for operation. Initialization is required only once after a power-up reset occurs. Detailed information about the PIT, including the control word format, is given in the data sheet in Appendix C

The three timer/counter circuits are independent. However, they can be cascaded for countdowns which are longer than one 16-bit field can support. For example, TC0's OUT signal can be connected to TC1's CK signal, and TC1's OUT signal can be connected to TC2's CK signal. When configured this way, the PIT can accommodate extremely long countdowns.

One of the three timer/counter outputs, TC0 OUT, TC1 OUT, or TC2 OUT, can also be used as a PC interrupt. These signals are brought out to board header connector P5 where one (and only one) can be selected for connection to any one IRQ channel, IRQ2 through IRQ7. Chapter 3, "Jumper Settings," and Chapter 4, "Programming Your ADA2000," describe these interrupts in more detail.

CHAPTER 3

JUMPER SETTINGS

This chapter describes the ADA2000 board settings you can control on DIP switches S1 through S4 and various header connectors. You can use this chapter to tailor your board's functions to your specific application before installing it in your computer, or to change the board's configuration as you learn more about its operation and special features. In this chapter, you will learn about each setting and how to set switches or install jumpers to achieve the desired operation of your board. Before changing any settings, you should have a functional knowledge of the circuit you are setting up (see Chapter 2). Remember that all of the settings described in this chapter have been factory-set, or, as in the case of the interrupt signals, are disabled. Therefore, you do not have to do any further set-up of the board in order for it to operate in your system as described in Chapter 1. The descriptions in this chapter allow you to change factory settings, or to tailor your board to take full advantage of its built-in versatility.

There are a DIP switch and several header connectors which allow you to control various board functions. In addition, there are buffers, three shunt DIP switches, and resistor networks associated with one of the programmable peripheral interfaces, PPI2, which enhance the capability of this device's digital I/O. These are shown in the board layout of Figure 3-1 and are presented as follows:

S1 — Analog Input Signal Type DIP Switch

P2 — Base I/O Address Header Connector

P3 — Programmable Interval Timer (PIT) I/O Header Connector

P4, P5, P7, and P11 — Interrupt Header Connectors

P6 — End-of-Convert (EOC) Monitor Header Connector

P9 — A/D Converter Voltage Range Header Connector

P10 — D/A Converter Voltage Range Header Connector

P12 — Digital I/O Header Connector

Digital I/O — Buffers, Shunts, and Resistor Networks

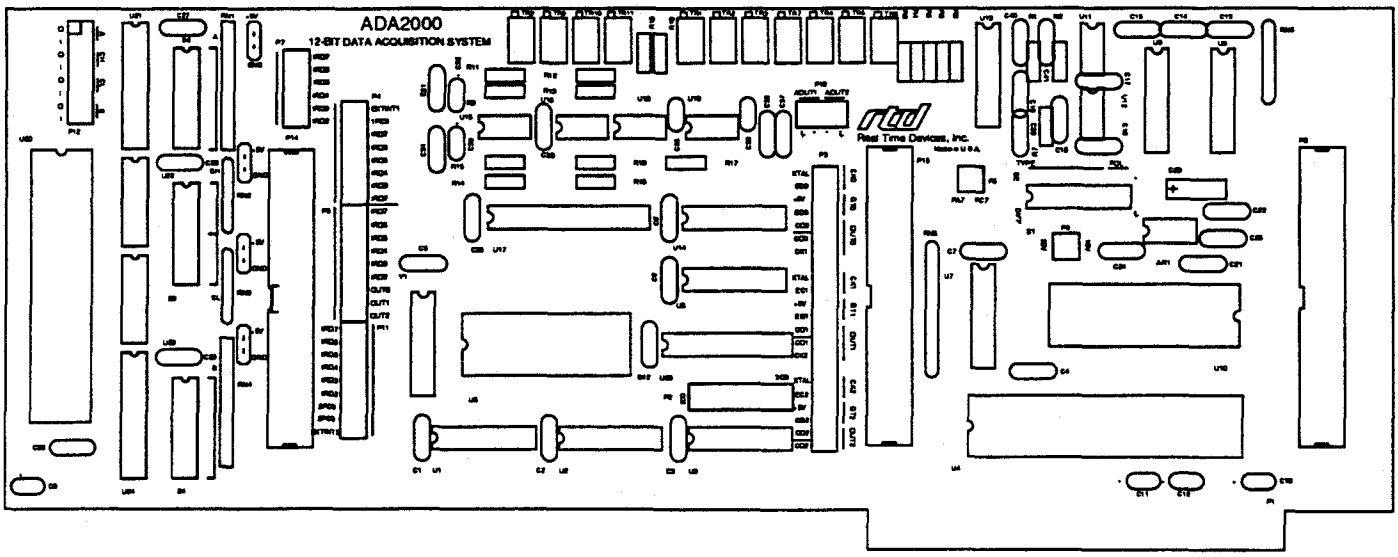

Fig. 3-1 — ADA2000 Board Layout

S1 — Analog Input Signal Type DIP Switch

DIP switch S1, shown in Figure 3-2, configures the multiplexers for single-ended or differential inputs and selects a unipolar or bipolar input voltage range. The first three switches on S1 operate as a group. When these are in the UP position, the multiplexers are configured for single-ended inputs; when they are in the DOWN position, the multiplexers are configured for differential inputs. Note that these three switches must all be set to the same position (UP or DOWN) for the multiplexers to function properly. The remaining switch, S1-4, controls the input voltage polarity. When this switch is in the UP position, the input voltage range is unipolar; when it is in the DOWN position, the voltage range is bipolar. This switch, coupled with the voltage range selection set on header connector P9, determines the analog input voltages supported by the A/D converter. Note that whenever the polarity is changed, the A/D converter circuitry should be calibrated as described in Chapter 5. The switch settings are clearly labeled on the board to eliminate errors when configuring S1.

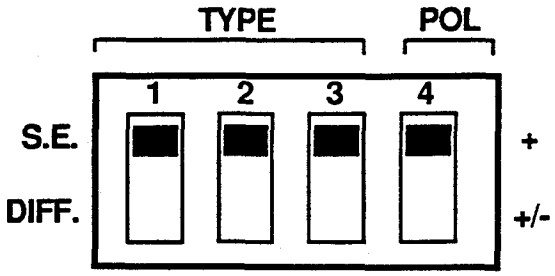

Fig. 3-2 — DIP Switch S1

P2 — Base I/O Address Header Connector

Header connector P2 controls the 28 computer I/O address locations used by the board. The base I/O address location is set by jumpering one of the eight positions on the P2 header connector. The base I/O address is factory-set to 300 hex (768 decimal), with the jumper installed across the pair of pins fifth from the left on the connector. The base I/O address setting is fully explained in Chapter 1, "Base I/O Address Setting," and is not repeated here. Note the importance of this setting with respect to the possibility of address contention with other devices in your computer. Be sure to examine this possibility if you experience board failure when you first attempt to operate the board in your computer.

P3 — Programmable Interval Timer (PIT) I/O Header Connector

Header connector P3, shown in Figure 3-3, controls the programmable interval timer (PIT). The PIT contains three independent 16-bit timer/counter circuits, as described in Chapter 2. Each timer/counter has three I/O signals associated with it: a clock, a gate, and an output. P3 can be configured in a number of ways to provide maximum versatility in applying this device to your particular application. Each timer/counter is factory-set for XTAL clock input, +5V gate input, and CO output. Figure 3-4 shows a block diagram of the PIT.

For ease in configuring this circuitry, the header connector is partitioned into three functional groups: TC0, TC1, and TC2, which correspond to timer/counter 0, timer/counter 1, and timer/counter 2, respectively. These designations also correspond to the manufacturer's designations, as shown on the data sheet included in Appendix C. Starting from the top of P3, the first group of pins on the right side are labeled CK0, GT0, and OUT0, the three I/O signals for TC0. The signals on the left side for TC0 are labeled XTAL, EC0, +5V, EG0, CO0, and $\overline{CO0}$ (this signal has a bar over top of the signal name on the board as the inverse designation). The groups of signals for TC1 and TC2 are identical to TC0, except that each has a CK input on the left side of the header connector. Note that each signal name on the right side of the connector (CK, GT, and OUT) spans a group of two or three pins. Each group can have only one jumper installed at any time. The following paragraphs describe how these signals can be used in the PIT circuit. An "x" is used in place of 0, 1, or 2 in the signal names whenever the application can be applied to any or all of the three timer/counter circuits.

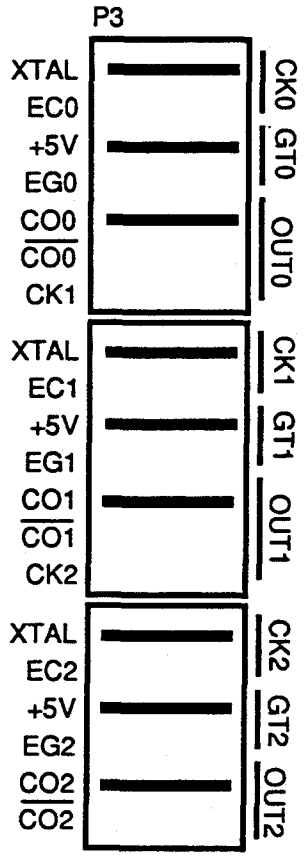

Fig. 3-3 — PIT I/O Header Connector P3

Counter Inputs:

XTAL — This input to all three timer/counter circuits is from the 5 MHz crystal oscillator, labeled Y1, located near the center of the board. By connecting XTAL to the CKx input on the right side of the connector with a jumper placed horizontally between the pins, the 5 MHz clock is applied to the timer/counter circuit. If required by your application, the XTAL frequency can be changed by installing a different crystal oscillator at Y1. Note, however, that the maximum frequency at which the PIT will operate is 8 MHz.

ECx — This input allows an external clock, other than the XTAL signal, to control the timing of the corresponding timer/counter circuit. This pin can be horizontally jumpered to the CKx input on the right side of the connector, in place of the XTAL source. The ECx signals are brought onto the board through external I/O connector P15 (see Table B-4 in Appendix B).

Gate Inputs:

+5V — This input, if connected to the GTx input by placing a jumper horizontally between the two pins, places the associated timer/counter circuit in an enabled state at all times.

EGx — This input can be horizontally jumpered to the GTx input on the right side of the connector to provide an external gate input instead of the +5 volts input. The EGx signals are brought onto the board through external I/O connector P15 (see Table B-4 in Appendix B).

Counter Outputs:

COx — This output can be horizontally jumpered to the corresponding OUT pin on the right side of the connector so that the clock output signal can be routed to external I/O connector P15 (see Table B-4 in Appendix B).

$\overline{\text{COx}}$ — This output can be horizontally jumpered to the corresponding OUT pin on the right side of the connector to provide the inverse of the clock output signal to external I/O connector P15 (see Table B-4 in Appendix B).

CKx — This input connects the output of one timer/counter to the clock input of the next timer/counter. CKx is provided for TC1 and TC2 only, and is connected to the output of the previous timer/counter (TC0 or TC1) by placing a jumper horizontally between the pins. These connections are used to cascade the timer/counters for longer time delays than are supported by a single timer/counter circuit.

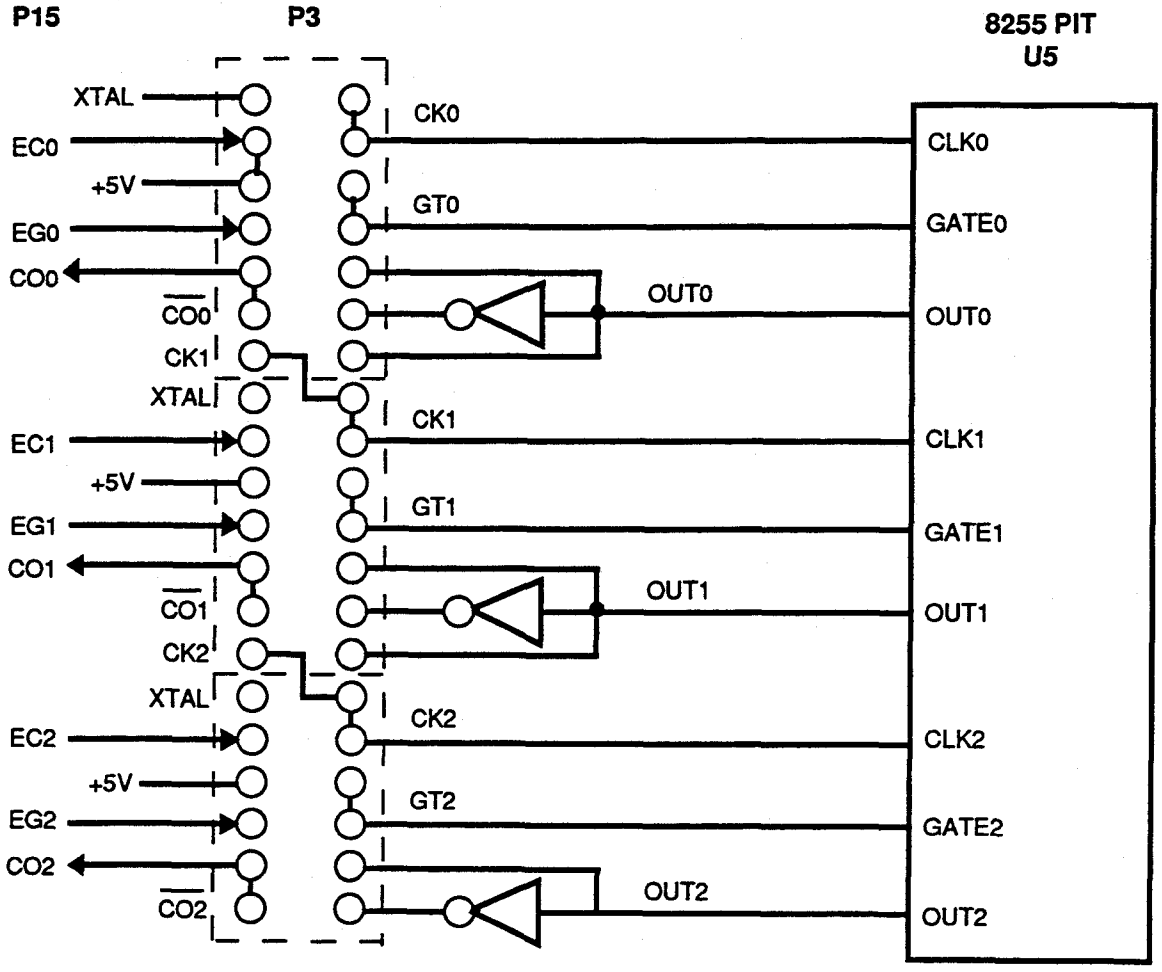

Fig. 3-4 — PIT Functional Block Diagram

P4, P5, P7, and P11 — Interrupt Header Connectors

Header connectors P4, P5, P7, and P11 are used to jumper various signals generated by the ADA2000 circuitry to the PC's interrupt channels. The interrupt channels available on the board are IRQ2 through IRQ7. Note that only one interrupt in the computer system can be connected to an interrupt channel at any given time.

Before attempting to use interrupts, you should be familiar with the procedure for initializing the interrupt vectors and the PC's interrupt controller, and setting up the interrupt handling routines. These procedures are beyond the scope of this manual, but must be understood to effectively use interrupts in you computer system.

Be careful to avoid contention when selecting the interrupt channels used, both with the signals on the ADA2000 as well as with other devices within your computer. To avoid contention, use the table inside the back cover of this manual to record the interrupt channels you use with the ADA2000 board.

It is also very important to note that the ADA2000 interrupt sources are TTL totem-pole (push/pull) type outputs; they are **not** open-collector. Therefore, do not attempt to connect one of these interrupts to any other interrupt output.

The following paragraphs describe the interrupts available on your ADA2000 board.

P4 — EXTINT1 and PPI1 INTRA Interrupts

Header connector P4 is used to select EXTINT1 or PPI1 INTRA for connection to one of the computer's interrupt channels IRQ2 through IRQ7. EXTINT1 is provided to accommodate an interrupt signal generated external to the ADA2000 and routed onto the board through external I/O connector P15 (see Table B-4 in Appendix B). PPI1 INTRA (labeled 1PC3 on the board) is generated by PPI1. This interrupt is generated during PPI mode 1 or mode 2 operation only. One of these two signals can be jumpered to one of the available computer interrupt channels IRQ2 through IRQ7 by first placing a jumper horizontally across the pins of the signal chosen and then placing a second jumper horizontally across the pins of the selected IRQ channel. Figure 3-5 shows header connector P4 with jumpers installed so that PPI1 INTRA is connected to IRQ2.

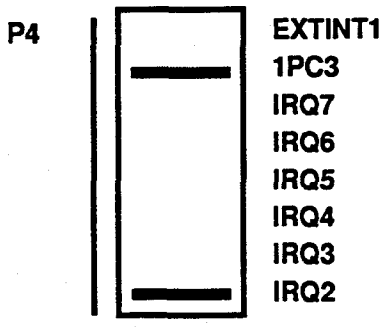

Fig. 3-5 — Interrupt Header Connector P4

P5 — PIT Output Interrupts

Header connector P5, shown in Figure 3-6, is used to jumper one of the three PIT outputs, OUT0, OUT1, or OUT2, to one of the computer's interrupt channels IRQ2 through IRQ7. As in the case of P4, two jumpers must be installed to connect a PIT output to an interrupt channel. First, install a jumper horizontally across the pins of the PIT output selected. Then install a second jumper across the pins of the interrupt channel selected. Figure 3-6 shows jumpers installed so that OUT2 is connected to IRQ3.

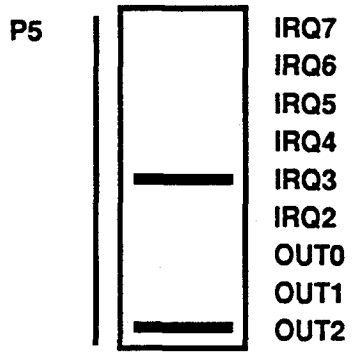

Fig. 3-6 — Interrupt Header Connector P5

P7 — A/D End-of-Convert (EOC) Interrupt

Header connector P7, shown in Figure 3-7, is used to jumper the A/D converter's end-of-convert (EOC) signal to one of the computer's interrupt channels IRQ2 through IRQ7. The EOC signal is connected to an IRQ channel by installing a single jumper horizontally across the pins of the IRQ channel selected. Figure 3-7 shows the EOC signal connected to IRQ4.

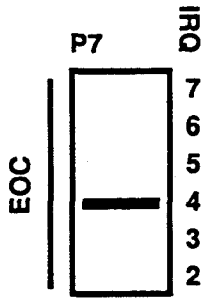

Fig. 3-7 — Interrupt Header Connector P7

P11 — EXTINT2 and PPI2 INTRA and INTRB Interrupts

Header connector P11 is used to select EXTINT2, PPI2 INTRA, or PPI2 INTRB for connection to one of the computer's interrupt channels IRQ2 through IRQ7. EXTINT2 is provided to accommodate an interrupt signal generated external to the ADA2000 and routed onto the board through external I/O connector P14 (see Table B-3 in Appendix B). PPI2 INTRA (labeled 2PC3 on the board) and PPI2 INTRB (labeled 2PC0 on the board) are generated by PPI2. One of these three signals can be jumpered to one of the available computer interrupt channels IRQ2 through IRQ7 by first placing a jumper horizontally across the pins of the signal chosen and then placing a second jumper horizontally across the pins of the selected IRQ channel. Figure 3-8 shows header connector P11 with jumpers installed so that PPI2 INTRB is connected to IRQ5.

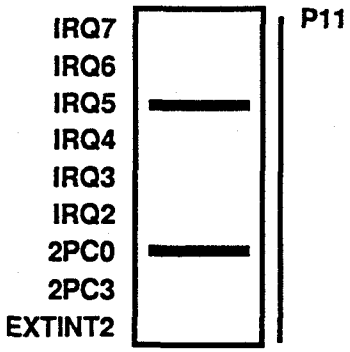

Fig. 3-8 — Interrupt Header Connector P11

P6 — End-of-Convert (EOC) Monitor Header Connector

As described above, the A/D converter end-of-convert (EOC) signal can be used to generate an interrupt. If this signal is not used as an interrupt, it can be used as a status monitor of the A/D conversion process. Header connector P6 provides two lines through which the EOC can be monitored, PPI1 PA7 or PPI1 PC7. One of these two digital I/O lines is selected for EOC monitoring by installing a jumper horizontally across the appropriate pair of pins. The digital I/O line selected, PA7 or PC7, must be configured as a mode 0 input (see Chapter 4, "Programming Your ADA2000"). Figure 3-9 shows P6 with a jumper installed in the factory-set position for EOC monitoring through PA7.

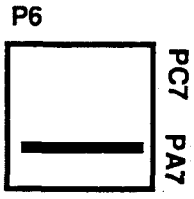

Fig. 3-9 — EOC Monitor Header Connector P6

P9 — A/D Converter Voltage Range Header Connector

Header connector P9, shown in Figure 3-10, is used to select the analog input voltage range of the A/D converter. A jumper is installed vertically across the pins marked 10V to support a 10-volt range (0 to 10 volts or -5 to +5 volts), or across the pins marked 20V to support a 20-volt range (-10 to +10 volts). The setting of this jumper, coupled with the setting of DIP switch S1-4 which selects a unipolar or a bipolar range, determines the input voltage range of the A/D converter. P9 is configured at the factory according to the customer's specifications for the input voltage range. The valid settings of P9 and S1-4 are summarized in the table below:

Range	P9 Setting	S1-4 Setting
-5 to +5 volts	10V (right)	DOWN (bipolar)
0 to +10 volts	10V (right	UP (unipolar)
-10 to +10 volts	20V (left)	DOWN (bipolar)

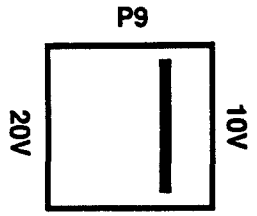

Fig. 3-10 — A/D Converter Voltage Range Header Connector P9

P10 — D/A Converter Voltage Range Header Connector

Header connector P10, shown in Figure 3-11, is used to select the output voltage polarity of each of the two D/A converter channels, AOUT1 and AOUT2. Each channel can be independently configured as a unipolar output (+) or a bipolar output (+/-). To select the polarity for each channel, install a jumper vertically across either the unipolar (+) pins or the bipolar (+/-) pins for the corresponding channel. Note that each channel must have one jumper installed in order to function properly. The outputs are factory-set to match the specified A/D input polarity. If you reconfigure the board for a different output range than that specified when the board was ordered, then you must recalibrate the D/A converter for the new range according to the instructions in Chapter 5.

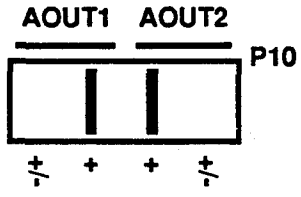

Fig. 3-11 — D/A Converter Voltage Range Header Connector P10

P12 — Digital I/O Header Connector

Header connector P12, shown in Figure 3-12, controls the direction of the buffered digital I/O lines of PPI2. As described in Chapter 2, the 24 PPI2 digital I/O lines are grouped into two eight-bit groups, port A (PA0 through PA7) and port B (PB0 through PB7), and two four-bit groups, port C low (PC0 through PC3) and port C high (PC4 through PC7). P12 is labeled A, B, CL (port C low), and CH (port C high) on the right side to correspond with the PPI's group structure. For each group of lines to be buffered, a jumper must be installed horizontally to select the direction that the buffer is to be configured: output (O) or input (I). To select the direction of the data at a port with respect to the PPI, position the

jumper horizontally beside the O or the I for each buffered port. The board is factory-set for buffered inputs on all 24 PPI2 digital I/O lines. If a particular port is shunted by using the port's DIP switch and removing the corresponding buffer, the jumper on P12 for that port should be removed. Chapter 2 and the section below about shunts, buffers, and resistor networks further explain the PPI's possible configurations.

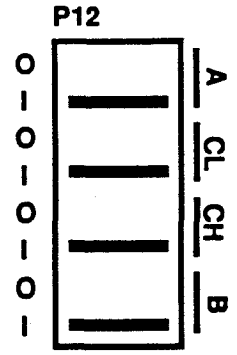

Fig. 3-12 — Digital I/O Header Connector P12

Digital I/O — Buffers, Shunts, and Resistor Networks (Figure 3-13)

Programmable peripheral interface PPI2 has buffers for the input or output lines when operated in mode 0. When operated in mode 1 or mode 2, certain PPI2 port C lines function as handshaking signals; some are outputs while others are inputs. Therefore, when operated in these modes, buffers cannot be used for some ports, and DIP switches S2, S3, and S4 allow these ports to be shunted. These switches are shown in Figure 3-13, which is a blowup of the PPI2 circuitry on the board.

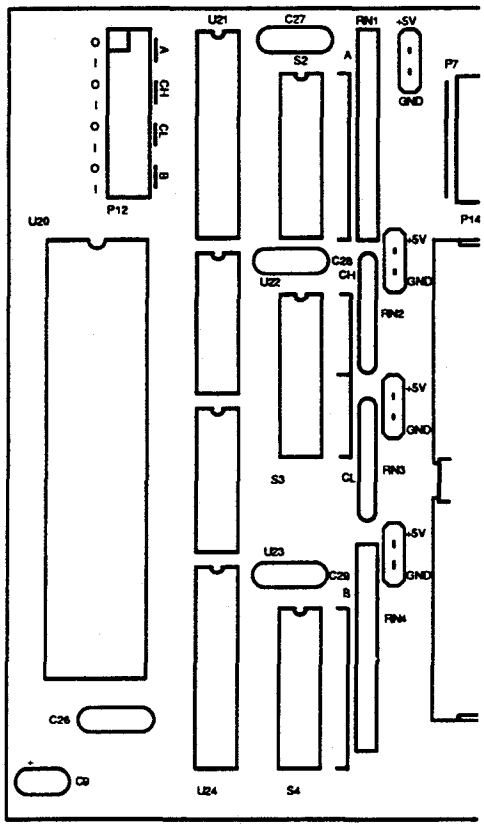

Fig. 3-13 — PPI2 Circuitry

Table 3-1 lists the component location and type of device used for buffering a port configured for mode 0 operation. The L and H listed for port C refer to the least significant (port C lower) and most significant (port C upper) four bits, respectively. Also listed in Table 3-1 are the DIP switch shunt locations for each of the ports. The numbers listed after DIP switch S3 are the switch numbers of the individual shunts used for the two four-bit groups of port C. For buffered I/Os, the associated DIP switches must be in the OFF or OPEN position, and for shunted I/Os, the associated DIP switches must be in the ON or CLOSED position. The corresponding buffer(s) should be removed from the board for all shunted I/Os.

Table 3-1 — PPI2 Buffers and Shunts

Port	Buffer Location	Buffer Device	DIP Switch Shunt
Port A	U21	74LS245	S2
Port B	U24	74LS245	S4
Port CL	U23	74LS243	S3, 5-8
Port CH	U22	74LS243	S3, 1-4

To buffer the input or output lines of a port, first be certain that the DIP switch for those lines has all of its switches set to the OPEN position. Then verify that the buffer is installed according to Table 3-1. Finally, make sure that the jumper on connector P12 is positioned to correspond with the direction that the buffer is to be configured.

The following sections describe the conditions for each mode when DIP switch shunts must be used in place of the PPI2 buffers.

Mode 0 Operation

If the direction of a port configured for mode 0 operation is changed dynamically through software, all of the switches on the corresponding DIP switch must be set to the CLOSED position and the buffer must be removed for that port. This is required because the buffers are hardware-configured for a particular direction using a jumper at P12. Therefore their direction cannot be changed through software.

After closing the DIP switches, carefully remove the corresponding buffer from the printed circuit board. Locate the PPI2 port that requires a DIP switch shunt in Table 3-1, then note the component labels of both the buffer and the associated DIP switch to verify that all settings are as desired.

In the event that shunts are required for only one half of port C, the switches on DIP switch S3 can be closed in groups of four. Determine their positions from Table 3-1, then close the appropriate group of switches. Only the buffer corresponding to the half of port C that requires shunts must be removed (refer to the table for its location).

Mode 1 Operation

When operating a group of lines in mode 1, some of the port C bits are used as handshaking signals. Therefore, the buffers that are installed at locations U22 and U23 must be removed and DIP switch S3 must have all switches closed to allow for the transmission of these signals in both directions: both to and from port C. Buffers may still be used for ports A and B, input or output.

As with mode 0 operation, buffers cannot be used for port A or port B if the mode 1 direction is changed dynamically under software control. In this case, the appropriate DIP switches must be closed for these ports and the corresponding buffers removed.

Mode 2 Operation

This mode also uses some of the port C bits for handshaking signals. In addition, port A serves as a bidirectional data bus. Therefore, the buffers for ports A and C must be removed and replaced by DIP switch shunts. Refer to Table 3-1 for the locations of the buffers and shunts for these ports. Buffers may still be used for port B.

Resistor Networks

The PPI2 circuitry also includes provisions for pull-up or pull-down resistor networks for each of the four ports (A, B, CL, and CH); however, resistors can only be used when the port is configured as an input port. The board provides IC locations RN1 through RN4 to accommodate SIP resistor networks for PPI2's digital I/O. RN1 and RN4 are 10-pin SIPs, and RN2 and RN3 are six-pin SIPs. Pin 1 is common to all resistors. Any value resistor can be used; however, for pull-up applications, resistors of 10 kilohms or higher are recommended.

Table 3-2 — PPI2 Resistor Networks

Port	Component Location	Number of Pins
Port A	RN1	10
Port B	RN4	10
Port CL	RN3	6
Port CH	RN2	6

When using resistor networks, you must first determine which lines you want to pull up or down and then install the resistor networks according to Table 3-2. The PPI2 port label is stamped on the printed circuit board next to its RN component location for ease in determining the correct resistor network socket.

After the resistor packs are installed, you must connect them into the circuit as pull-ups or pull-downs. Locate the three-hole pads on the board near the resistor packs. They are labeled +5V on one end and GND (for ground) on the other end. The middle hole is common. One three-hole pad is located next to each of the four SIP IC sockets. Figure 1-14 shows a blowup of the pads for Port A. To operate as pull-ups, solder a jumper wire between the common pin (middle pin of the three) and the +5V pin. For pull-downs, solder a jumper wire between the common pin (middle pin) and the GND pin.

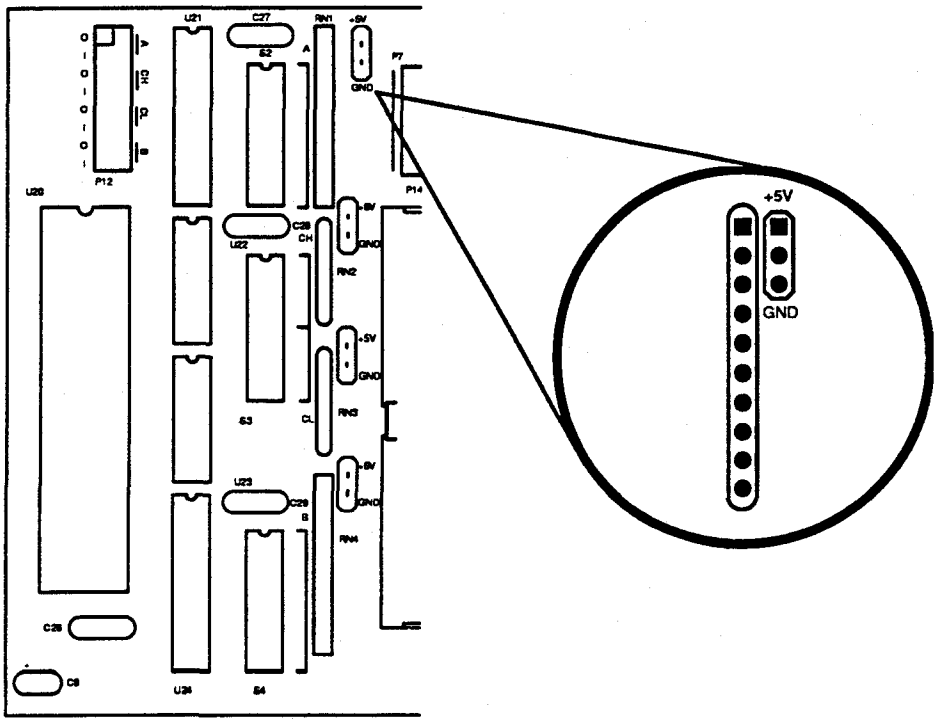

Fig. 3-14 — PPI2 Port A Pull-up/Pull-down Resistor Circuitry

CHAPTER 4

PROGRAMMING YOUR ADA2000

All communication with the ADA2000 interface board is done by strobing data to and from the board using the I/O reference instructions. Most operations involve the transfer of data to or from the components' internal registers. However, some operations require only that a particular I/O address be written to; the data written is irrelevant. These I/O locations are referenced to the ADA2000 base I/O address (BA) determined by the jumper setting of connector P2. Chapter 1 describes the base I/O address considerations and configuration.

The data collection and support functions controlled through software include the analog input channel selection and gain, control of the the A/D and D/A conversions, the programmable peripheral interfaces (PPI1 and PPI2), and the programmable interval timer. Because they are integral to the basic operation of the board, the analog input channel and gain selections, taking an A/D reading, and controlling the D/A converter are covered in Chapter 1. Digital I/O control through PPI1 and PPI2 and control of the programmable interval timer are more complex, and are described in this chapter.

The demonstration disk which accompanies your ADA2000 contain examples in Turbo C, Turbo Pascal, and BASIC.

Nearly all modern MS-DOS-based PC languages have I/O reference instructions. These are the instructions to control the data transfers to and from the I/O ports. Consult your programming language reference to find these instructions for your favorite language.

Selecting an Analog Input Channel

See this section in Chapter 1.

Setting the Input Gain

See this section in Chapter 1.

Taking an A/D Reading

See this section in Chapter 1.

Controlling the D/A Converter

See this section in Chapter 1.

Programming the Programmable Peripheral Interfaces

Each programmable peripheral interface (PPI) has three eight-bit parallel I/O ports, port A, port B, and port C, which can be configured for a variety of applications. PPI1 has 16 lines available at external I/O connector P15 for I/O use; the eight bits of port B (PB0-PB7) are used for channel selection and gain control and cannot be used for other functions. PPI2 has all 24 I/O lines available at external I/O connector P14.

The PPI ports can be operated in one of three modes. The mode of operation and the signal direction of each port (input or output) are controlled by an eight-bit control word written to an internal register. Two bits define the mode selection: mode 0, mode 1, or mode 2. Four bits configure the I/O direction: one bit to control PA0-PA7, one bit to control PB0-PB7, one bit to control PC0-PC3, and one bit to control PC4-PC7. Port C is divided into two four-bit fields so that it can provide status and control for ports A and B if desired in your application. The control word is defined in Figure 4-1.

Each PPI is configured by writing a control word to the PPI's internal control register. Upon power-up, all ports are configured as mode 0 inputs. PPI1 is written to during board initialization so that port B is set up as a mode 0 output to configure it for channel selection and gain control functions. Chapter 1, "Initializing Your ADA2000," describes this procedure.

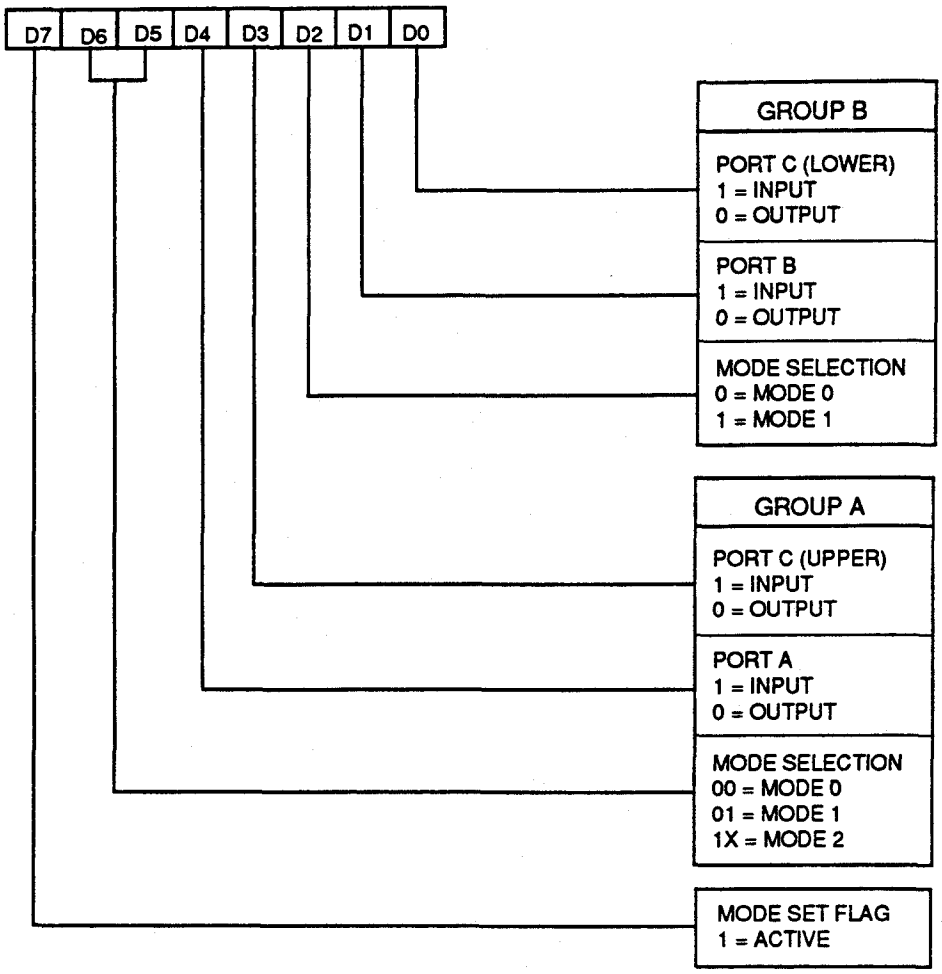

Fig. 4-1 — PPI Mode Definition Format

The I/O locations that control PPI1 and PPI2 are listed below from Table 1-2.

FUNCTION	A4	A3	A2	A1	A0	R/W	BA + HEX
PPI1							
Port A	0	0	0	0	0	R/W	0
Port B (Channel Sel & Gain)	0	0	0	0	1	W	1
Port C	0	0	0	1	0	R/W	2
PPI2							
Port A	1	1	0	0	0	R/W	18
Port B	1	1	0	0	1	R/W	19
Port C	1	1	0	1	0	R/W	1A
Control Word	1	1	0	1	1	W	1B

Because the PPI can be configured for a wide range of operating modes and programming requirements, it is heavily dependent on correctly understanding how to use the proper control byte to configure the PPI for your application. The demo disk includes example programs that show how to select the common operating modes. Reading the source code is highly recommended.

The following examples show how to configure PPI2 for the most common operating modes. PPI1 can be similarly configured by using its I/O locations in place of PPI2's locations, except that port B can never be configured as an input.

All lines digital input:

```
10 BASE_ADDRESS% = 768
20 CONTROL_BYTE% = &H9B
30 OUT BASE_ADDRESS% + 27,CONTROL_BYTE%
40 A_DATA% = INP(BASE_ADDRESS% + 24)
50 B_DATA% = INP(BASE_ADDRESS% + 25)
60 C_DATA% = INP(BASE_ADDRESS% + 26)
```

All lines digital output:

```
10 BASE_ADDRESS% =768
20 CONTROL_BYTE% = &H80
30 OUT BASE_ADDRESS% + 24,A_DATA%
40 OUT BASE_ADDRESS% + 25,B_DATA%
50 OUT BASE_ADDRESS% + 26,C_DATA%
```

For more information about the operation of the PPI, see the data sheet included in Appendix C.

Programming the Programmable Interval Timer

The programmable interval timer (PIT) can be configured for a variety of timing and counting functions. The PIT's versatility is supplemented by the use of header connector P3 for jumpering various I/O options. Chapter 3, "Jumper Settings," describes this connector.

The PIT consists of three independent 16-bit down counters. The counters are initialized for operation in any of six modes by writing data to the appropriate control word for each counter. Counter data is then written to or read from each of the counters by accessing three additional internal registers. The data is set up in a two-byte format, each byte serially accessible on the data bus. The I/O locations that control the PIT are listed below from Table 1-2.

PIT FUNCTION	A4	A3	A2	A1	A0	R/W	BA + HEX
Counter 0	1	0	1	0	0	R/W	14
Counter 1	1	0	1	0	1	R/W	15
Counter 2	1	0	1	1	0	R/W	16
Control Word	1	0	1	1	1	W	17

Your specific requirements will determine how the individual timer/counters should be configured. The data sheet included in Appendix C provides the information required to control the PIT.

The software included on the demo disk shows example programs for controlling some of the PIT operating modes.

The signals generated by the OUT pins for any of the counters may be connected to one of the PC's interrupt channels using jumpers installed at connector P5. Refer to the "Hardware Interrupts" section below for more information on using the OUT signals to generate interrupts.

Hardware Interrupts

Four jumper connectors, labeled P4, P5, P7 and P11, are provided on the ADA2000 to enable interrupts generated by the A/D converter, the PIT, the PPIs, and two external sources to the PC's interrupt channels IRQ2 through IRQ7. Chapter 3, "Jumper Settings," explains how these header connectors can be configured.

Before you attempt to use interrupts, be sure you are familiar with the procedure for initializing the interrupt vectors and the PC's interrupt controller, and setting up the interrupt handling routines.

A/D Converter End-of-Convert (EOC) Signal

The A/D converter EOC signal can be used to generate an interrupt to the PC. An interrupt will occur (through the selected interrupt channel) to indicate a conversion is complete approximately 20 microseconds after the conversion is initiated. The EOC signal is inverted before being applied to the interrupt channel. It makes a low-to-high transition at the completion of each conversion cycle, and remains high until another conversion is initiated. The timing of the EOC signal is shown in Figure 2-2, Chapter 2.

PPI Interrupts

The interrupts generated in PPI mode 1 and mode 2 operation can be jumpered to any of the PC interrupt channels IRQ2 through IRQ7. The timing of these interrupts is shown on the PPI data sheet included in Appendix C.

The PPI interrupts must be enabled by writing a "1" to the INTE mask bit of the particular PPI as described in the data sheet under "Interrupt Control Functions." The INTE mask bits are disabled during power-up reset and whenever the PPI mode is changed.

PIT Interrupts

One of the OUT0, OUT1, or OUT2 signals generated by the PIT can be jumpered to a PC interrupt channel using connector P5.

When using a PIT OUT signal as an interrupt, you must be very careful to ensure that the PC system's programmable interrupt controller (PIC) is properly configured to ignore interrupts on the selected interrupt channel immediately after power-up. This is necessary because the PIT must first be initialized to define the desired mode(s) of operation. Prior to initialization, the mode, count, and output of all counters are undefined. If the system interrupts are not disabled, the counter outputs may cause erratic system behavior.

CHAPTER 5

CALIBRATION PROCEDURES

This chapter contains calibration procedures for the A/D converter input voltage range, the A/D converter gain, and the D/A converter output voltage range. The offset and full-scale performance of the ADA2000 A/D and D/A converters are factory-calibrated according to the specifications that were given when your order was placed. The gain circuitry is also factory-calibrated before the board is shipped. The following procedure allows you to quickly verify the accuracy of these circuits. This procedure should be done approximately every six months, whenever inaccurate readings are suspected, or whenever the voltage ranges are changed.

Calibration is performed with a properly configured ADA2000 installed in the PC. Apply power to the computer and allow the ADA2000 circuitry to stabilize for 15 minutes.

Required Equipment

The following equipment is required for calibration:

- Precision Voltage Source: 0 to ±10 volts
- Digital Voltmeter: 5-1/2 digit
- 4" Jumper Wire
- Small Screwdriver (for trimpot adjustment)

Figure 5-1 shows the board layout. The trimpots referenced in the following procedures are grouped in the upper center area of the board.

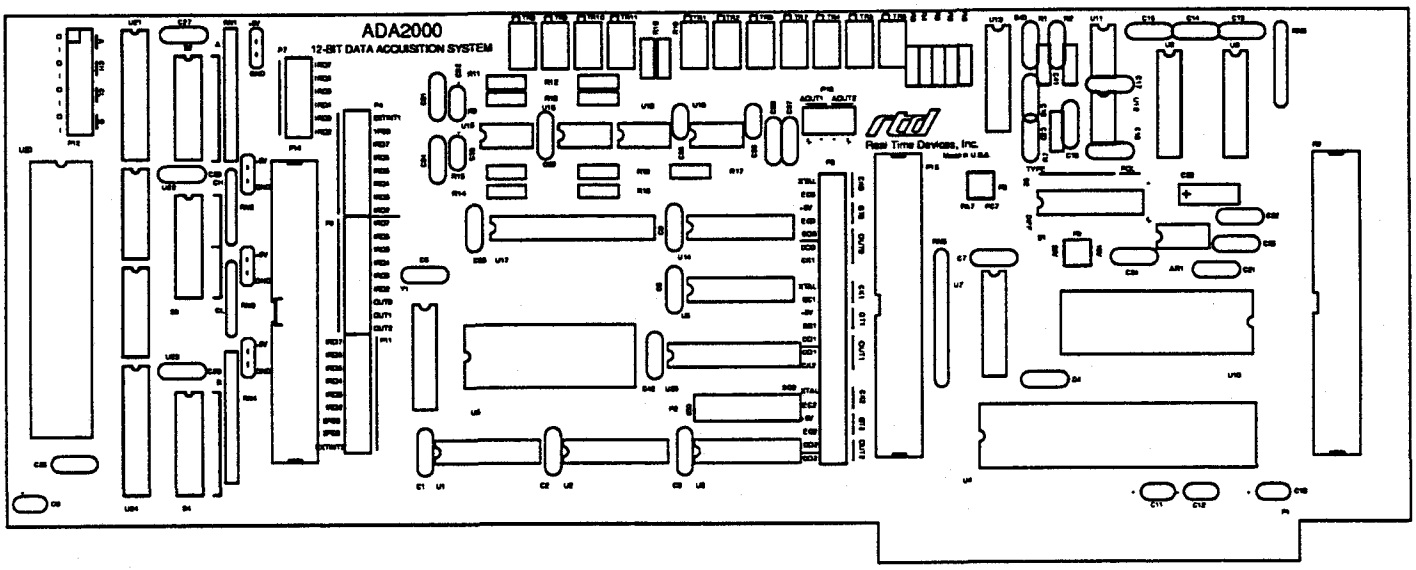

Fig. 5-1 — ADA2000 Board Layout

A/D Calibration

During this procedure, connections must be made to some of the analog inputs on external I/O connector P8, available at the rear panel of the computer. The pin assignments for this connector are given in Table B-2, Appendix B.

Two adjustments are necessary to completely calibrate the A/D converter for unipolar or bipolar operation. These affect the offset and full-scale performance of the ADA2000 circuitry. Both calibration steps are performed using trimpots TR5 and TR6 or TR6 and TR7. Trimpot TR5 or TR7 is used to zero the offset error of the A/D converter and trimpot TR6 is used for full-scale adjustment. In the following procedure, use analog input channel 1 and set it for a gain of 1. This is accomplished by writing all zeroes to I/O address location BA + 1. Be certain that position 4 of switch S1 is set for the desired polarity and the jumper on connector P9 is set for 10V.

Unipolar Calibration

Two adjustments are necessary to calibrate the A/D converter for the unipolar voltage range of 0 to +10 volts, one for offset and one for full scale. To adjust the offset, a very low analog input voltage, shown under the "Offset" heading in the following table, is connected to the channel 1 input of the multiplexer (P8-1). The ground reference of this signal should be connected to P8-2. While continuously displaying 12-bit A/D conversions, adjust TR7 until the A/D data flickers between the two values listed in the table under "Offset."

After the offset adjustment is made, then TR6 is used to adjust the full-scale value. While the full-scale input voltage listed in the table is not the actual full-scale voltage for an ideal 0 to +10 volt range, it is the maximum voltage at which the A/D conversion is guaranteed to be linear. Any value above this voltage may not be linear and thus may adversely affect calibration. After connecting the full-scale voltage listed in the table to the channel 1 input, adjust TR6 until the data flickers between the two values in the table under "Full Scale."

Unipolar Calibration (0 to +10 volts range)		
	Offset (TR7)	**Full Scale (TR6)**
Input Voltage	+1.22070 millivolts	+9.49829 volts
A/D Data	0000 0000 0000 0000 0000 0001	1111 0011 0010 1111 0011 0011

Bipolar Calibration

Whether you are selecting the bipolar input voltage range of -5 to +5 volts or -10 to +10 volts, the following calibration procedure can only be performed with the board configured for a -5 to +5 volt input voltage range. This means that the jumper on header connector P9 must be installed across the 10V pins. If you are using the -10 to +10 volt range, reposition the jumper on P9 across the 20V pins **after** you perform the calibration procedures below.

Two adjustments are necessary to calibrate the A/D converter for bipolar voltage ranges, one for offset and one for full scale. To adjust the offset, connect the voltage shown under the "Offset" heading in the table below to the channel 1 input of the multiplexer. While continuously displaying 12-bit A/D conversions, adjust TR5 until the data flickers between the two values listed in the table under "Offset." Next, connect the full-scale voltage listed in the table to the channel 1 input and adjust TR6 until the data flickers between the two values in the table under "Full Scale."

Bipolar Calibration (-5 to +5 volts or -10 to +10 volts range)		
	Offset (TR5)	**Full Scale (TR6)**
Input Voltage	-4.99878 volts	+4.99634 volts
A/D Data	0000 0000 0000 0000 0000 0001	1111 1111 1110 1111 1111 1111

Table 5-1 provides a reference for the ideal input voltage for the A/D converter for each bit weight in each voltage range. This table shows the ideal full-scale (all ones) value in the first line and decrements by one bit weight each line thereafter. Note that these values are for 12-bit A/D conversions, and are not valid when using the converter to perform more rapid eight-bit conversions. Note that the voltage values in the table are in millivolts.

Table 5-1 — A/D Converter Bit Weights			
	Ideal Input Voltage (millivolts)		
A/D Bit Weight	±5 Volts	±10 Volts	0 to +10 Volts
4095 (Full-Scale)	+4997.6	+9995.1	+9997.6
2048	0000.0	0000.0	+5000.0
1024	-2500.0	-5000.0	+2500.0
512	-3750.0	-7500.0	+1250.0
256	-4375.0	-8750.0	+625.00
128	-4687.5	-9375.0	+312.50
64	-4843.8	-9687.5	+156.250
32	-4921.9	-9843.8	+78.125
16	-4960.9	-9921.9	+39.063
8	-4980.5	-9960.9	+19.5313
4	-4990.2	-9980.5	+9.7656
2	-4995.1	-9990.2	+4.8828
1	-4997.6	-9995.1	+2.4414
0	-5000.0	-10000.0	0.0000

Gain Circuitry Calibration

Four trimpots, TR1 through TR4, are used to adjust the gain circuitry, one for each of the gains 2, 4, 8, and 16. To calibrate this circuitry, apply an input voltage of +39.063 millivolts to the input of channel 1. Next, by writing the correct word to the BA +1 I/O location, set the gain to 2 and adjust trimpot TR1 to obtain the 12-bit A/D converter output for your board's voltage range, as listed in Table 5-2. Then, repeat this procedure for each of the remaining three gain settings, adjusting the appropriate trimpot until achieving the correct value listed in the table.

Table 5-2 — A/D Converter Readings for Gain Calibration				
		Input Voltage Range		
Gain	Trimpot	±5 Volts	±10 Volts	0 to +10 Volts
2	TR1	1000 0010 0000	1000 0001 0000	0000 0010 0000
4	TR2	1000 0100 0000	1000 0010 0000	0000 0100 0000
8	TR3	1000 1000 0000	1000 0100 0000	0000 1000 0000
16	TR4	1001 0000 0000	1000 1000 0000	0001 0000 0000

D/A Calibration

The D/A converter can be used in either a unipolar or a bipolar configuration. Each has a different calibration procedure. Both D/A converter channels are factory calibrated for outputs which are set to match the specified A/D input polarity. If you are verifying unipolar output accuracy, follow the unipolar calibration procedure below. If you have bipolar outputs, follow the bipolar calibration procedure below.

Unipolar Calibration

Two adjustments are necessary to calibrate the D/A converter for full-scale unipolar operation, one for each of the two converter channels. This procedure uses trimpots TR8 and TR9 to make the adjustments.

The full-scale adjustment calibrates the reference voltage used by the D/A converter to compensate for the analog outputs. Calibration is accomplished by monitoring the output voltage of each channel at external I/O connector P8 and adjusting the appropriate trimpot. The analog output, its P8 pin assignment, and its associated trimpot are:

Output	Trimpot	P8 Pin Assignment
AOUT1	TR9	33 (SIGNAL), 34 (GND)
AOUT2	TR8	35 (SIGNAL), 36 (GND)

Program the D/A converter to output a full-scale voltage by writing XFFF to base I/O address locations BA + 8 and BA + 9 for AOUT1, and BA + A and BA + B for AOUT2. Use the digital voltmeter to monitor the output voltage present between the appropriate P8 signal and ground pins. Using Table 5-3, adjust the appropriate trimpot until the voltage equals the full-scale voltage in Table 5-3 as measured by the voltmeter.

Table 5-3 lists the maximum D/A unipolar output voltage for each bit weight in a 12-bit conversion for +5- and +10-volt references. Note that the voltage values in the table are in millivolts.

Table 5-3 — D/A Converter Bit Weights (Unipolar)

D/A Bit Weight	Ideal Output Voltage (millivolts)	
	0 to +5 Volts	0 to +10 Volts
4095 (full-scale output)	4998.8	9997.6
2048	2500.0	5000.0
1024	1250.0	2500.0
512	625.00	1250.0
256	312.50	625.00
128	156.250	312.50
64	78.125	156.250
32	39.063	78.125
16	19.5313	39.063
8	9.7656	19.5313
4	4.8828	9.7656
2	2.4414	4.8828
1	1.2207	2.4414
0	0.0000	0.0000

Bipolar Calibration

Calibration of the D/A outputs when configured for bipolar operation involves both a mid-scale adjustment and a full-scale adjustment for each output channel. The trimpots associated with each adjustment and the analog output P8 pin assignments for measuring the output voltage are:

Output	Mid-Scale Trimpot	Full-Scale Trimpot	P8 Pin Assignment
AOUT1	TR9	TR10	33 (SIGNAL), 34 (GND)
AOUT2	TR8	TR11	35 (SIGNAL), 36 (GND)

Program the D/A converter to output a mid-scale voltage by writing X800 to base I/O address locations BA + 8 and BA + 9 for AOUT1, and BA + A and BA + B for AOUT2. Use the digital voltmeter to monitor the output voltage present between the appropriate P8 signal and ground pins. Adjust the appropriate trimpot so that the output voltage is zero volts.

Next, calibrate the full-scale voltage output. For full-scale calibration, program the D/A converter to output a full-scale voltage by writing XFFF to base I/O address locations BA + 8 and BA + 9 for AOUT1, and BA + A and BA + B for AOUT2. Use the digital voltmeter to monitor the output voltage present between the appropriate P8 signal and ground pins. Adjust the appropriate trimpot until the voltage equals the full-scale voltage in Table 5-4 as measured by the voltmeter. Table 5-4 lists the maximum D/A bipolar output voltage for each bit weight in a 12-bit conversion for +5- and +10-volt references. Note that the voltage values in the table are in millivolts.

Table 5-4 — D/A Converter Bit Weights (Bipolar)		
	Ideal Output Voltage (millivolts)	
D/A Bit Weight	±5 Volts	±10 Volts
4095 (full-scale output)	-4997.5	-9995.1
2048	0000.0	0000.0
1024	+2500.0	+5000.0
512	+3750.0	+7500.0
256	+4375.0	+8750.0
128	+4687.5	+9375.0
64	+4843.8	+9687.5
32	+4921.9	+9843.8
16	+4960.9	+9921.9
8	+4980.5	+9960.9
4	+4990.2	+9980.5
2	+4995.1	+9990.2
1	+4997.6	+9995.1
0	+5000.0	+10000.0

APPENDIX A

ADA2000 SPECIFICATIONS

ADA2000 SPECIFICATIONS

(Typical at 25°C)

Interface:

IBM PC/XT/AT compatible
Jumper-selectable base address, I/O mapped
Jumper-selectable interrupts

Analog Inputs:

8 differential or 16 single-ended inputs, switch-selectable
Input impedance, each channel ..... >10 megohms
Gains, software selectable ..... 1, 2, 4, 8, or 16
Gain error ..... 0.5% typ, 1% max
Input options: 10-volt range* (Option 1) ..... Bipolar ±5V
Guaranteed Linearity ..... ±5V
10-volt range* (Option 2) ..... Unipolar 0 to +10V
Guaranteed Linearity ..... 0 to +9.5V
20-volt range* (Option 3) ..... Bipolar ±10 V
Guaranteed Linearity ..... ±9.5V
Range ..... Jumper-selectable
Polarity ..... Switch-selectable
Settling time ..... 3 µsec max
Common mode input voltage ..... ±10V
Overvoltage protection ..... ±35 Vdc
*Erratic readings can occur beyond specified input voltage ranges.

A/D Converter:

Type ..... Successive approximation
Resolution: 10-volt range ..... 12 bits (2.44 mV/bit)
20-volt range ..... 12 bits (4.88 mV/bit)
Chip-selectable conversion speed: Option 0 .... 20 µsec typ, 25 µsec max
Option 1 .... 12 µsec typ, 15 µsec max
Option 2 .... 8 µsec typ, 9 µsec max
Linearity ..... ±1 bit typ
Sample-and-hold acquisition time ..... 6 µsec max
Throughput ..... 38 kHz

Counter/Timer:

Three 16-bit, 8 MHz down counters

Digital I/O Lines:

40 TTL/CMOS-compatible (24 buffered, 16 unbuffered)

D/A Converter:

Analog outputs 2
Resolution ..... 12 bits
Relative accuracy ..... ±1 bit max
Full-scale accuracy ..... ±3 bits max
Non-linearity ..... ±1 bit max
Channel-to-channel isolation ..... 84 dB typ

Analog Output:

Chip-selectable output range: Option 1 .... 0 to +5V;
jumper-selectable to ±5V
Option 2 .... 0 to +10V;
jumper-selectable to ±10V
Settling time, to 0.01% FSR ..... 1.8 µsec typ, -3.3 µsec max
Zero error ..... ±1/2 bit typ
Crosstalk ..... 90 dB typ
Output current, max ..... 10 mA

Miscellaneous I/Os:	±12V, +5V, PC bus-sourced Ground, PC bus-sourced Two external interrupt inputs Reset output
Power Requirements:	+5 Volts ..... 260 mA +12 Volts ..... 30 mA -12 Volts ..... 35 mA
I/O Connectors:	Three 40-pin box headers (one dedicated to analog signals only) All 120 signals exit through one rear panel slot in the PC
Environmental:	Operating temperature ..... 0 to +70°C Storage temperature ..... -40 to +85°C Humidity ..... 0 to 90% non-condensing
Size:	Height ..... 3.875" (99 mm) Width ..... 10.40" (264 mm)

APPENDIX B

CONNECTOR PIN ASSIGNMENTS

CONNECTOR PIN ASSIGNMENTS

Table B-1—Mating External I/O Connectors for P8, P14, and P15		
Connector No.	**Manufacturer**	**Part Number**
P8 P14 P15	3M Robinson Nugent Mil C-83503	3417-7040 IDS-C40PK-C-SR-TG M83503/7-09

Table B-2—P8 Connector Pin Assignments			
Pin No.	**Signal Name** DIFF / SE	**Pin No.**	**Signal Name**
1	AIN1+ / AIN1	2	GND
3	AIN1- / AIN9	4	GND
5	AIN2+ / AIN2	6	GND
7	AIN2- / AIN10	8	GND
9	AIN3+ / AIN3	10	GND
11	AIN3- / AIN11	12	GND
13	AIN4+ / AIN4	14	GND
15	AIN4- / AIN12	16	GND
17	AIN5+ / AIN5	18	GND
19	AIN5- / AIN13	20	GND
21	AIN6+ / AIN6	22	GND
23	AIN6- / AIN14	24	GND
25	AIN7+ / AIN7	26	GND
27	AIN7- / AIN15	28	GND
29	AIN8+ / AIN8	30	GND
31	AIN8- / AIN16	32	GND
33	AOUT1	34	GND
35	AOUT2	36	GND
37	+12 VOLTS	38	GND
39	-12 VOLTS	40	GND

Table B-3—P14 Connector Pin Assignments			
Pin No.	**Signal Name**	**Pin No.**	**Signal Name**
1	GND	2	+5 VOLTS
3	+5 VOLTS	4	GND
5	GND	6	GND
7	GND	8	GND
9	GND	10	GND
11	EXTINT2	12	GND
13	2PA7	14	2PA6
15	2PA5	16	2PA4
17	2PA3	18	2PA2
19	2PA1	20	2PA0
21	2PC7	22	2PC6
23	2PC5	24	2PC4
25	2PC3	26	2PC2
27	2PC1	28	2PC0
29	2PB7	30	2PB6
31	2PB5	32	2PB4
33	2PB3	34	2PB2
35	2PB1	36	2PB0
37	+12 VOLTS	38	RESET DRV
39	-12 VOLTS	40	GND

Table B-4—P15 Connector Pin Assignments			
Pin No.	**Signal Name**	**Pin No.**	**Signal Name**
1	GND	2	EXTINT1
3	1PA7	4	1PA6
5	1PA5	6	1PA4
7	1PA3	8	1PA2
9	1PA1	10	1PA0
11	GND	12	GND
13	1PC7	14	1PC6
15	1PC5	16	1PC4
17	1PC3	18	1PC2
19	1PC1	20	1PC0
21	GND	22	GND
23	EXTCLK0	24	EXTGATE0
25	CLKOUT0 / CLKOUT0-	26	GND
27	EXTCLK1	28	EXTGATE1
29	CLKOUT1 / CLKOUT1-	30	GND
31	EXTCLK2	32	EXTGATE2
33	CLKOUT2 / CLKOUT2-	34	GND
35	+5 VOLTS	36	+5 VOLTS
37	GND	38	GND
39	+12 VOLTS	40	-12 VOLTS

APPENDIX C

COMPONENT DATA SHEETS

Intel 82C54 Programmable Interval Timer
Data Sheet Reprint

82C54
CHMOS PROGRAMMABLE INTERVAL TIMER

- **Compatible with all Intel and most other microprocessors**
- **High Speed, "Zero Wait State" Operation with 8 MHz 8086/88 and 80186/188**
- **Handles Inputs from DC to 8 MHz — 10 MHz for 82C54-2**
- **Available in EXPRESS**
  - **Standard Temperature Range**
  - **Extended Temperature Range**
- **Three independent 16-bit counters**
- **Low Power CHMOS**
  - **I_{CC} = 10 mA @ 8 MHz Count frequency**
- **Completely TTL Compatible**
- **Six Programmable Counter Modes**
- **Binary or BCD counting**
- **Status Read Back Command**
- **Available in 24-Pin DIP and 28-Pin PLCC**

The Intel 82C54 is a high-performance, CHMOS version of the industry standard 8254 counter/timer which is designed to solve the timing control problems common in microcomputer system design. It provides three independent 16-bit counters, each capable of handling clock inputs up to 10 MHz. All modes are software programmable. The 82C54 is pin compatible with the HMOS 8254, and is a superset of the 8253.

Six programmable timer modes allow the 82C54 to be used as an event counter, elapsed time indicator, programmable one-shot, and in many other applications.

The 82C54 is fabricated on Intel's advanced CHMOS III technology which provides low power consumption with performance equal to or greater than the equivalent HMOS product. The 82C54 is available in 24-pin DIP and 28-pin plastic leaded chip carrier (PLCC) packages.

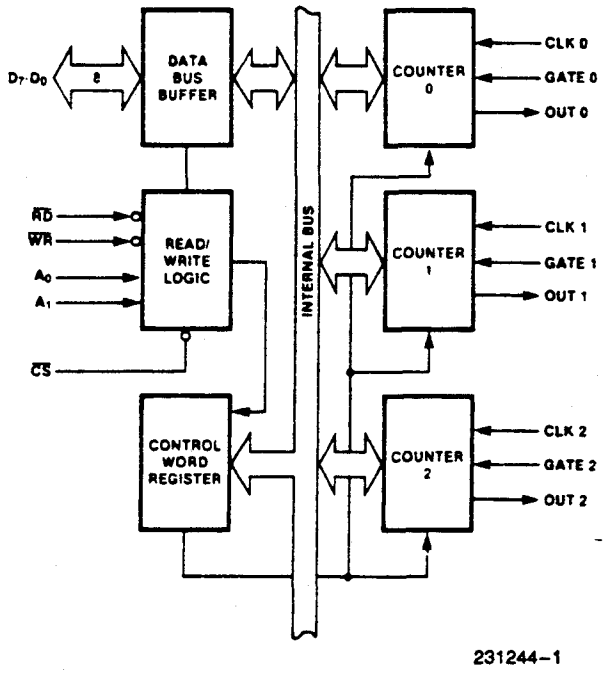

231244-1

Figure 1. 82C54 Block Diagram

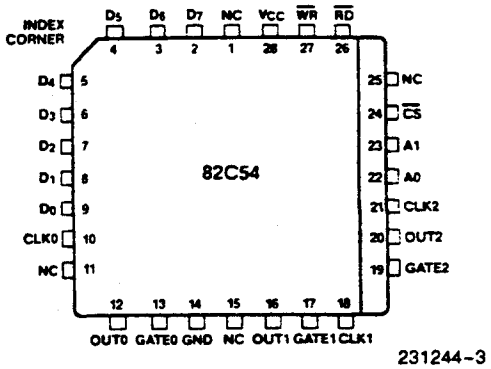

231244-3

PLASTIC LEADED CHIP CARRIER

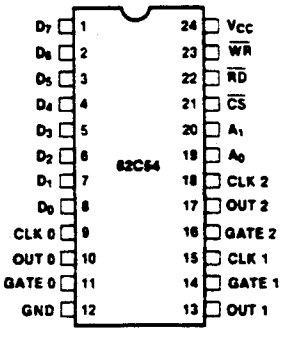

231244-2

Diagrams are for pin reference only.
Package sizes are not to scale.

Figure 2. 82C54 Pinout

September 1989
Order Number: 231244-005

Table 1. Pin Description

Symbol	Pin Number		Type	Function
	DIP	PLCC		
D_7-D_0	1-8	2-9	I/O	Data: Bidirectional tri-state data bus lines, connected to system data bus.
CLK 0	9	10	I	Clock 0: Clock input of Counter 0.
OUT 0	10	12	O	Output 0: Output of Counter 0.
GATE 0	11	13	I	Gate 0: Gate input of Counter 0.
GND	12	14		Ground: Power supply connection.
OUT 1	13	16	O	Out 1: Output of Counter 1.
GATE 1	14	17	I	Gate 1: Gate input of Counter 1.
CLK 1	15	18	I	Clock 1: Clock input of Counter 1.
GATE 2	16	19	I	Gate 2: Gate input of Counter 2.
OUT 2	17	20	O	Out 2: Output of Counter 2.
CLK 2	18	21	I	Clock 2: Clock input of Counter 2.
A_1, A_0	20-19	23-22	I	Address: Used to select one of the three Counters or the Control Word Register for read or write operations. Normally connected to the system address bus.
				A_1 / A_0 / Selects: 0 0 Counter 0; 0 1 Counter 1; 1 0 Counter 2; 1 1 Control Word Register
$\overline{CS}$	21	24	I	Chip Select: A low on this input enables the 82C54 to respond to $\overline{RD}$ and $\overline{WR}$ signals. $\overline{RD}$ and $\overline{WR}$ are ignored otherwise.
$\overline{RD}$	22	26	I	Read Control: This input is low during CPU read operations.
$\overline{WR}$	23	27	I	Write Control: This input is low during CPU write operations.
V_{CC}	24	28		Power: +5V power supply connection.
NC		1, 11, 15, 25		No Connect

FUNCTIONAL DESCRIPTION

General

The 82C54 is a programmable interval timer/counter designed for use with Intel microcomputer systems. It is a general purpose, multi-timing element that can be treated as an array of I/O ports in the system software.

The 82C54 solves one of the most common problems in any microcomputer system, the generation of accurate time delays under software control. Instead of setting up timing loops in software, the programmer configures the 82C54 to match his requirements and programs one of the counters for the desired delay. After the desired delay, the 82C54 will interrupt the CPU. Software overhead is minimal and variable length delays can easily be accommodated.

Some of the other counter/timer functions common to microcomputers which can be implemented with the 82C54 are:

- Real time clock
- Even counter
- Digital one-shot
- Programmable rate generator
- Square wave generator
- Binary rate multiplier
- Complex waveform generator
- Complex motor controller

Block Diagram

DATA BUS BUFFER

This 3-state, bi-directional, 8-bit buffer is used to interface the 82C54 to the system bus (see Figure 3).

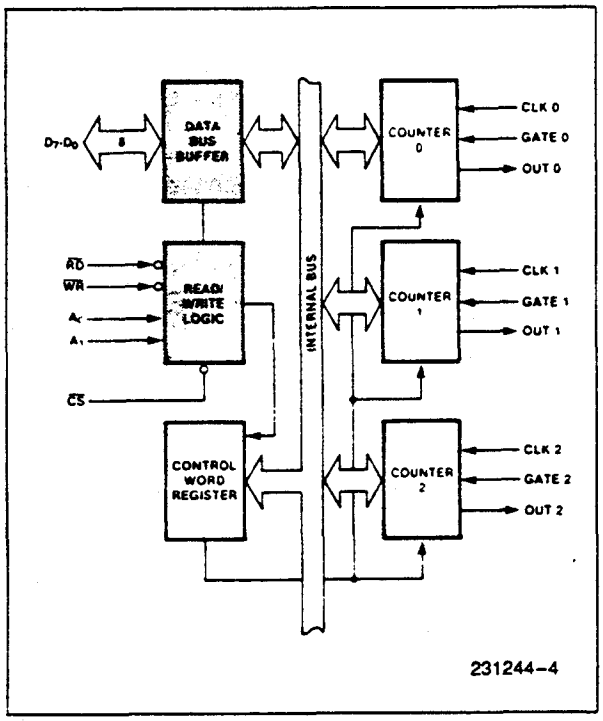

Figure 3. Block Diagram Showing Data Bus Buffer and Read/Write Logic Functions

READ/WRITE LOGIC

The Read/Write Logic accepts inputs from the system bus and generates control signals for the other functional blocks of the 82C54. A_1 and A_0 select one of the three counters or the Control Word Register to be read from/written into. A "low" on the $\overline{RD}$ input tells the 82C54 that the CPU is reading one of the counters. A "low" on the $\overline{WR}$ input tells the 82C54 that the CPU is writing either a Control Word or an initial count. Both $\overline{RD}$ and $\overline{WR}$ are qualified by $\overline{CS}$; $\overline{RD}$ and $\overline{WR}$ are ignored unless the 82C54 has been selected by holding $\overline{CS}$ low.

CONTROL WORD REGISTER

The Control Word Register (see Figure 4) is selected by the Read/Write Logic when A_1, A_0 = 11. If the CPU then does a write operation to the 82C54, the data is stored in the Control Word Register and is interpreted as a Control Word used to define the operation of the Counters.

The Control Word Register can only be written to; status information is available with the Read-Back Command.

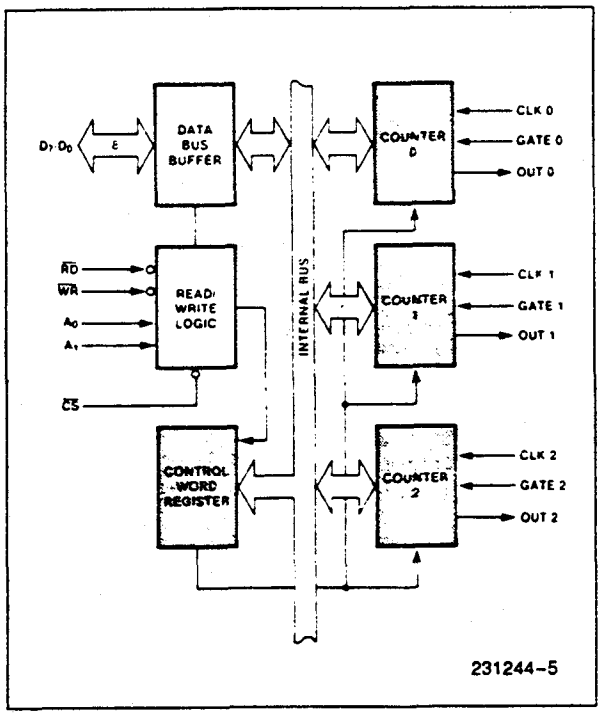

Figure 4. Block Diagram Showing Control Word Register and Counter Functions

COUNTER 0, COUNTER 1, COUNTER 2

These three functional blocks are identical in operation, so only a single Counter will be described. The internal block diagram of a single counter is shown in Figure 5.

The Counters are fully independent. Each Counter may operate in a different Mode.

The Control Word Register is shown in the figure; it is not part of the Counter itself, but its contents determine how the Counter operates.

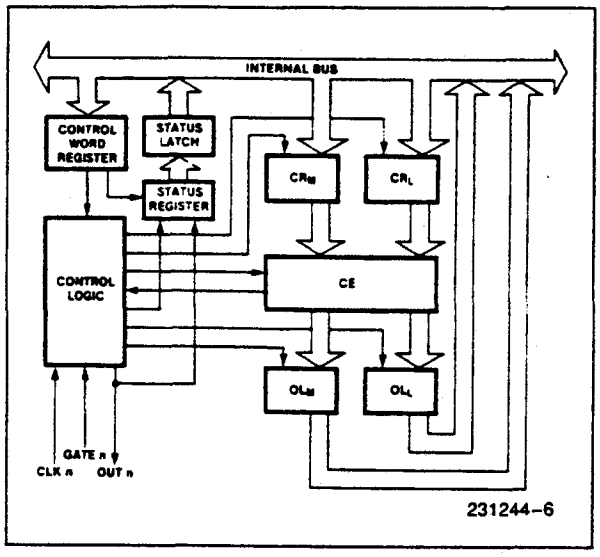

Figure 5. Internal Block Diagram of a Counter

The status register, shown in the Figure, when latched, contains the current contents of the Control Word Register and status of the output and null count flag. (See detailed explanation of the Read-Back command.)

The actual counter is labelled CE (for "Counting Element"). It is a 16-bit presettable synchronous down counter.

OL_M and OL_L are two 8-bit latches. OL stands for "Output Latch"; the subscripts M and L stand for "Most significant byte" and "Least significant byte" respectively. Both are normally referred to as one unit and called just OL. These latches normally "follow" the CE, but if a suitable Counter Latch Command is sent to the 82C54, the latches "latch" the present count until read by the CPU and then return to "following" the CE. One latch at a time is enabled by the counter's Control Logic to drive the internal bus. This is how the 16-bit Counter communicates over the 8-bit internal bus. Note that the CE itself cannot be read; whenever you read the count, it is the OL that is being read.

Similarly, there are two 8-bit registers called CR_M and CR_L (for "Count Register"). Both are normally referred to as one unit and called just CR. When a new count is written to the Counter, the count is stored in the CR and later transferred to the CE. The Control Logic allows one register at a time to be loaded from the internal bus. Both bytes are transferred to the CE simultaneously. CR_M and CR_L are cleared when the Counter is programmed. In this way, if the Counter has been programmed for one byte counts (either most significant byte only or least significant byte only) the other byte will be zero. Note that the CE cannot be written into; whenever a count is written, it is written into the CR.

The Control Logic is also shown in the diagram. CLK n, GATE n, and OUT n are all connected to the outside world through the Control Logic.

82C54 SYSTEM INTERFACE

The 82C54 is treated by the systems software as an array of peripheral I/O ports; three are counters and the fourth is a control register for MODE programming.

Basically, the select inputs A_0, A_1 connect to the A_0, A_1 address bus signals of the CPU. The $\overline{CS}$ can be derived directly from the address bus using a linear select method. Or it can be connected to the output of a decoder, such as an Intel 8205 for larger systems.

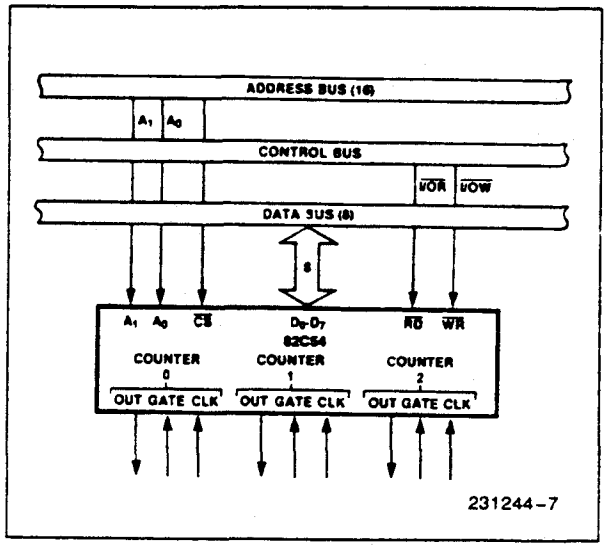

Figure 6. 82C54 System Interface

OPERATIONAL DESCRIPTION

General

After power-up, the state of the 82C54 is undefined. The Mode, count value, and output of all Counters are undefined.

How each Counter operates is determined when it is programmed. Each Counter must be programmed before it can be used. Unused counters need not be programmed.

Programming the 82C54

Counters are programmed by writing a Control Word and then an initial count. The control word format is shown in Figure 7.

All Control Words are written into the Control Word Register, which is selected when A_1, A_0 = 11. The Control Word itself specifies which Counter is being programmed.

By contrast, initial counts are written into the Counters, not the Control Word Register. The A_1, A_0 inputs are used to select the Counter to be written into. The format of the initial count is determined by the Control Word used.

Control Word Format

A_1, A_0 = 11 $\overline{CS}$ = 0 $\overline{RD}$ = 1 $\overline{WR}$ = 0

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
SC1	SC0	RW1	RW0	M2	M1	M0	BCD

SC — Select Counter:

SC1	SC0	
0	0	Select Counter 0
0	1	Select Counter 1
1	0	Select Counter 2
1	1	Read-Back Command (See Read Operations)

M — MODE:

M2	M1	M0	
0	0	0	Mode 0
0	0	1	Mode 1
X	1	0	Mode 2
X	1	1	Mode 3
1	0	0	Mode 4
1	0	1	Mode 5

RW — Read/Write:

RW1	RW0	
0	0	Counter Latch Command (see Read Operations)
0	1	Read/Write least significant byte only.
1	0	Read/Write most significant byte only.
1	1	Read/Write least significant byte first, then most significant byte.

BCD:

0	Binary Counter 16-bits
1	Binary Coded Decimal (BCD) Counter (4 Decades)

NOTE: Don't care bits (X) should be 0 to insure compatibility with future Intel products.

Figure 7. Control Word Format

Write Operations

The programming procedure for the 82C54 is very flexible. Only two conventions need to be remembered:

1) For each Counter, the Control Word must be written before the initial count is written.
2) The initial count must follow the count format specified in the Control Word (least significant byte only, most significant byte only, or least significant byte and then most significant byte).

Since the Control Word Register and the three Counters have separate addresses (selected by the A_1, A_0 inputs), and each Control Word specifies the Counter it applies to (SC0, SC1 bits), no special instruction sequence is required. Any programming sequence that follows the conventions above is acceptable.

A new initial count may be written to a Counter at any time without affecting the Counter's programmed Mode in any way. Counting will be affected as described in the Mode definitions. The new count must follow the programmed count format.

If a Counter is programmed to read/write two-byte counts, the following precaution applies: A program must not transfer control between writing the first and second byte to another routine which also writes into that same Counter. Otherwise, the Counter will be loaded with an incorrect count.

		A_1	A_0
Control Word —	Counter 0	1	1
LSB of count —	Counter 0	0	0
MSB of count —	Counter 0	0	0
Control Word —	Counter 1	1	1
LSB of count —	Counter 1	0	1
MSB of count —	Counter 1	0	1
Control Word —	Counter 2	1	1
LSB of count —	Counter 2	1	0
MSB of count —	Counter 2	1	0

		A_1	A_0
Control Word —	Counter 2	1	1
Control Word —	Counter 1	1	1
Control Word —	Counter 0	1	1
LSB of count —	Counter 2	1	0
MSB of count —	Counter 2	1	0
LSB of count —	Counter 1	0	1
MSB of count —	Counter 1	0	1
LSB of count —	Counter 0	0	0
MSB of count —	Counter 0	0	0

		A_1	A_0
Control Word —	Counter 0	1	1
Counter Word —	Counter 1	1	1
Control Word —	Counter 2	1	1
LSB of count —	Counter 2	1	0
LSB of count —	Counter 1	0	1
LSB of count —	Counter 0	0	0
MSB of count —	Counter 0	0	0
MSB of count —	Counter 1	0	1
MSB of count —	Counter 2	1	0

		A_1	A_0
Control Word —	Counter 1	1	1
Control Word —	Counter 0	1	1
LSB of count —	Counter 1	0	1
Control Word —	Counter 2	1	1
LSB of count —	Counter 0	0	0
MSB of count —	Counter 1	0	1
LSB of count —	Counter 2	1	0
MSB of count —	Counter 0	0	0
MSB of count —	Counter 2	1	0

NOTE:
In all four examples, all counters are programmed to read/write two-byte counts.
These are only four of many possible programming sequences.

Figure 8. A Few Possible Programming Sequences

Read Operations

It is often desirable to read the value of a Counter without disturbing the count in progress. This is easily done in the 82C54.

There are three possible methods for reading the counters: a simple read operation, the Counter Latch Command, and the Read-Back Command. Each is explained below. The first method is to perform a simple read operation. To read the Counter, which is selected with the A1, A0 inputs, the CLK input of the selected Counter must be inhibited by using either the GATE input or external logic. Otherwise, the count may be in the process of changing when it is read, giving an undefined result.

COUNTER LATCH COMMAND

The second method uses the "Counter Latch Command". Like a Control Word, this command is written to the Control Word Register, which is selected when A_1, A_0 = 11. Also like a Control Word, the SC0, SC1 bits select one of the three Counters, but two other bits, D5 and D4, distinguish this command from a Control Word.

A_1, A_0 = 11; $\overline{CS}$ = 0; $\overline{RD}$ = 1; $\overline{WR}$ = 0

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
SC1	SC0	0	0	X	X	X	X

SC1, SC0 - specify counter to be latched

SC1	SC0	Counter
0	0	0
0	1	1
1	0	2
1	1	Read-Back Command

D5,D4 - 00 designates Counter Latch Command

X - don't care

NOTE:
Don't care bits (X) should be 0 to insure compatibility with future Intel products.

Figure 9. Counter Latching Command Format

The selected Counter's output latch (OL) latches the count at the time the Counter Latch Command is received. This count is held in the latch until it is read by the CPU (or until the Counter is reprogrammed). The count is then unlatched automatically and the OL returns to "following" the counting element (CE). This allows reading the contents of the Counters "on the fly" without affecting counting in progress. Multiple Counter Latch Commands may be used to latch more than one Counter. Each latched Counter's OL holds its count until it is read. Counter Latch Commands do not affect the programmed Mode of the Counter in any way.

If a Counter is latched and then, some time later, latched again before the count is read, the second Counter Latch Command is ignored. The count read will be the count at the time the first Counter Latch Command was issued.

With either method, the count must be read according to the programmed format; specifically, if the Counter is programmed for two byte counts, two bytes must be read. The two bytes do not have to be read one right after the other; read or write or programming operations of other Counters may be inserted between them.

Another feature of the 82C54 is that reads and writes of the same Counter may be interleaved; for example, if the Counter is programmed for two byte counts, the following sequence is valid.

1. Read least significant byte.
2. Write new least significant byte.
3. Read most significant byte.
4. Write new most significant byte.

If a Counter is programmed to read/write two-byte counts, the following precaution applies; A program must not transfer control between reading the first and second byte to another routine which also reads from that same Counter. Otherwise, an incorrect count will be read.

READ-BACK COMMAND

The third method uses the Read-Back command. This command allows the user to check the count value, programmed Mode, and current state of the OUT pin and Null Count flag of the selected counter(s).

The command is written into the Control Word Register and has the format shown in Figure 10. The command applies to the counters selected by setting their corresponding bits D3,D2,D1 = 1.

A0, A1 = 11 $\overline{CS}$ = 0 $\overline{RD}$ = 1 $\overline{WR}$ = 0

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	1	$\overline{COUNT}$	$\overline{STATUS}$	CNT 2	CNT 1	CNT 0	0

D_5: 0 = Latch count of selected counter(s)
D_4: 0 = Latch status of selected counter(s)
D_3: 1 = Select counter 2
D_2: 1 = Select counter 1
D_1: 1 = Select counter 0
D_0: Reserved for future expansion; must be 0

Figure 10. Read-Back Command Format

The read-back command may be used to latch multiple counter output latches (OL) by setting the $\overline{COUNT}$ bit D5 = 0 and selecting the desired counter(s). This single command is functionally equivalent to several counter latch commands, one for each counter latched. Each counter's latched count is held until it is read (or the counter is reprogrammed). That counter is automatically unlatched when read, but other counters remain latched until they are read. If multiple count read-back commands are issued to the same counter without reading the

count, all but the first are ignored; i.e., the count which will be read is the count at the time the first read-back command was issued.

The read-back command may also be used to latch status information of selected counter(s) by setting $\overline{\text{STATUS}}$ bit D4=0. Status must be latched to be read; status of a counter is accessed by a read from that counter.

The counter status format is shown in Figure 11. Bits D5 through D0 contain the counter's programmed Mode exactly as written in the last Mode Control Word. OUTPUT bit D7 contains the current state of the OUT pin. This allows the user to monitor the counter's output via software, possibly eliminating some hardware from a system.

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
OUTPUT	NULL COUNT	RW1	RW0	M2	M1	M0	BCD

D_7 1 = Out Pin is 1
0 = Out Pin is 0
D_6 1 = Null count
0 = Count available for reading
D_5-D_0 Counter Programmed Mode (See Figure 7)

Figure 11. Status Byte

NULL COUNT bit D6 indicates when the last count written to the counter register (CR) has been loaded into the counting element (CE). The exact time this happens depends on the Mode of the counter and is described in the Mode Definitions, but until the count is loaded into the counting element (CE), it can't be read from the counter. If the count is latched or read before this time, the count value will not reflect the new count just written. The operation of Null Count is shown in Figure 12.

THIS ACTION:	CAUSES:
A. Write to the control word register:[1]	Null count = 1
B. Write to the count register (CR);[2]	Null count = 1
C. New count is loaded into CE (CR → CE);	Null count = 0

[1] Only the counter specified by the control word will have its null count set to 1. Null count bits of other counters are unaffected.

[2] If the counter is programmed for two-byte counts (least significant byte then most significant byte) null count goes to 1 when the second byte is written.

Figure 12. Null Count Operation

If multiple status latch operations of the counter(s) are performed without reading the status, all but the first are ignored; i.e., the status that will be read is the status of the counter at the time the first status read-back command was issued.

Both count and status of the selected counter(s) may be latched simultaneously by setting both $\overline{\text{COUNT}}$ and $\overline{\text{STATUS}}$ bits D5,D4=0. This is functionally the same as issuing two separate read-back commands at once, and the above discussions apply here also. Specifically, if multiple count and/or status read-back commands are issued to the same counter(s) without any intervening reads, all but the first are ignored. This is illustrated in Figure 13.

If both count and status of a counter are latched, the first read operation of that counter will return latched status, regardless of which was latched first. The next one or two reads (depending on whether the counter is programmed for one or two type counts) return latched count. Subsequent reads return unlatched count.

Command								Description	Results
D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0		
1	1	0	0	0	0	1	0	Read back count and status of Counter 0	Count and status latched for Counter 0
1	1	1	0	0	1	0	0	Read back status of Counter 1	Status latched for Counter 1
1	1	1	0	1	1	0	0	Read back status of Counters 2, 1	Status latched for Counter 2, but not Counter 1
1	1	0	1	1	0	0	0	Read back count of Counter 2	Count latched for Counter 2
1	1	0	0	0	1	0	0	Read back count and status of Counter 1	Count latched for Counter 1, but not status
1	1	1	0	0	0	1	0	Read back status of Counter 1	Command ignored, status already latched for Counter 1

Figure 13. Read-Back Command Example

$\overline{CS}$	$\overline{RD}$	$\overline{WR}$	A_1	A_0	
0	1	0	0	0	Write into Counter 0
0	1	0	0	1	Write into Counter 1
0	1	0	1	0	Write into Counter 2
0	1	0	1	1	Write Control Word
0	0	1	0	0	Read from Counter 0
0	0	1	0	1	Read from Counter 1
0	0	1	1	0	Read from Counter 2
0	0	1	1	1	No-Operation (3-State)
1	X	X	X	X	No-Operation (3-State)
0	1	1	X	X	No-Operation (3-State)

Figure 14. Read/Write Operations Summary

Mode Definitions

The following are defined for use in describing the operation of the 82C54.

CLK PULSE: a rising edge, then a falling edge, in that order, of a Counter's CLK input.

TRIGGER: a rising edge of a Counter's GATE input.

COUNTER LOADING: the transfer of a count from the CR to the CE (refer to the "Functional Description")

MODE 0: INTERRUPT ON TERMINAL COUNT

Mode 0 is typically used for event counting. After the Control Word is written, OUT is initially low, and will remain low until the Counter reaches zero. OUT then goes high and remains high until a new count or a new Mode 0 Control Word is written into the Counter.

GATE = 1 enables counting; GATE = 0 disables counting. GATE has no effect on OUT.

After the Control Word and initial count are written to a Counter, the initial count will be loaded on the next CLK pulse. This CLK pulse does not decrement the count, so for an initial count of N, OUT does not go high until N + 1 CLK pulses after the initial count is written.

If a new count is written to the Counter, it will be loaded on the next CLK pulse and counting will continue from the new count. If a two-byte count is written, the following happens:

1) Writing the first byte disables counting. OUT is set low immediately (no clock pulse required).
2) Writing the second byte allows the new count to be loaded on the next CLK pulse.

This allows the counting sequence to be synchronized by software. Again, OUT does not go high until N + 1 CLK pulses after the new count of N is written.

If an initial count is written while GATE = 0, it will still be loaded on the next CLK pulse. When GATE goes high, OUT will go high N CLK pulses later; no CLK pulse is needed to load the Counter as this has already been done.

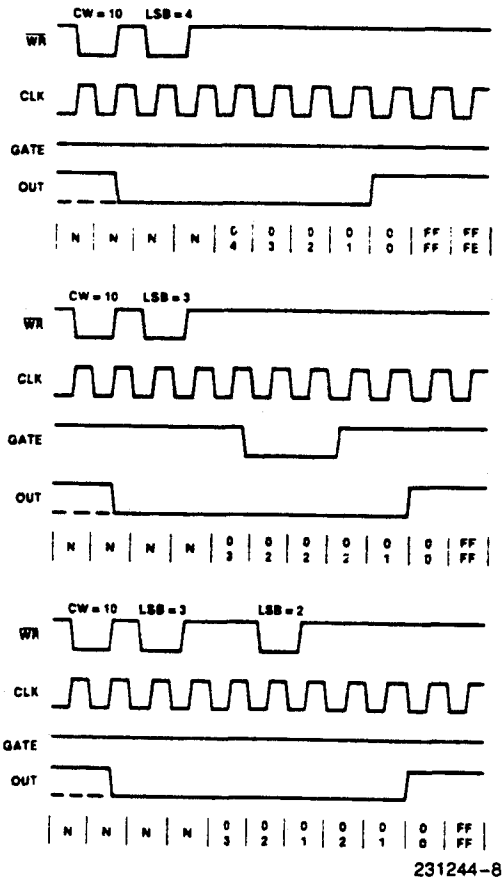

NOTE:
The Following Conventions Apply To All Mode Timing Diagrams:
1. Counters are programmed for binary (not BCD) counting and for Reading/Writing least significant byte (LSB) only.
2. The counter is always selected ($\overline{CS}$ always low).
3. CW stands for "Control Word"; CW = 10 means a control word of 10, hex is written to the counter.
4. LSB stands for "Least Significant Byte" of count.
5. Numbers below diagrams are count values.
The lower number is the least significant byte.
The upper number is the most significant byte. Since the counter is programmed to Read/Write LSB only, the most significant byte cannot be read.
N stands for an undefined count.
Vertical lines show transitions between count values.

Figure 15. Mode 0

MODE 1: HARDWARE RETRIGGERABLE ONE-SHOT

OUT will be initially high. OUT will go low on the CLK pulse following a trigger to begin the one-shot pulse, and will remain low until the Counter reaches zero. OUT will then go high and remain high until the CLK pulse after the next trigger.

After writing the Control Word and initial count, the Counter is armed. A trigger results in loading the Counter and setting OUT low on the next CLK pulse, thus starting the one-shot pulse. An initial count of N will result in a one-shot pulse N CLK cycles in duration. The one-shot is retriggerable, hence OUT will remain low for N CLK pulses after any trigger. The one-shot pulse can be repeated without rewriting the same count into the counter. GATE has no effect on OUT.

If a new count is written to the Counter during a one-shot pulse, the current one-shot is not affected unless the Counter is retriggered. In that case, the Counter is loaded with the new count and the one-shot pulse continues until the new count expires.

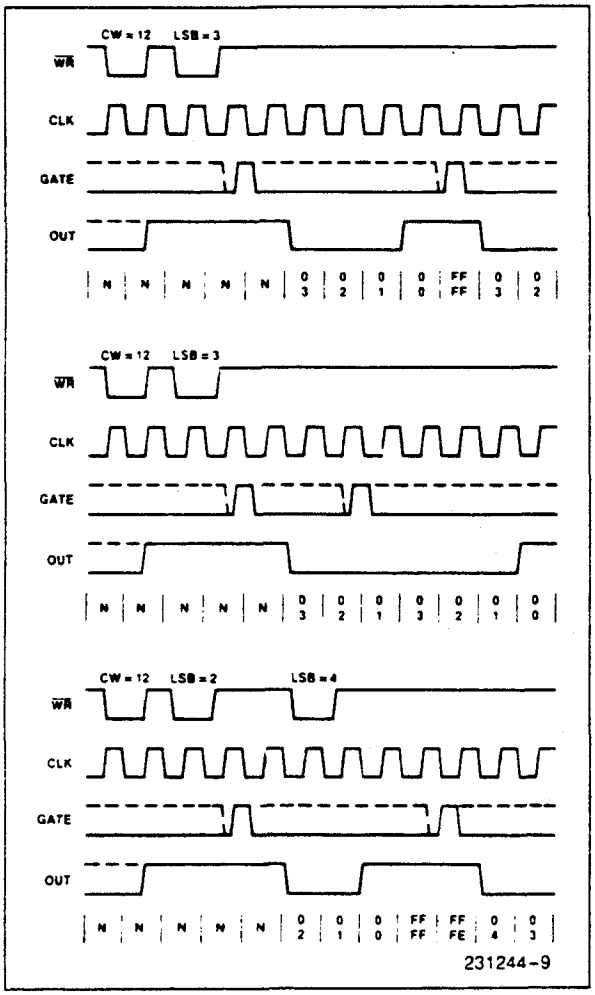

Figure 16. Mode 1

MODE 2: RATE GENERATOR

This Mode functions like a divide-by-N counter. It is typically used to generate a Real Time Clock interrupt. OUT will initially be high. When the initial count has decremented to 1, OUT goes low for one CLK pulse. OUT then goes high again, the Counter reloads the initial count and the process is repeated. Mode 2 is periodic; the same sequence is repeated indefinitely. For an initial count of N, the sequence repeats every N CLK cycles.

GATE = 1 enables counting; GATE = 0 disables counting. If GATE goes low during an output pulse, OUT is set high immediately. A trigger reloads the Counter with the initial count on the next CLK pulse; OUT goes low N CLK pulses after the trigger. Thus the GATE input can be used to synchronize the Counter.

After writing a Control Word and initial count, the Counter will be loaded on the next CLK pulse. OUT goes low N CLK Pulses after the initial count is written. This allows the Counter to be synchronized by software also.

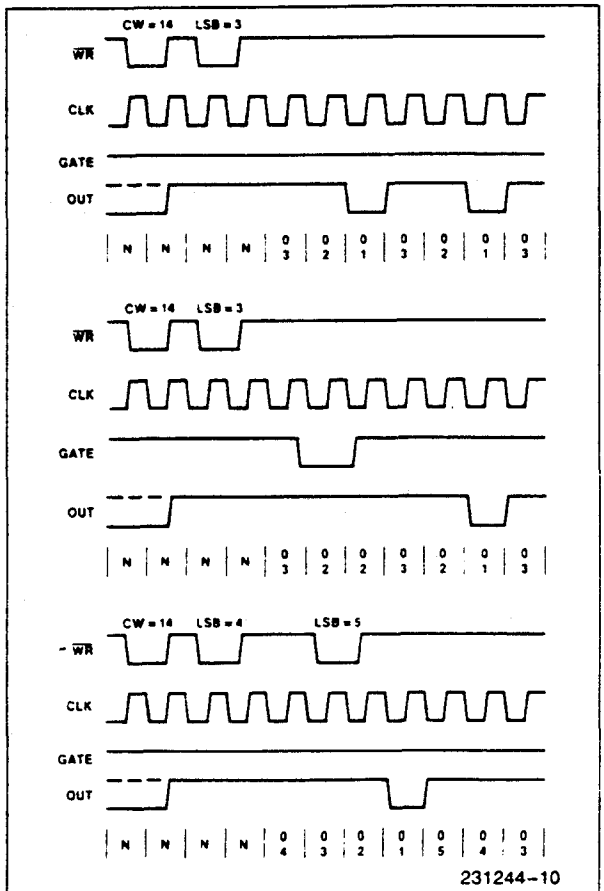

NOTE:
A GATE transition should not occur one clock prior to terminal count.

Figure 17. Mode 2

Writing a new count while counting does not affect the current counting sequence. If a trigger is received after writing a new count but before the end of the current period, the Counter will be loaded with the new count on the next CLK pulse and counting will continue from the new count. Otherwise, the new count will be loaded at the end of the current counting cycle. In mode 2, a COUNT of 1 is illegal.

MODE 3: SQUARE WAVE MODE

Mode 3 is typically used for Baud rate generation. Mode 3 is similar to Mode 2 except for the duty cycle of OUT. OUT will initially be high. When half the initial count has expired, OUT goes low for the remainder of the count. Mode 3 is periodic; the sequence above is repeated indefinitely. An initial count of N results in a square wave with a period of N CLK cycles.

GATE = 1 enables counting; GATE = 0 disables counting. If GATE goes low while OUT is low, OUT is set high immediately; no CLK pulse is required. A trigger reloads the Counter with the initial count on the next CLK pulse. Thus the GATE input can be used to synchronize the Counter.

After writing a Control Word and initial count, the Counter will be loaded on the next CLK pulse. This allows the Counter to be synchronized by software also.

Writing a new count while counting does not affect the current counting sequence. If a trigger is received after writing a new count but before the end of the current half-cycle of the square wave, the Counter will be loaded with the new count on the next CLK pulse and counting will continue from the new count. Otherwise, the new count will be loaded at the end of the current half-cycle.

Mode 3 is implemented as follows:

Even counts: OUT is initially high. The initial count is loaded on one CLK pulse and then is decremented by two on succeeding CLK pulses. When the count expires OUT changes value and the Counter is reloaded with the initial count. The above process is repeated indefinitely.

Odd counts: OUT is initially high. The initial count minus one (an even number) is loaded on one CLK pulse and then is decremented by two on succeeding CLK pulses. One CLK pulse *after* the count expires, OUT goes low and the Counter is reloaded with the initial count minus one. Succeeding CLK pulses decrement the count by two. When the count expires, OUT goes high again and the Counter is reloaded with the initial count minus one. The above process is repeated indefinitely. So for odd counts, OUT will be high for (N + 1)/2 counts and low for (N −1)/2 counts.

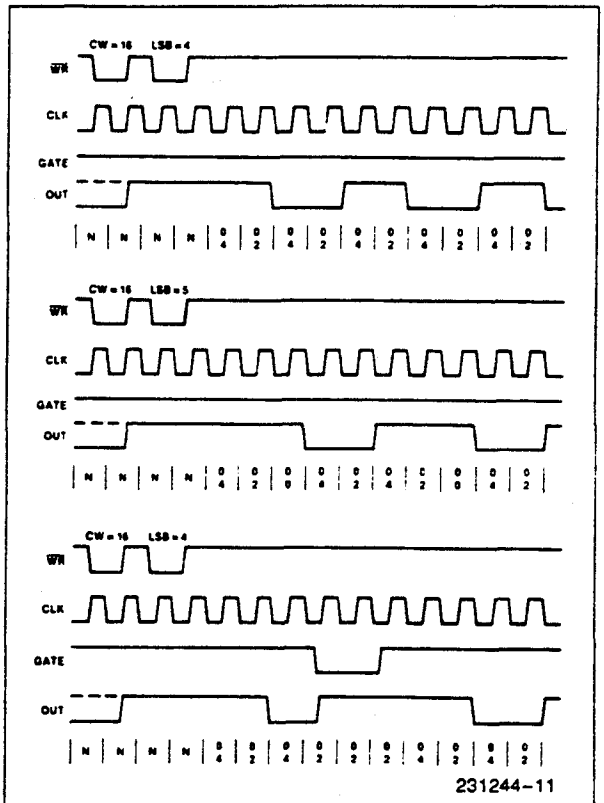

NOTE:
A GATE transition should not occur one clock prior to terminal count.

Figure 18. Mode 3

MODE 4: SOFTWARE TRIGGERED STROBE

OUT will be initially high. When the initial count expires, OUT will go low for one CLK pulse and then go high again. The counting sequence is "triggered" by writing the initial count.

GATE = 1 enables counting; GATE = 0 disables counting. GATE has no effect on OUT.

After writing a Control Word and initial count, the Counter will be loaded on the next CLK pulse. This CLK pulse does not decrement the count, so for an initial count of N, OUT does not strobe low until N + 1 CLK pulses after the initial count is written.

If a new count is written during counting, it will be loaded on the next CLK pulse and counting will continue from the new count. If a two-byte count is written, the following happens:

1) Writing the first byte has no effect on counting.
2) Writing the second byte allows the new count to be loaded on the next CLK pulse.

This allows the sequence to be "retriggered" by software. OUT strobes low N+1 CLK pulses after the new count of N is written.

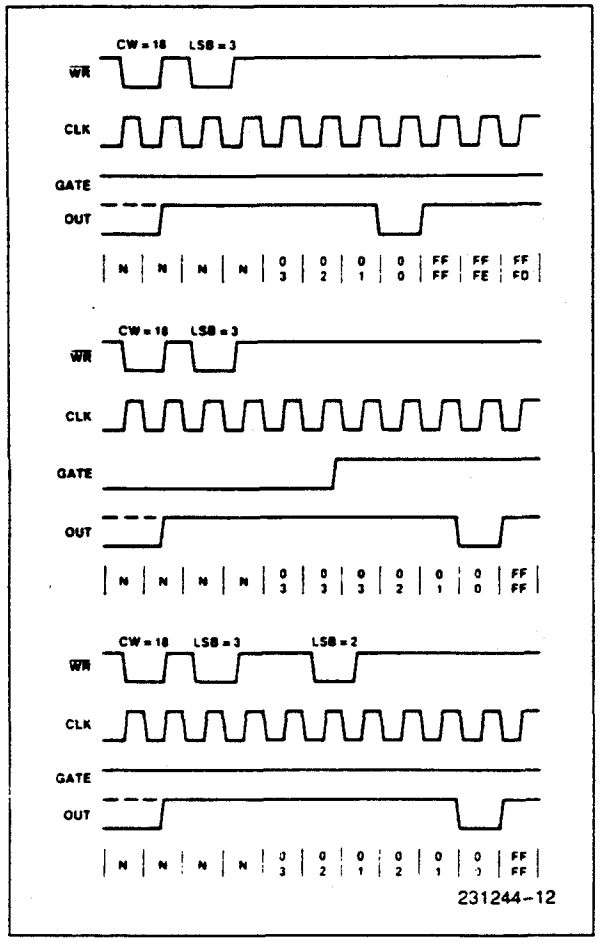

Figure 19. Mode 4

MODE 5: HARDWARE TRIGGERED STROBE (RETRIGGERABLE)

OUT will initially be high. Counting is triggered by a rising edge of GATE. When the initial count has expired, OUT will go low for one CLK pulse and then go high again.

After writing the Control Word and initial count, the counter will not be loaded until the CLK pulse after a trigger. This CLK pulse does not decrement the count, so for an initial count of N, OUT does not strobe low until N+1 CLK pulses after a trigger.

A trigger results in the Counter being loaded with the initial count on the next CLK pulse. The counting sequence is retriggerable. OUT will not strobe low for N + 1 CLK pulses after any trigger. GATE has no effect on OUT.

If a new count is written during counting, the current counting sequence will not be affected. If a trigger occurs after the new count is written but before the current count expires, the Counter will be loaded with the new count on the next CLK pulse and counting will continue from there.

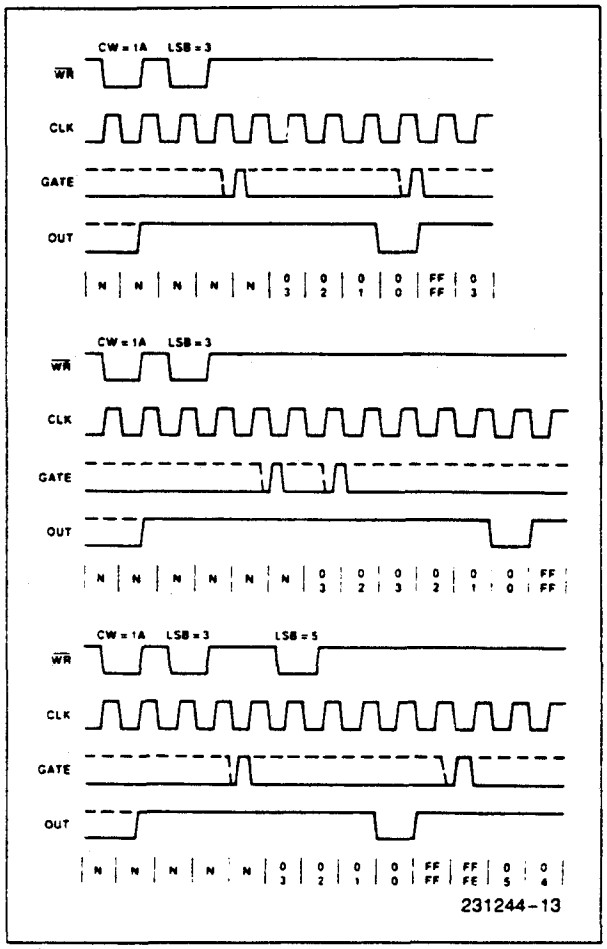

Figure 20. Mode 5

Signal Status Modes	Low Or Going Low	Rising	High
0	Disables counting	—	Enables counting
1	—	1) Initiates counting 2) Resets output after next clock	—
2	1) Disables counting 2) Sets output immediately high	Initiates counting	Enables counting
3	1) Disables counting 2) Sets output immediately high	Initiates counting	Enables counting
4	Disables counting	—	Enables counting
5	—	Initiates counting	—

Figure 21. Gate Pin Operations Summary

MODE	MIN COUNT	MAX COUNT
0	1	0
1	1	0
2	2	0
3	2	0
4	1	0

NOTE:
0 is equivalent to 2^{16} for binary counting and 10^4 for BCD counting

Figure 22. Minimum and Maximum initial Counts

Operation Common to All Modes

Programming

When a Control Word is written to a Counter, all Control Logic is immediately reset and OUT goes to a known initial state; no CLK pulses are required for this.

GATE

The GATE input is always sampled on the rising edge of CLK. In Modes 0, 2, 3, and 4 the GATE input is level sensitive, and the logic level is sampled on the rising edge of CLK. In Modes 1, 2, 3, and 5 the GATE input is rising-edge sensitive. In these Modes, a rising edge of GATE (trigger) sets an edge-sensitive flip-flop in the Counter. This flip-flop is then sampled on the next rising edge of CLK; the flip-flop is reset immediately after it is sampled. In this way, a trigger will be detected no matter when it occurs—a high logic level does not have to be maintained until the next rising edge of CLK. Note that in Modes 2 and 3, the GATE input is both edge- and level-sensitive. In Modes 2 and 3, if a CLK source other than the system clock is used, GATE should be pulsed immediately following $\overline{WR}$ of a new count value.

COUNTER

New counts are loaded and Counters are decremented on the falling edge of CLK.

The largest possible initial count is 0; this is equivalent to 2^{16} for binary counting and 10^4 for BCD counting.

The Counter does not stop when it reaches zero. In Modes 0, 1, 4, and 5 the Counter "wraps around" to the highest count, either FFFF hex for binary counting or 9999 for BCD counting, and continues counting. Modes 2 and 3 are periodic; the Counter reloads itself with the initial count and continues counting from there.

ABSOLUTE MAXIMUM RATINGS*

Ambient Temperature Under Bias.....0°C to 70°C
Storage Temperature .....−65° to +150°C
Supply Voltage .....−0.5 to +8.0V
Operating Voltage .....+4V to +7V
Voltage on any Input.....GND −2V to +6.5V
Voltage on any Output ..GND−0.5V to V_{CC} + 0.5V
Power Dissipation .....1 Watt

**Notice: Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.*

D.C. CHARACTERISTICS

(T_A=0°C to 70°C, V_{CC}=5V± 10%, GND=0V) (T_A = −40°C to +85°C for Extended Temperature)

Symbol	Parameter	Min	Max	Units	Test Conditions
V_{IL}	Input Low Voltage	−0.5	0.8	V	
V_{IH}	Input High Voltage	2.0	V_{CC} + 0.5	V	
V_{OL}	Output Low Voltage		0.4	V	I_{OL} = 2.5 mA
V_{OH}	Output High Voltage	3.0 V_{CC} − 0.4		V V	I_{OH} = −2.5 mA I_{OH} = −100 μA
I_{IL}	Input Load Current		±2.0	μA	V_{IN}=V_{CC} to 0V
I_{OFL}	Output Float Leakage Current		±10	μA	V_{OUT}=V_{CC} to 0.0V
I_{CC}	V_{CC} Supply Current		20	mA	Clk Freq= 8MHz 82C54 10MHz 82C54-2
I_{CCSB}	V_{CC} Supply Current-Standby		10	μA	CLK Freq = DC $\overline{CS}$ = V_{CC}. All Inputs/Data Bus V_{CC} All Outputs Floating
I_{CCSB1}	V_{CC} Supply Current-Standby		150	μA	CLK Freq = DC $\overline{CS}$ = V_{CC}. All Other Inputs, I/O Pins = V_{GND}, Outputs Open
C_{IN}	Input Capacitance		10	pF	f_c = 1 MHz Unmeasured pins returned to GND(5)
$C_{I/O}$	I/O Capacitance		20	pF	
C_{OUT}	Output Capacitance		20	pF	

A.C. CHARACTERISTICS

(T_A = 0°C to 70°C, V_{CC} = 5V ±10%, GND =0V) (T_A = −40°C to +85°C for Extended Temperature)

BUS PARAMETERS (Note 1)

READ CYCLE

Symbol	Parameter	82C54		82C54-2		Units
		Min	Max	Min	Max	
t_{AR}	Address Stable Before $\overline{RD}$ ↓	45		30		ns
t_{SR}	$\overline{CS}$ Stable Before $\overline{RD}$ ↓	0		0		ns
t_{RA}	Address Hold Time After $\overline{RD}$ ↑	0		0		ns
t_{RR}	$\overline{RD}$ Pulse Width	150		95		ns
t_{RD}	Data Delay from $\overline{RD}$ ↓		120		85	ns
t_{AD}	Data Delay from Address		220		185	ns
t_{DF}	$\overline{RD}$ ↑ to Data Floating	5	90	5	65	ns
t_{RV}	Command Recovery Time	200		165		ns

NOTE:
1. AC timings measured at V_{OH} = 2.0V, V_{OL} = 0.8V.

A.C. CHARACTERISTICS (Continued)

WRITE CYCLE

Symbol	Parameter	82C54		82C54-2		Units
		Min	Max	Min	Max	
t_{AW}	Address Stable Before $\overline{WR}\downarrow$	0		0		ns
t_{SW}	$\overline{CS}$ Stable Before $\overline{WR}\downarrow$	0		0		ns
t_{WA}	Address Hold Time After $\overline{WR}\uparrow$	0		0		ns
t_{WW}	$\overline{WR}$ Pulse Width	150		95		ns
t_{DW}	Data Setup Time Before $\overline{WR}\uparrow$	120		95		ns
t_{WD}	Data Hold Time After $\overline{WR}\uparrow$	0		0		ns
t_{RV}	Command Recovery Time	200		165		ns

CLOCK AND GATE

Symbol	Parameter	82C54		82C54-2		Units
		Min	Max	Min	Max	
t_{CLK}	Clock Period	125	DC	100	DC	ns
t_{PWH}	High Pulse Width	60(3)		30(3)		ns
t_{PWL}	Low Pulse Width	60(3)		50(3)		ns
T_R	Clock Rise Time		25		25	ns
t_F	Clock Fall Time		25		25	ns
t_{GW}	Gate Width High	50		50		ns
t_{GL}	Gate Width Low	50		50		ns
t_{GS}	Gate Setup Time to CLK $\uparrow$	50		40		ns
t_{GH}	Gate Hold Time After CLK $\uparrow$	50(2)		50(2)		ns
T_{OD}	Output Delay from CLK $\downarrow$		150		100	ns
t_{ODG}	Output Delay from Gate $\downarrow$		120		100	ns
t_{WC}	CLK Delay for Loading(4)	0	55	0	55	ns
t_{WG}	Gate Delay for Sampling(4)	−5	50	−5	40	ns
t_{WO}	OUT Delay from Mode Write		260		240	ns
t_{CL}	CLK Set Up for Count Latch	−40	45	−40	40	ns

NOTES:

2. In Modes 1 and 5 triggers are sampled on each rising clock edge. A second trigger within 120 ns (70 ns for the 82C54-2) of the rising clock edge may not be detected.
3. Low-going glitches that violate t_{PWH}, t_{PWL} may cause errors requiring counter reprogramming.
4. Except for Extended Temp., See Extended Temp. A.C. Characteristics below.
5. Sampled not 100% tested. T_A = 25°C.
6. If CLK present at T_{WC} min then Count equals N+2 CLK pulses, T_{WC} max equals Count N+1 CLK pulse. T_{WC} min to T_{WC} max, count will be either N+1 or N+2 CLK pulses.
7. In Modes 1 and 5, if GATE is present when writing a new Count value, at T_{WG} min Counter will not be triggered, at T_{WG} max Counter will be triggered.
8. If CLK present when writing a Counter Latch or ReadBack Command, at T_{CL} min CLK will be reflected in count value latched, at T_{CL} max CLK will not be reflected in the count value latched. Writing a Counter Latch or ReadBack Command between T_{CL} min and T_{WL} max will result in a latched count vallue which is ± one least significant bit.

EXTENDED TEMPERATURE (T_A = −40°C to +85°C for Extended Temperature)

Symbol	Parameter	82C54		82C54-2		Units
		Min	Max	Min	Max	
t_{WC}	CLK Delay for Loading	−25	25	−25	25	ns
t_{WG}	Gate Delay for Sampling	−25	25	−25	25	ns

WAVEFORMS

WRITE

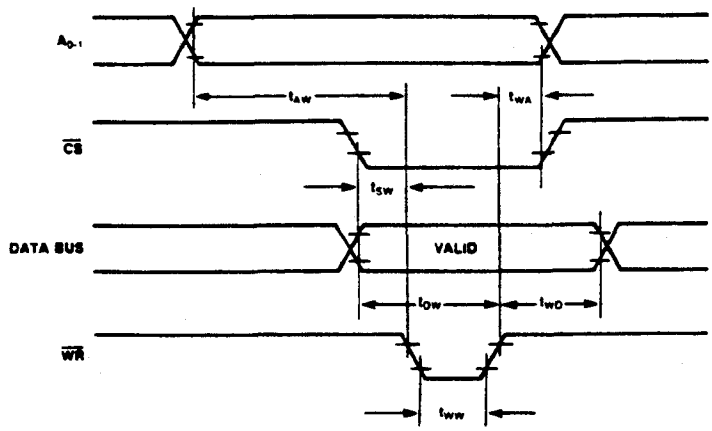

231244-14

READ

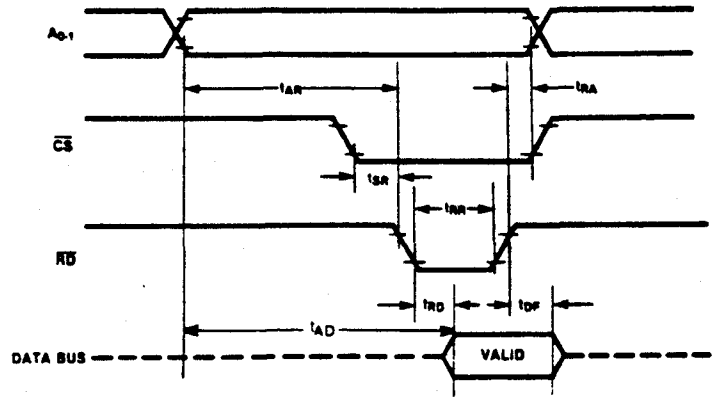

231244-15

RECOVERY



231244-16

CLOCK AND GATE

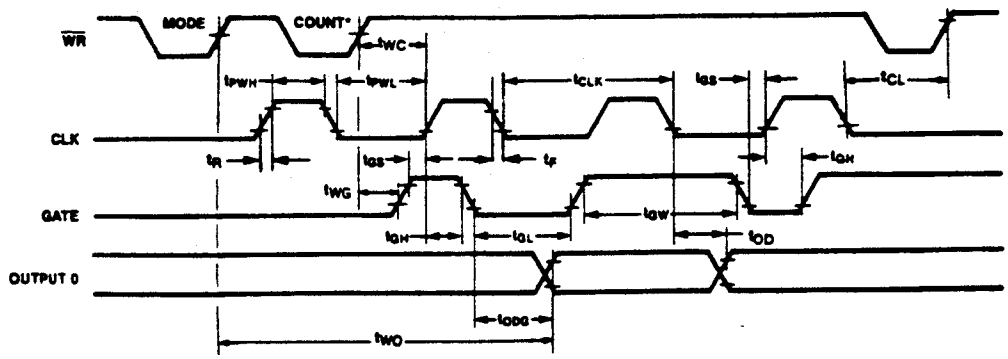

231244-17

* Last byte of count being written

A.C. TESTING INPUT, OUTPUT WAVEFORM

INPUT/OUTPUT



231244-18

A.C. Testing: Inputs are driven at 2.4V for a logic "1" and 0.45V for a logic "0." Timing measurements are made at 2.0V for a logic "1" and 0.8V for a logic "0."

A.C. TESTING LOAD CIRCUIT

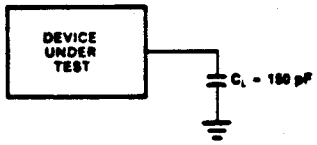

231244-19

C_L = 150 pF

C_L includes jig capacitance

Intel 82C55A Programmable Peripheral Interface
Data Sheet Reprint

82C55A
CHMOS PROGRAMMABLE PERIPHERAL INTERFACE

- **Compatible with all Intel and Most Other Microprocessors**
- **High Speed, "Zero Wait State" Operation with 8 MHz 8086/88 and 80186/188**
- **24 Programmable I/O Pins**
- **Low Power CHMOS**
- **Completely TTL Compatible**
- **Control Word Read-Back Capability**
- **Direct Bit Set/Reset Capability**
- **2.5 mA DC Drive Capability on all I/O Port Outputs**
- **Available in 40-Pin DIP and 44-Pin PLCC**
- **Available in EXPRESS**
  - **Standard Temperature Range**
  - **Extended Temperature Range**

The Intel 82C55A is a high-performance, CHMOS version of the industry standard 8255A general purpose programmable I/O device which is designed for use with all Intel and most other microprocessors. It provides 24 I/O pins which may be individually programmed in 2 groups of 12 and used in 3 major modes of operation. The 82C55A is pin compatible with the NMOS 8255A and 8255A-5.

In MODE 0, each group of 12 I/O pins may be programmed in sets of 4 and 8 to be inputs or outputs. In MODE 1, each group may be programmed to have 8 lines of input or output. 3 of the remaining 4 pins are used for handshaking and interrupt control signals. MODE 2 is a strobed bi-directional bus configuration.

The 82C55A is fabricated on Intel's advanced CHMOS III technology which provides low power consumption with performance equal to or greater than the equivalent NMOS product. The 82C55A is available in 40-pin DIP and 44-pin plastic leaded chip carrier (PLCC) packages.

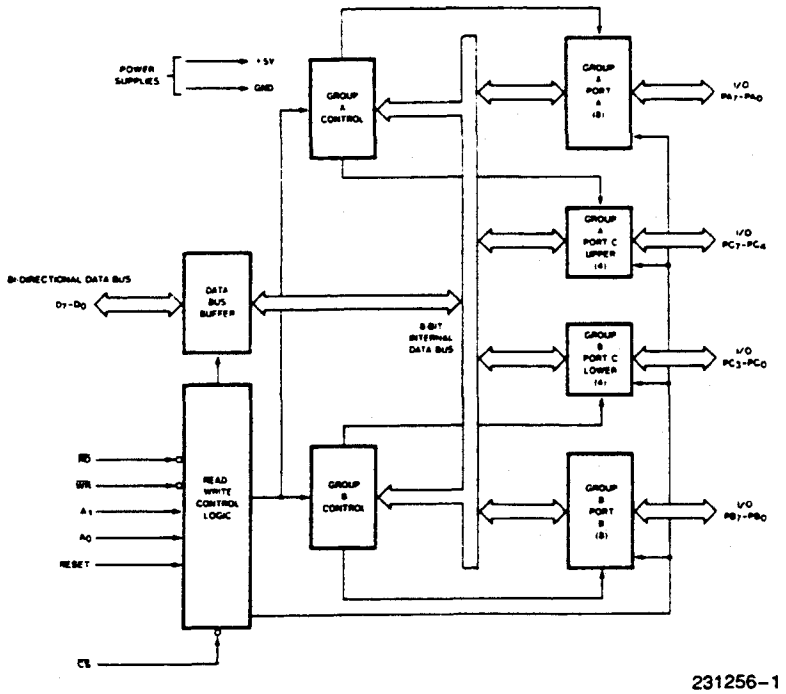

231256-1

Figure 1. 82C55A Block Diagram

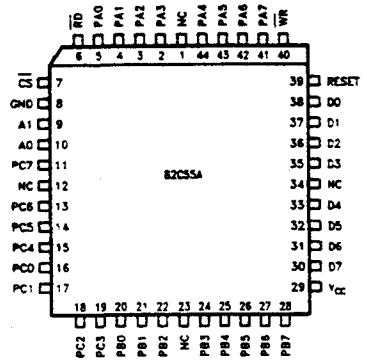

231256-31

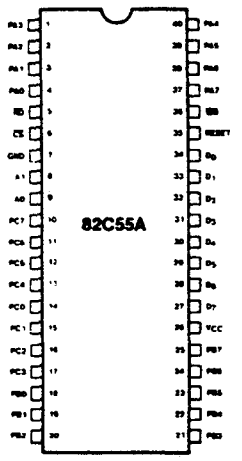

231256-2

Figure 2. 82C55A Pinout
Diagrams are for pin reference only. Package sizes are not to scale.

September 1987
Order Number: 231256-004

Table 1. Pin Description

Symbol	Pin Number Dip	Pin Number PLCC	Type	Name and Function
PA_{3-0}	1–4	2–5	I/O	**PORT A, PINS 0–3:** Lower nibble of an 8-bit data output latch/ buffer and an 8-bit data input latch.
$\overline{RD}$	5	6	I	**READ CONTROL:** This input is low during CPU read operations.
$\overline{CS}$	6	7	I	**CHIP SELECT:** A low on this input enables the 82C55A to respond to $\overline{RD}$ and $\overline{WR}$ signals. $\overline{RD}$ and WR are ignored otherwise.
GND	7	8		**System Ground**
A_{1-0}	8–9	9–10	I	**ADDRESS:** These input signals, in conjunction $\overline{RD}$ and $\overline{WR}$, control the selection of one of the three ports or the control word registers.

A_1	A_0	$\overline{RD}$	$\overline{WR}$	$\overline{CS}$	Input Operation (Read)
0	0	0	1	0	Port A - Data Bus
0	1	0	1	0	Port B - Data Bus
1	0	0	1	0	Port C - Data Bus
1	1	0	1	0	Control Word - Data Bus
					Output Operation (Write)
0	0	1	0	0	Data Bus - Port A
0	1	1	0	0	Data Bus - Port B
1	0	1	0	0	Data Bus - Port C
1	1	1	0	0	Data Bus - Control
					Disable Function
X	X	X	X	1	Data Bus - 3 - State
X	X	1	1	0	Data Bus - 3 - State

PC_{7-4}	10–13	11,13–15	I/O	**PORT C, PINS 4–7:** Upper nibble of an 8-bit data output latch/ buffer and an 8-bit data input buffer (no latch for input). This port can be divided into two 4-bit ports under the mode control. Each 4-bit port contains a 4-bit latch and it can be used for the control signal outputs and status signal inputs in conjunction with ports A and B.
PC_{0-3}	14–17	16–19	I/O	**PORT C, PINS 0–3:** Lower nibble of Port C.
PB_{0-7}	18–25	20–22, 24–28	I/O	**PORT B, PINS 0–7:** An 8-bit data output latch/buffer and an 8-bit data input buffer.
V_{CC}	26	29		**SYSTEM POWER:** + 5V Power Supply.
D_{7-0}	27–34	30–33, 35–38	I/O	**DATA BUS:** Bi-directional, tri-state data bus lines, connected to system data bus.
RESET	35	39	I	**RESET:** A high on this input clears the control register and all ports are set to the input mode.
$\overline{WR}$	36	40	I	**WRITE CONTROL:** This input is low during CPU write operations.
PA_{7-4}	37–40	41–44	I/O	**PORT A, PINS 4–7:** Upper nibble of an 8-bit data output latch/ buffer and an 8-bit data input latch.
NC		1, 12, 23, 34		No Connect

82C55A FUNCTIONAL DESCRIPTION

General

The 82C55A is a programmable peripheral interface device designed for use in Intel microcomputer systems. Its function is that of a general purpose I/O component to interface peripheral equipment to the microcomputer system bus. The functional configuration of the 82C55A is programmed by the system software so that normally no external logic is necessary to interface peripheral devices or structures.

Data Bus Buffer

This 3-state bidirectional 8-bit buffer is used to interface the 82C55A to the system data bus. Data is transmitted or received by the buffer upon execution of input or output instructions by the CPU. Control words and status information are also transferred through the data bus buffer.

Read/Write and Control Logic

The function of this block is to manage all of the internal and external transfers of both Data and Control or Status words. It accepts inputs from the CPU Address and Control busses and in turn, issues commands to both of the Control Groups.

Group A and Group B Controls

The functional configuration of each port is programmed by the systems software. In essence, the CPU "outputs" a control word to the 82C55A. The control word contains information such as "mode", "bit set", "bit reset", etc., that initializes the functional configuration of the 82C55A.

Each of the Control blocks (Group A and Group B) accepts "commands" from the Read/Write Control Logic, receives "control words" from the internal data bus and issues the proper commands to its associated ports.

Control Group A - Port A and Port C upper (C7–C4)
Control Group B - Port B and Port C lower (C3–C0)

The control word register can be both written and read as shown in the address decode table in the pin descriptions. Figure 6 shows the control word format for both Read and Write operations. When the control word is read, bit D7 will always be a logic "1", as this implies control word mode information.

Ports A, B, and C

The 82C55A contains three 8-bit ports (A, B, and C). All can be configured in a wide variety of functional characteristics by the system software but each has its own special features or "personality" to further enhance the power and flexibility of the 82C55A.

Port A. One 8-bit data output latch/buffer and one 8-bit input latch buffer. Both "pull-up" and "pull-down" bus hold devices are present on Port A.

Port B. One 8-bit data input/output latch/buffer. Only "pull-up" bus hold devices are present on Port B.

Port C. One 8-bit data output latch/buffer and one 8-bit data input buffer (no latch for input). This port can be divided into two 4-bit ports under the mode control. Each 4-bit port contains a 4-bit latch and it can be used for the control signal outputs and status signal inputs in conjunction with ports A and B. Only "pull-up" bus hold devices are present on Port C.

See Figure 4 for the bus-hold circuit configuration for Port A, B, and C.

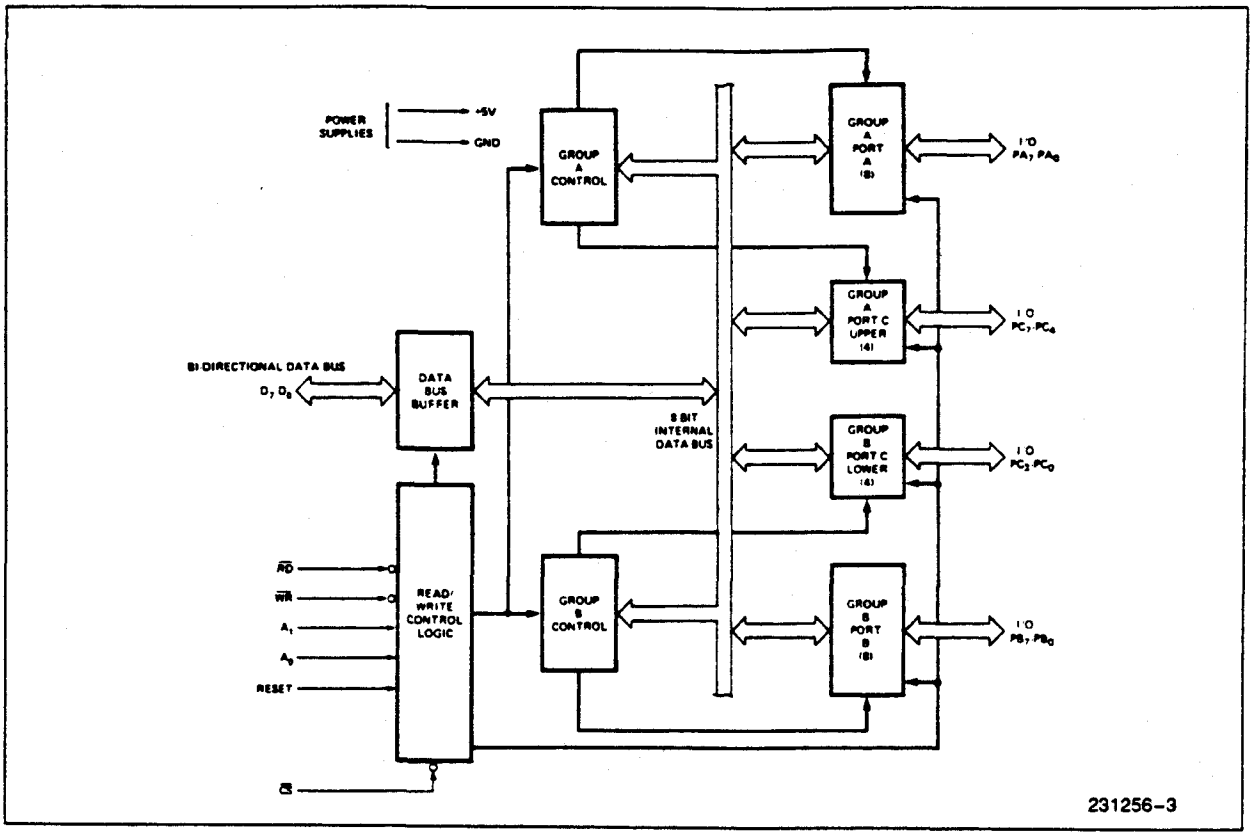

Figure 3. 82C55A Block Diagram Showing Data Bus Buffer and Read/Write Control Logic Functions

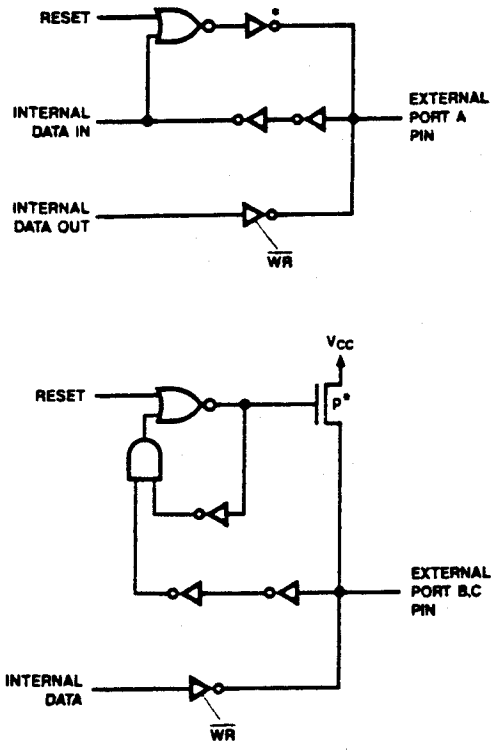

***NOTE:**
Port pins loaded with more than 20 pF capacitance may not have their logic level guaranteed following a hardware reset.

Figure 4. Port A, B, C, Bus-hold Configuration

82C55A OPERATIONAL DESCRIPTION

Mode Selection

There are three basic modes of operation that can be selected by the system software:

Mode 0 — Basic input/output
Mode 1 — Strobed Input/output
Mode 2 — Bi-directional Bus

When the reset input goes "high" all ports will be set to the input mode with all 24 port lines held at a logic "one" level by the internal bus hold devices (see Figure 4 Note). After the reset is removed the 82C55A can remain in the input mode with no additional initialization required. This eliminates the need for pullup or pulldown devices in "all CMOS" designs. During the execution of the system program, any of the other modes may be selected by using a single output instruction. This allows a single 82C55A to service a variety of peripheral devices with a simple software maintenance routine.

The modes for Port A and Port B can be separately defined, while Port C is divided into two portions as required by the Port A and Port B definitions. All of the output registers, including the status flip-flops, will be reset whenever the mode is changed. Modes may be combined so that their functional definition can be "tailored" to almost any I/O structure. For instance; Group B can be programmed in Mode 0 to monitor simple switch closings or display computational results, Group A could be programmed in Mode 1 to monitor a keyboard or tape reader on an interrupt-driven basis.

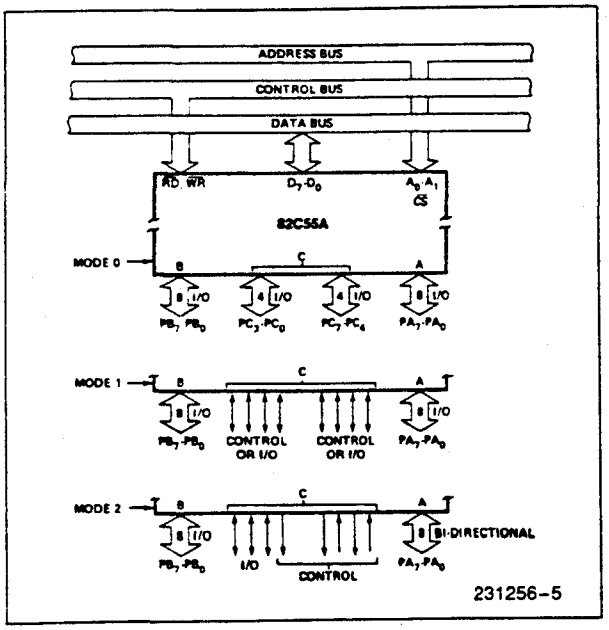

Figure 5. Basic Mode Definitions and Bus Interface

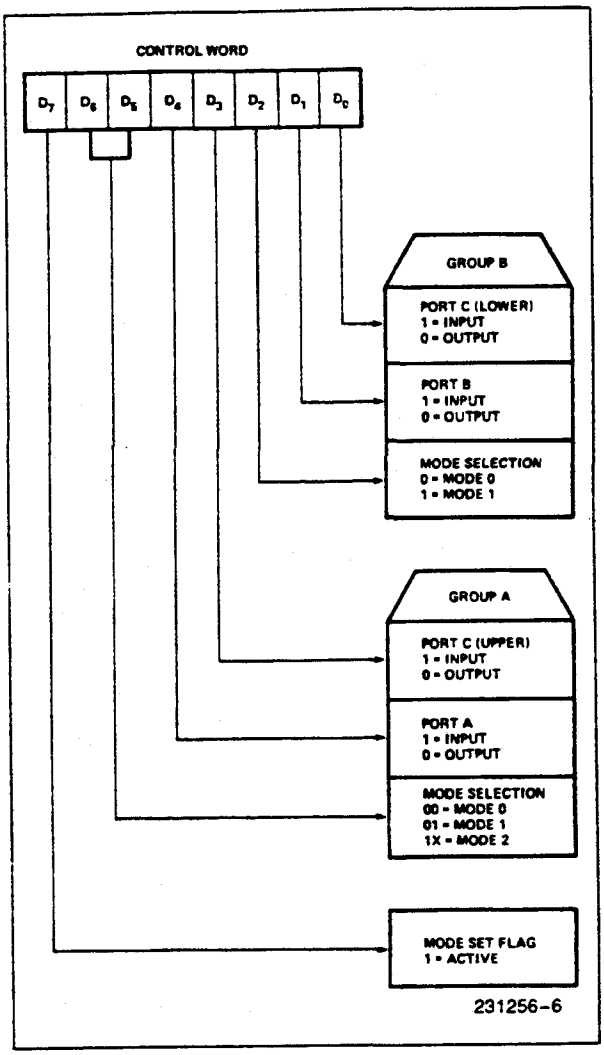

Figure 6. Mode Definition Format

The mode definitions and possible mode combinations may seem confusing at first but after a cursory review of the complete device operation a simple, logical I/O approach will surface. The design of the 82C55A has taken into account things such as efficient PC board layout, control signal definition vs PC layout and complete functional flexibility to support almost any peripheral device with no external logic. Such design represents the maximum use of the available pins.

Single Bit Set/Reset Feature

Any of the eight bits of Port C can be Set or Reset using a single OUTput instruction. This feature reduces software requirements in Control-based applications.

When Port C is being used as status/control for Port A or B, these bits can be set or reset by using the Bit Set/Reset operation just as if they were data output ports.

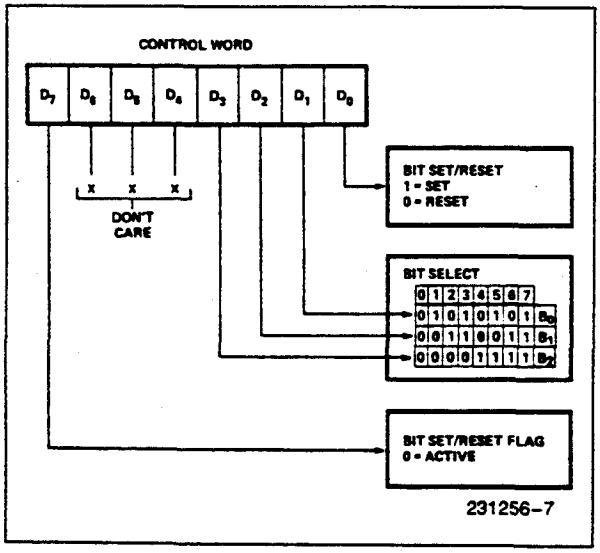
CONTROL WORD
D7 D6 D5 D4 D3 D2 D1 D0
X X X
DON'T CARE
BIT SET/RESET
1 = SET
0 = RESET
BIT SELECT
0 1 2 3 4 5 6 7
0 1 0 1 0 1 0 1 B0
0 0 1 1 0 0 1 1 B1
0 0 0 0 1 1 1 1 B2
BIT SET/RESET FLAG
0 = ACTIVE
231256-7

Figure 7. Bit Set/Reset Format

Interrupt Control Functions

When the 82C55A is programmed to operate in mode 1 or mode 2, control signals are provided that can be used as interrupt request inputs to the CPU. The interrupt request signals, generated from port C, can be inhibited or enabled by setting or resetting the associated INTE flip-flop, using the bit set/reset function of port C.

This function allows the Programmer to disallow or allow a specific I/O device to interrupt the CPU without affecting any other device in the interrupt structure.

INTE flip-flop definition:

(BIT-SET)—INTE is SET—Interrupt enable
(BIT-RESET)—INTE is RESET—Interrupt disable

Note:
All Mask flip-flops are automatically reset during mode selection and device Reset.

Operating Modes

Mode 0 (Basic Input/Output). This functional configuration provides simple input and output operations for each of the three ports. No "handshaking" is required, data is simply written to or read from a specified port.

Mode 0 Basic Functional Definitions:

- Two 8-bit ports and two 4-bit ports.
- Any port can be input or output.
- Outputs are latched.
- Inputs are not latched.
- 16 different Input/Output configurations are possible in this Mode.

MODE 0 (BASIC INPUT)

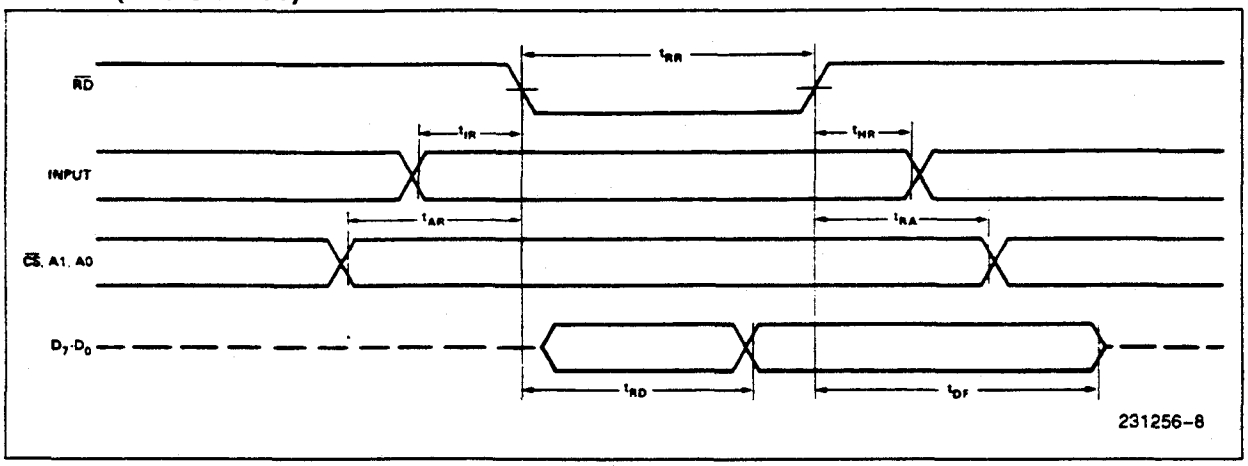

MODE 0 (BASIC OUTPUT)

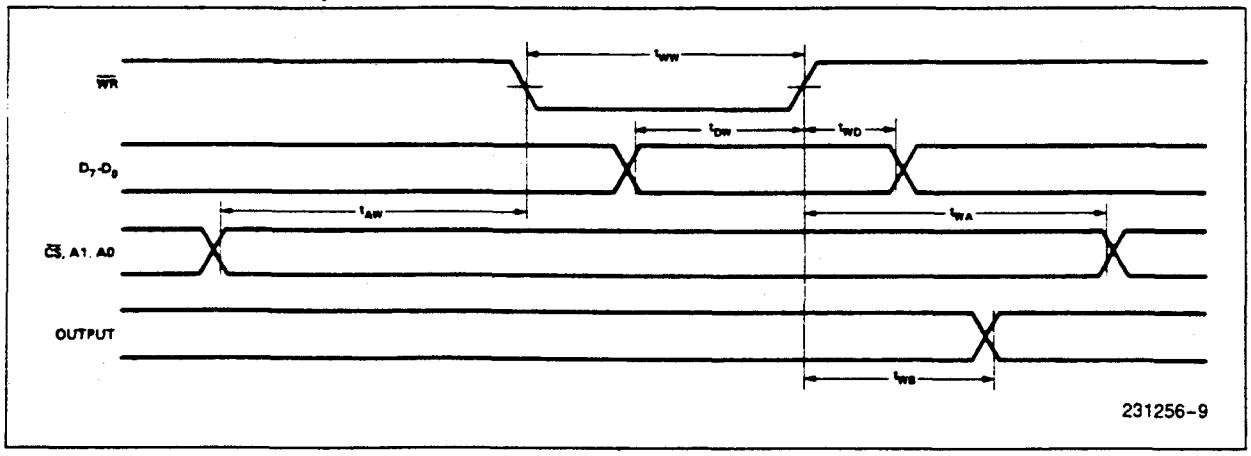

MODE 0 Port Definition

A		B		GROUP A			GROUP B	
D_4	D_3	D_1	D_0	PORT A	PORT C (UPPER)	#	PORT B	PORT C (LOWER)
0	0	0	0	OUTPUT	OUTPUT	0	OUTPUT	OUTPUT
0	0	0	1	OUTPUT	OUTPUT	1	OUTPUT	INPUT
0	0	1	0	OUTPUT	OUTPUT	2	INPUT	OUTPUT
0	0	1	1	OUTPUT	OUTPUT	3	INPUT	INPUT
0	1	0	0	OUTPUT	INPUT	4	OUTPUT	OUTPUT
0	1	0	1	OUTPUT	INPUT	5	OUTPUT	INPUT
0	1	1	0	OUTPUT	INPUT	6	INPUT	OUTPUT
0	1	1	1	OUTPUT	INPUT	7	INPUT	INPUT
1	0	0	0	INPUT	OUTPUT	8	OUTPUT	OUTPUT
1	0	0	1	INPUT	OUTPUT	9	OUTPUT	INPUT
1	0	1	0	INPUT	OUTPUT	10	INPUT	OUTPUT
1	0	1	1	INPUT	OUTPUT	11	INPUT	INPUT
1	1	0	0	INPUT	INPUT	12	OUTPUT	OUTPUT
1	1	0	1	INPUT	INPUT	13	OUTPUT	INPUT
1	1	1	0	INPUT	INPUT	14	INPUT	OUTPUT
1	1	1	1	INPUT	INPUT	15	INPUT	INPUT

MODE 0 Configurations

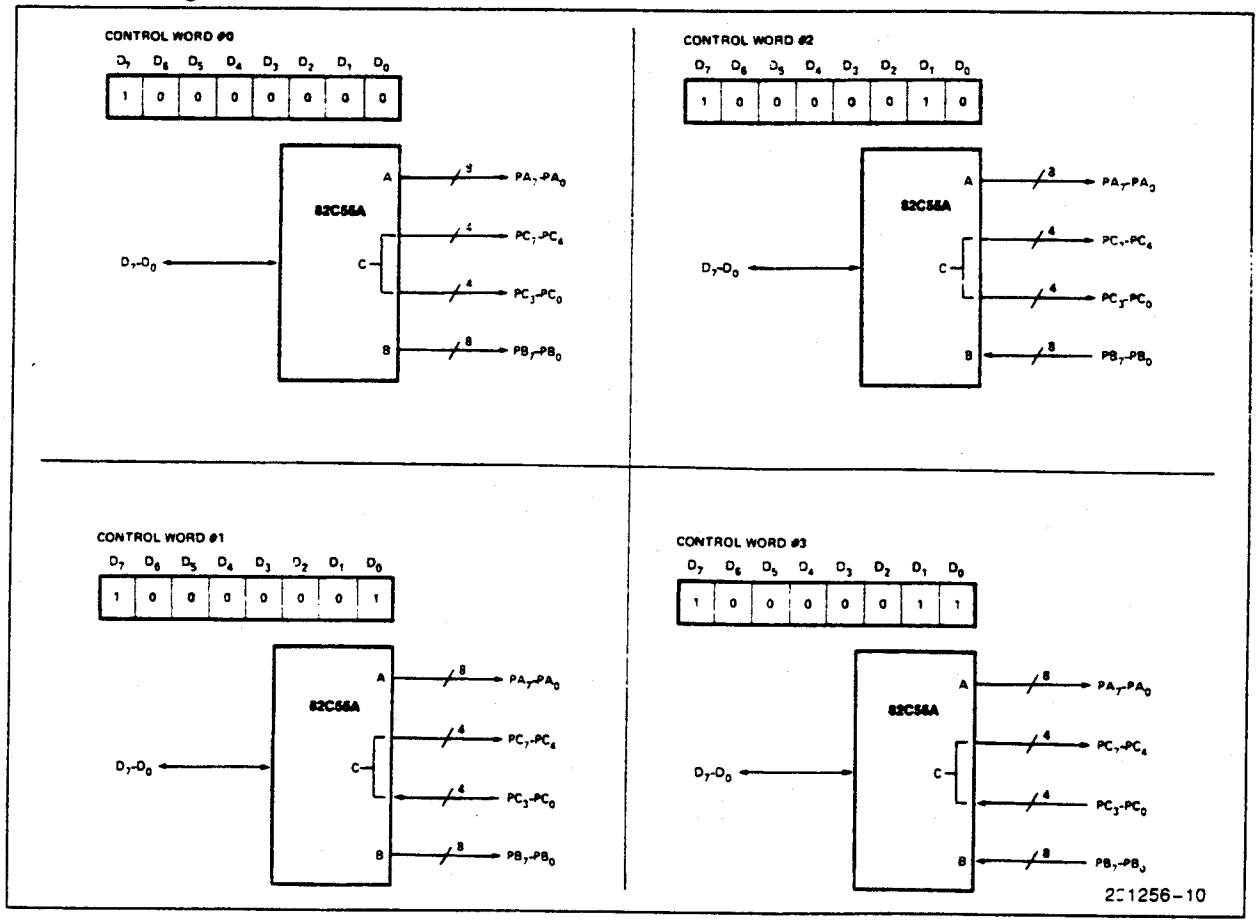

MODE 0 Configurations (Continued)

CONTROL WORD #4

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	0	1	0	0	0

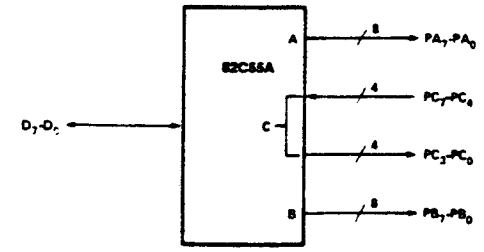

CONTROL WORD #8

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	1	0	0	0	0

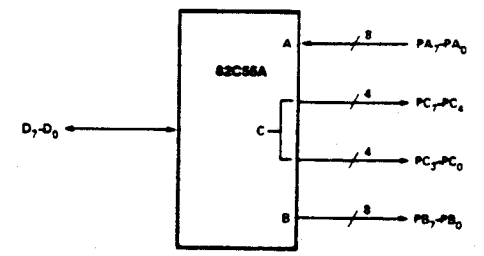

CONTROL WORD #5

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	0	1	0	0	1

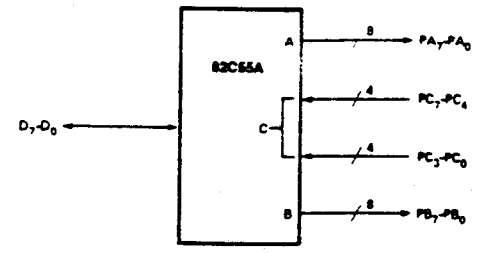

CONTROL WORD #9

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	1	0	0	0	1

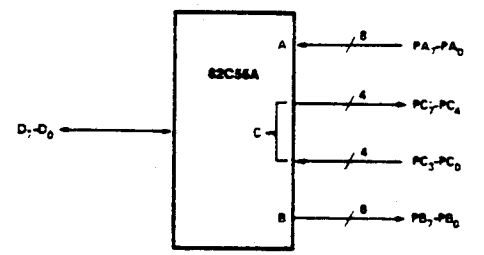

CONTROL WORD #6

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	0	1	0	1	0

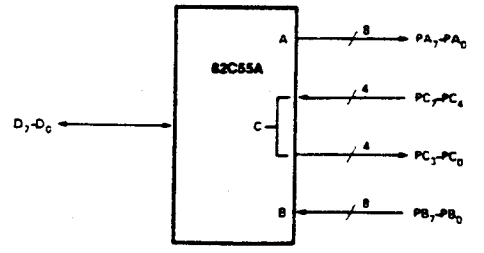

CONTROL WORD #10

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	1	0	0	1	0

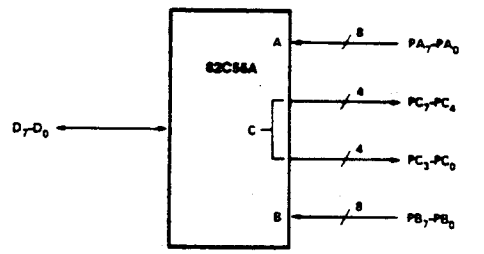

CONTROL WORD #7

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	0	1	0	1	1

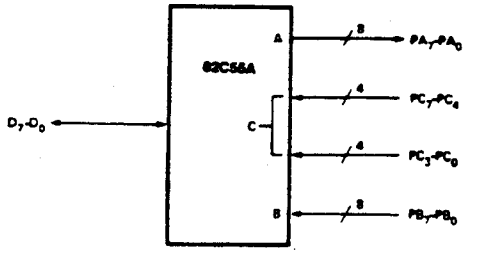

CONTROL WORD #11

D_7	D_6	D_5	D_4	D_3	D_2	D_1	D_0
1	0	0	1	0	0	1	1

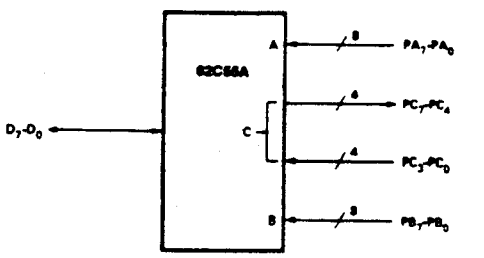

231256-11

MODE 0 Configurations (Continued)

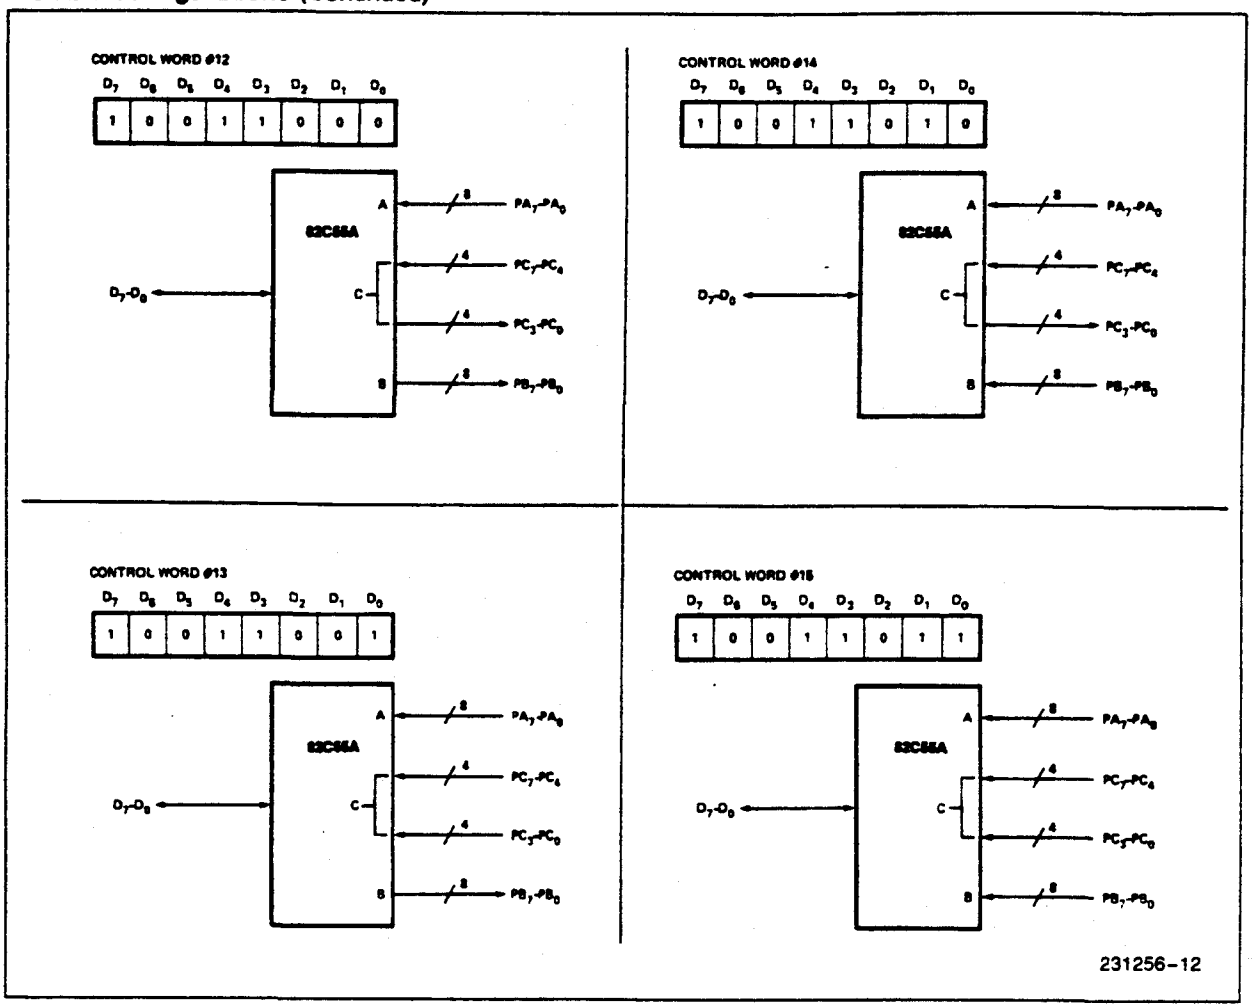

Operating Modes

MODE 1 (Strobed Input/Output). This functional configuration provides a means for transferring I/O data to or from a specified port in conjunction with strobes or "handshaking" signals. In mode 1, Port A and Port B use the lines on Port C to generate or accept these "handshaking" signals.

Mode 1 Basic functional Definitions:

- Two Groups (Group A and Group B).
- Each group contains one 8-bit data port and one 4-bit control/data port.
- The 8-bit data port can be either input or output Both inputs and outputs are latched.
- The 4-bit port is used for control and status of the 8-bit data port.

Input Control Signal Definition

$\overline{STB}$ (Strobe Input). A "low" on this input loads data into the input latch.

IBF (Input Buffer Full F/F)

A "high" on this output indicates that the data has been loaded into the input latch; in essence, an acknowledgement. IBF is set by $\overline{STB}$ input being low and is reset by the rising edge of the $\overline{RD}$ input.

INTR (Interrupt Request)

A "high" on this output can be used to interrupt the CPU when an input device is requesting service. INTR is set by the $\overline{STB}$ is a "one", IBF is a "one" and INTE is a "one". It is reset by the falling edge of $\overline{RD}$. This procedure allows an input device to request service from the CPU by simply strobing its data into the port.

INTE A

Controlled by bit set/reset of PC_4.

INTE B

Controlled by bit set/reset of PC_2.

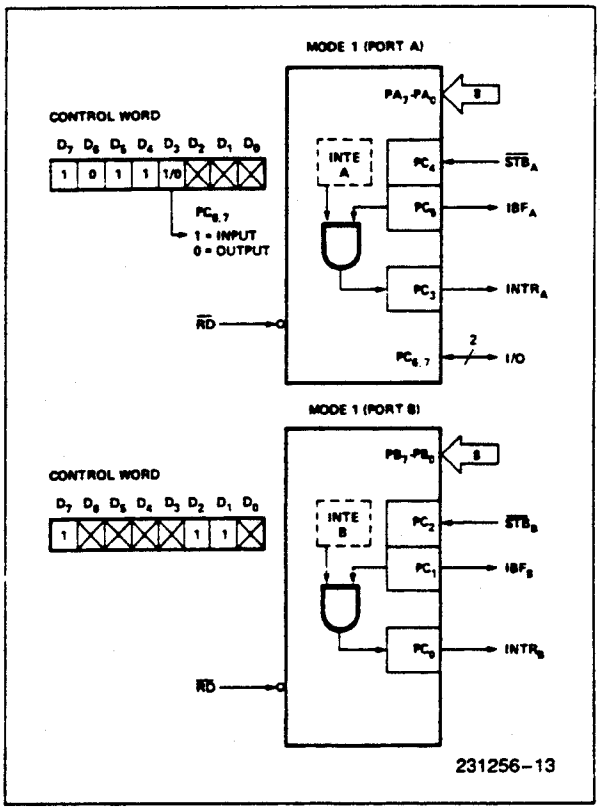

Figure 8. MODE 1 Input

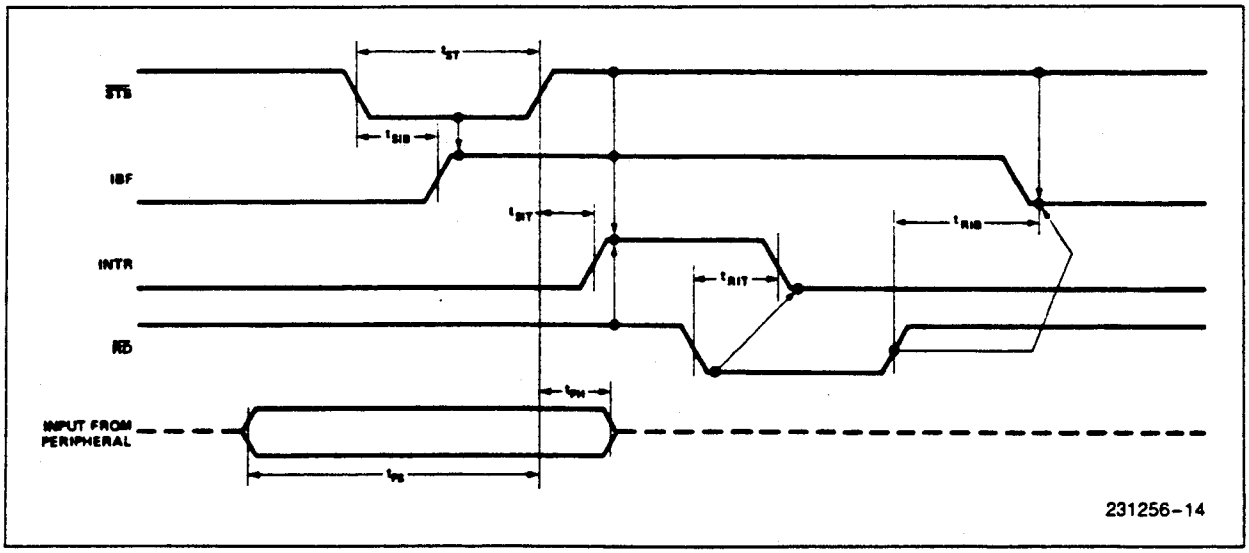

Figure 9. MODE 1 (Strobed Input)

Output Control Signal Definition

$\overline{OBF}$ (Output Buffer Full F/F). The $\overline{OBF}$ output will go "low" to indicate that the CPU has written data out to the specified port. The $\overline{OBF}$ F/F will be set by the rising edge of the $\overline{WR}$ input and reset by $\overline{ACK}$ Input being low.

$\overline{ACK}$ (Acknowledge Input). A "low" on this input informs the 82C55A that the data from Port A or Port B has been accepted. In essence, a response from the peripheral device indicating that it has received the data output by the CPU.

INTR (Interrupt Request). A "high" on this output can be used to interrupt the CPU when an output device has accepted data transmitted by the CPU. INTR is set when $\overline{ACK}$ is a "one", $\overline{OBF}$ is a "one" and INTE is a "one". It is reset by the falling edge of $\overline{WR}$.

INTE A

Controlled by bit set/reset of PC_6.

INTE B

Controlled by bit set/reset of PC_2.

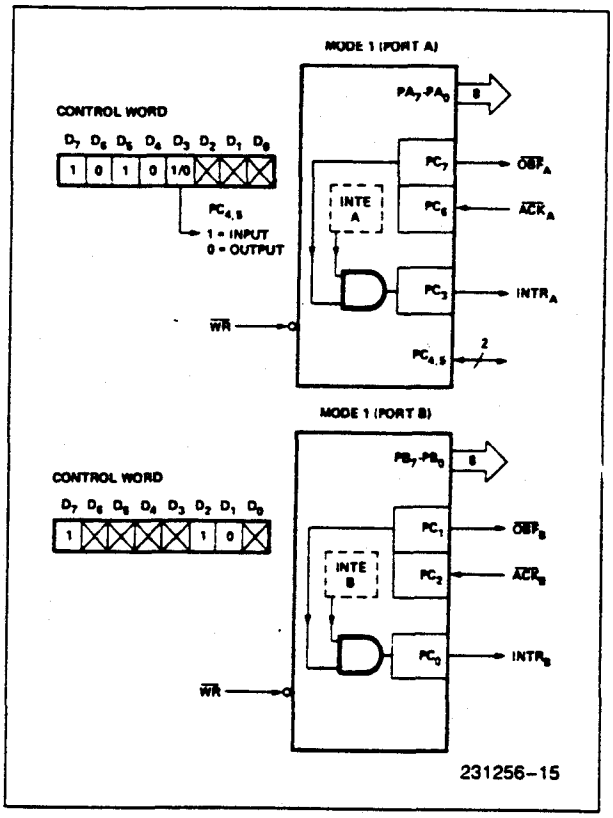

Figure 10. MODE 1 Output

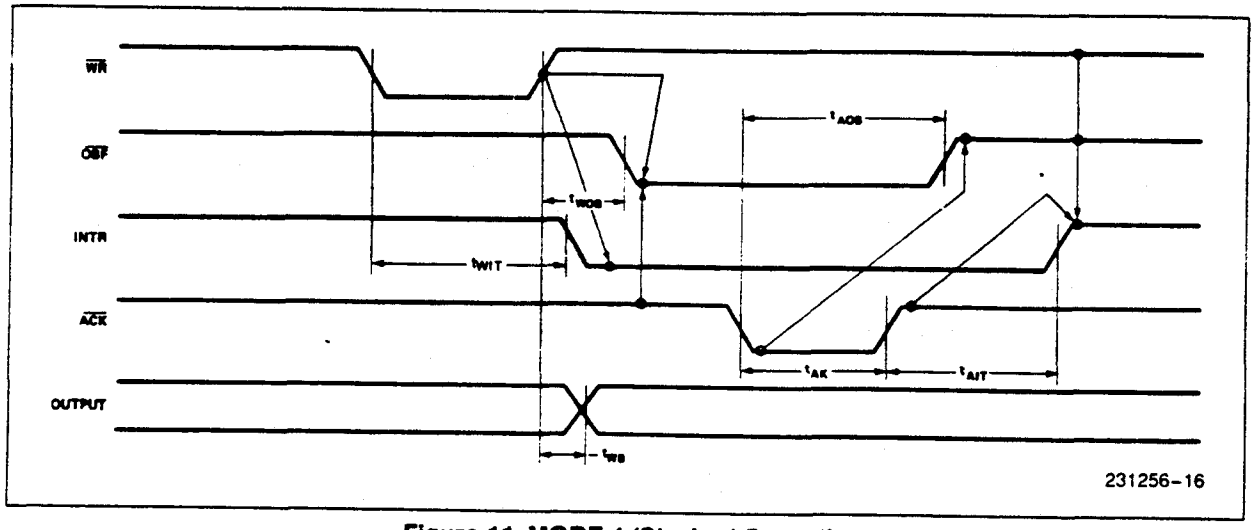

Figure 11. MODE 1 (Strobed Output)

Combinations of MODE 1

Port A and Port B can be individually defined as input or output in Mode 1 to support a wide variety of strobed I/O applications.

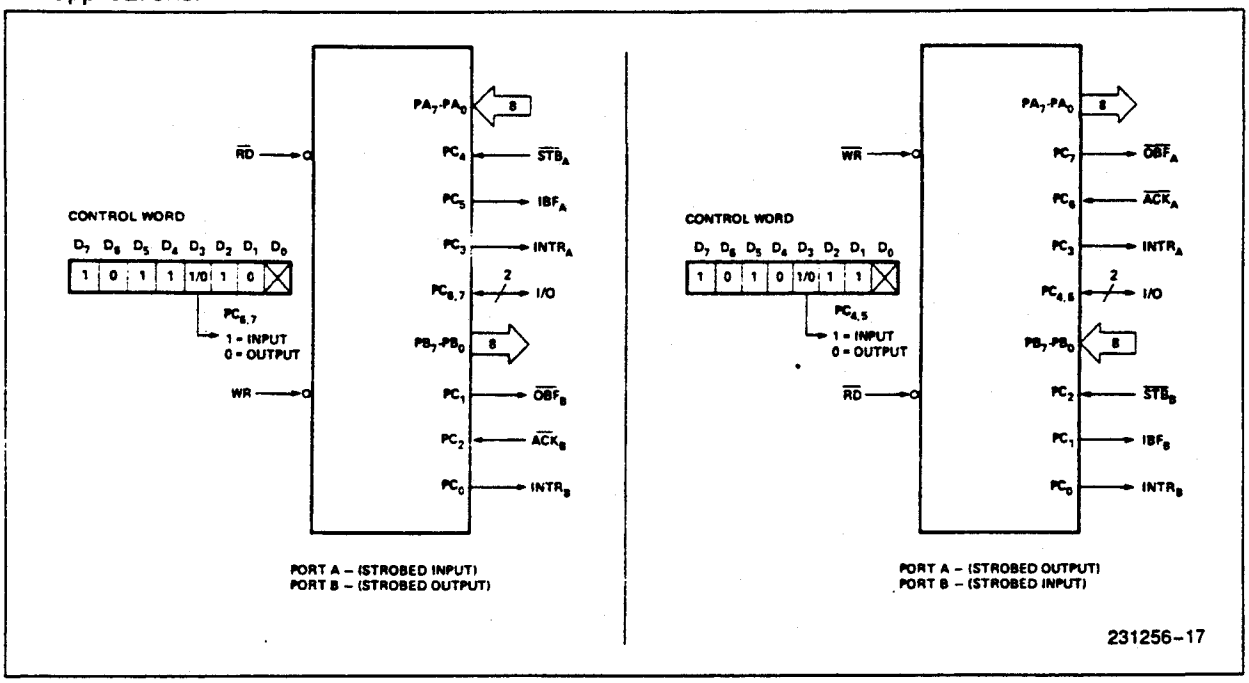

Figure 12. Combinations of MODE 1

Operating Modes

MODE 2 (Strobed Bidirectional Bus I/O). This functional configuration provides a means for communicating with a peripheral device or structure on a single 8-bit bus for both transmitting and receiving data (bidirectional bus I/O). "Handshaking" signals are provided to maintain proper bus flow discipline in a similar manner to MODE 1. Interrupt generation and enable/disable functions are also available.

MODE 2 Basic Functional Definitions:

- Used in Group A **only**.
- One 8-bit, bi-directional bus port (Port A) and a 5-bit control port (Port C).
- Both inputs and outputs are latched.
- The 5-bit control port (Port C) is used for control and status for the 8-bit, bi-directional bus port (Port A).

Bidirectional Bus I/O Control Signal Definition

INTR (Interrupt Request). A high on this output can be used to interrupt the CPU for input or output operations.

Output Operations

$\overline{OBF}$ (Output Buffer Full). The $\overline{OBF}$ output will go "low" to indicate that the CPU has written data out to port A.

$\overline{ACK}$ (Acknowledge). A "low" on this input enables the tri-state output buffer of Port A to send out the data. Otherwise, the output buffer will be in the high impedance state.

INTE 1 (The INTE Flip-Flop Associated with $\overline{OBF}$). Controlled by bit set/reset of PC_6.

Input Operations

$\overline{STB}$ (Strobe Input). A "low" on this input loads data into the input latch.

IBF (Input Buffer Full F/F). A "high" on this output indicates that data has been loaded into the input latch.

INTE 2 (The INTE Flip-Flop Associated with IBF). Controlled by bit set/reset of PC_4.

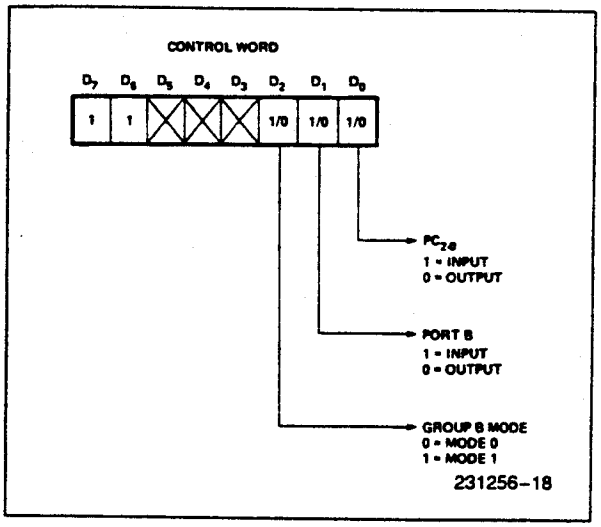

Figure 13. MODE Control Word

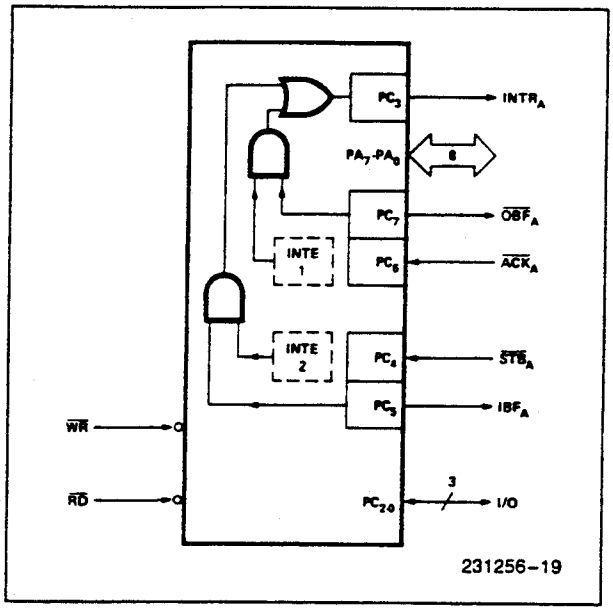

Figure 14. MODE 2

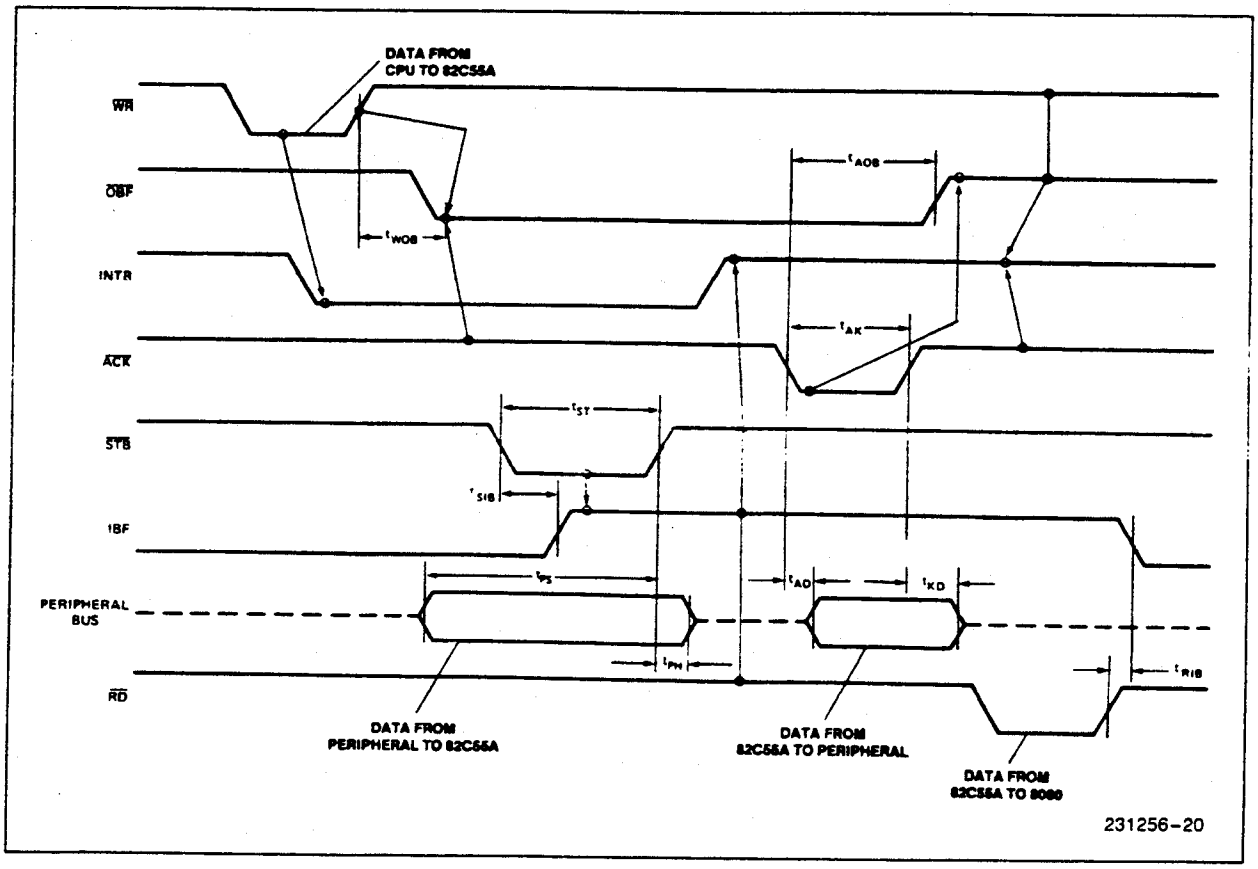

Figure 15. MODE 2 (Bidirectional)

NOTE:
Any sequence where $\overline{WR}$ occurs before $\overline{ACK}$, and $\overline{STB}$ occurs before $\overline{RD}$ is permissible.
($INTR = IBF \bullet \overline{MASK} \bullet \overline{STB} \bullet \overline{RD} + \overline{OBF} \bullet \overline{MASK} \bullet \overline{ACK} \bullet \overline{WR}$)

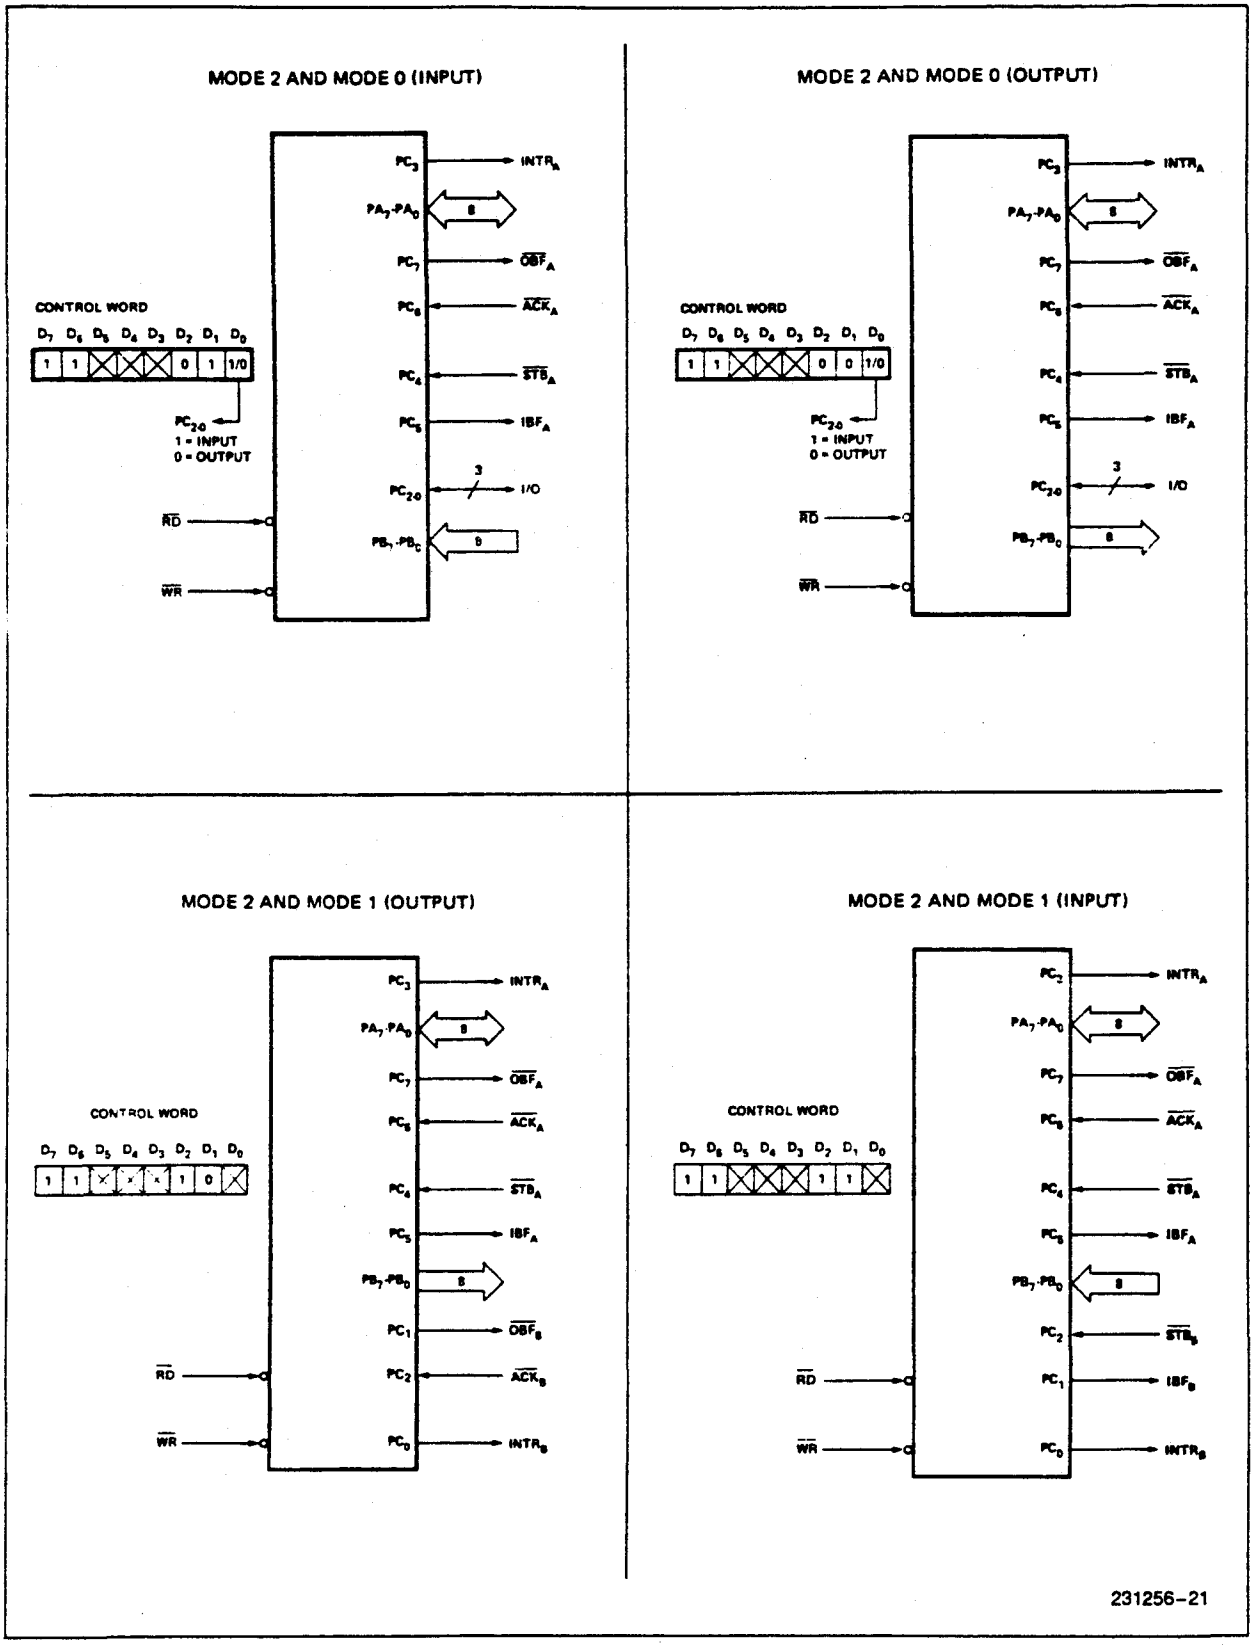

Figure 16. MODE ¼ Combinations

Mode Definition Summary

	MODE 0		MODE 1		MODE 2	
	IN	OUT	IN	OUT	GROUP A ONLY	
PA_0	IN	OUT	IN	OUT	⟷	
PA_1	IN	OUT	IN	OUT	⟷	
PA_2	IN	OUT	IN	OUT	⟷	
PA_3	IN	OUT	IN	OUT	⟷	
PA_4	IN	OUT	IN	OUT	⟷	
PA_5	IN	OUT	IN	OUT	⟷	
PA_6	IN	OUT	IN	OUT	⟷	
PA_7	IN	OUT	IN	OUT	⟷	
PB_0	IN	OUT	IN	OUT	—	MODE 0 OR MODE 1 ONLY
PB_1	IN	OUT	IN	OUT	—	
PB_2	IN	OUT	IN	OUT	—	
PB_3	IN	OUT	IN	OUT	—	
PB_4	IN	OUT	IN	OUT	—	
PB_5	IN	OUT	IN	OUT	—	
PB_6	IN	OUT	IN	OUT	—	
PB_7	IN	OUT	IN	OUT	—	
PC_0	IN	OUT	$INTR_B$	$INTR_B$	I/O	
PC_1	IN	OUT	IBF_B	$\overline{OBF}_B$	I/O	
PC_2	IN	OUT	$\overline{STB}_B$	$\overline{ACK}_B$	I/O	
PC_3	IN	OUT	$INTR_A$	$INTR_A$	$INTR_A$	
PC_4	IN	OUT	$\overline{STB}_A$	I/O	$\overline{STB}_A$	
PC_5	IN	OUT	IBF_A	I/O	IBF_A	
PC_6	IN	OUT	I/O	$\overline{ACK}_A$	$\overline{ACK}_A$	
PC_7	IN	OUT	I/O	$\overline{OBF}_A$	$\overline{OBF}_A$	

Special Mode Combination Considerations

There are several combinations of modes possible. For any combination, some or all of the Port C lines are used for control or status. The remaining bits are either inputs or outputs as defined by a "Set Mode" command.

During a read of Port C, the state of all the Port C lines, except the $\overline{ACK}$ and $\overline{STB}$ lines, will be placed on the data bus. In place of the $\overline{ACK}$ and $\overline{STB}$ line states, flag status will appear on the data bus in the PC2, PC4, and PC6 bit positions as illustrated by Figure 18.

Through a "Write Port C" command, only the Port C pins programmed as outputs in a Mode 0 group can be written. No other pins can be affected by a "Write Port C" command, nor can the interrupt enable flags be accessed. To write to any Port C output programmed as an output in a Mode 1 group or to change an interrupt enable flag, the "Set/Reset Port C Bit" command must be used.

With a "Set/Reset Port C Bit" command, any Port C line programmed as an output (including INTR, IBF and $\overline{OBF}$) can be written, or an interrupt enable flag can be either set or reset. Port C lines programmed as inputs, including $\overline{ACK}$ and $\overline{STB}$ lines, associated with Port C are not affected by a "Set/Reset Port C Bit" command. Writing to the corresponding Port C bit positions of the $\overline{ACK}$ and $\overline{STB}$ lines with the "Set/Reset Port C Bit" command will affect the Group A and Group B interrupt enable flags, as illustrated in Figure 18.

Current Drive Capability

Any output on Port A, B or C can sink or source 2.5 mA. This feature allows the 82C55A to directly drive Darlington type drivers and high-voltage displays that require such sink or source current.

Reading Port C Status

In Mode 0, Port C transfers data to or from the peripheral device. When the 82C55A is programmed to function in Modes 1 or 2, Port C generates or accepts "hand-shaking" signals with the peripheral device. Reading the contents of Port C allows the programmer to test or verify the "status" of each peripheral device and change the program flow accordingly.

There is no special instruction to read the status information from Port C. A normal read operation of Port C is executed to perform this function.

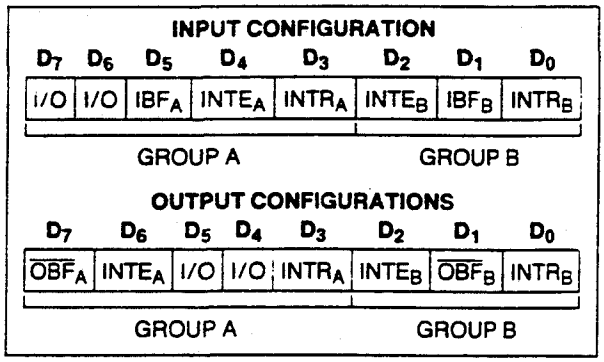
INPUT CONFIGURATION
D7 D6 D5 D4 D3 D2 D1 D0
I/O I/O IBFA INTEA INTRA INTEB IBFB INTRB
GROUP A
GROUP B
OUTPUT CONFIGURATIONS
D7 D6 D5 D4 D3 D2 D1 D0
OBFA INTEA I/O I/O INTRA INTEB OBFB INTRB
GROUP A
GROUP B

Figure 17a. MODE 1 Status Word Format

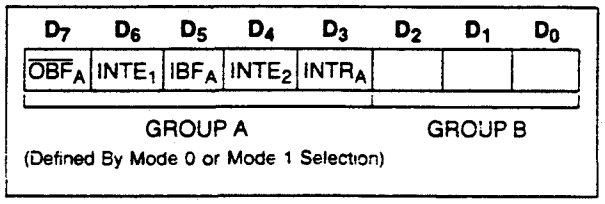

Figure 17b. MODE 2 Status Word Format

Interrupt Enable Flag	Position	Alternate Port C Pin Signal (Mode)
INTE B	PC2	$\overline{ACK}_B$ (Output Mode 1) or $\overline{STB}_B$ (Input Mode 1)
INTE A2	PC4	$\overline{STB}_A$ (Input Mode 1 or Mode 2)
INTE A1	PC6	$\overline{ACK}_A$ (Output Mode 1 or Mode 2

Figure 18. Interrupt Enable Flags in Modes 1 and 2

ABSOLUTE MAXIMUM RATINGS*

Ambient Temperature Under Bias....0°C to + 70°C
Storage Temperature .....− 65°C to + 150°C
Supply Voltage .....− 0.5 to + 8.0V
Operating Voltage .....+ 4V to + 7V
Voltage on any Input.....GND−2V to + 6.5V
Voltage on any Output ..GND−0.5V to V_{CC} + 0.5V
Power Dissipation .....1 Watt

Notice: Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

D.C. CHARACTERISTICS

T_A = 0°C to 70°C, V_{CC} = +5V ±10%, GND = 0V (T_A = −40°C to +85°C for Extended Temperture)

Symbol	Parameter	Min	Max	Units	Test Conditions
V_{IL}	Input Low Voltage	−0.5	0.8	V	
V_{IH}	Input High Voltage	2.0	V_{CC}	V	
V_{OL}	Output Low Voltage		0.4	V	I_{OL} = 2.5 mA
V_{OH}	Output High Voltage	3.0 V_{CC} − 0.4		V V	I_{OH} = −2.5 mA I_{OH} = −100 µA
I_{IL}	Input Leakage Current		±1	µA	V_{IN} = V_{CC} to 0V (Note 1)
I_{OFL}	Output Float Leakage Current		±10	µA	V_{IN} = V_{CC} to 0V (Note 2)
I_{DAR}	Darlington Drive Current	±2.5	(Note 4)	mA	Ports A, B, C R_{ext} = 500Ω V_{ext} = 1.7V
I_{PHL}	Port Hold Low Leakage Current	+50	+300	µA	V_{OUT} = 1.0V Port A only
I_{PHH}	Port Hold High Leakage Current	−50	−300	µA	V_{OUT} = 3.0V Ports A, B, C
I_{PHLO}	Port Hold Low Overdrive Current	−350		µA	V_{OUT} = 0.8V
I_{PHHO}	Port Hold High Overdrive Current	+350		µA	V_{OUT} = 3.0V
I_{CC}	V_{CC} Supply Current		10	mA	(Note 3)
I_{CCSB}	V_{CC} Supply Current-Standby		10	µA	V_{CC} = 5.5V V_{IN} = V_{CC} or GND Port Conditions If I/P = Open/High O/P = Open Only With Data Bus = High/Low $\overline{CS}$ = High Reset = Low Pure Inputs = Low/High

NOTES:
1. Pins A_1, A_0, $\overline{CS}$, $\overline{WR}$, $\overline{RD}$, Reset.
2. Data Bus; Ports B, C.
3. Outputs open.
4. Limit output current to 4.0 mA.

CAPACITANCE

T_A = 25°C, V_{CC} = GND = 0V

Symbol	Parameter	Min	Max	Units	Test Conditions
C_{IN}	Input Capacitance		10	pF	Unmeasured pins returned to GND f_c = 1 MHz(5)
$C_{I/O}$	I/O Capacitance		20	pF	

NOTE:
5. Sampled not 100% tested.

A.C. CHARACTERISTICS

T_A = 0° to 70°C, V_{CC} = +5V ±10%, GND = 0V

T_A = −40°C to +85°C for Extended Temperature

BUS PARAMETERS

READ CYCLE

Symbol	Parameter	82C55A-2		Units	Test Conditions
		Min	Max		
t_{AR}	Address Stable Before $\overline{RD}\downarrow$	0		ns	
t_{RA}	Address Hold Time After $\overline{RD}\uparrow$	0		ns	
t_{RR}	$\overline{RD}$ Pulse Width	150		ns	
t_{RD}	Data Delay from $\overline{RD}\downarrow$		120	ns	
t_{DF}	$\overline{RD}\uparrow$ to Data Floating	10	75	ns	
t_{RV}	Recovery Time between $\overline{RD}/\overline{WR}$	200		ns	

WRITE CYCLE

Symbol	Parameter	82C55A-2		Units	Test Conditions
		Min	Max		
t_{AW}	Address Stable Before $\overline{WR}\downarrow$	0		ns	
t_{WA}	Address Hold Time After $\overline{WR}\uparrow$	20		ns	Ports A & B
		20		ns	Port C
t_{WW}	$\overline{WR}$ Pulse Width	100		ns	
t_{DW}	Data Setup Time Before $\overline{WR}\uparrow$	100		ns	
t_{WD}	Data Hold Time After $\overline{WR}\uparrow$	30		ns	Ports A & B
		30		ns	Port C

OTHER TIMINGS

Symbol	Parameter	82C55A-2		Units Conditions	Test
		Min	Max		
t_{WB}	$\overline{WR}$ = 1 to Output		350	ns	
t_{IR}	Peripheral Data Before $\overline{RD}$	0		ns	
t_{HR}	Peripheral Data After $\overline{RD}$	0		ns	
t_{AK}	$\overline{ACK}$ Pulse Width	200		ns	
t_{ST}	$\overline{STB}$ Pulse Width	100		ns	
t_{PS}	Per. Data Before $\overline{STB}$ High	20		ns	
t_{PH}	Per. Data After $\overline{STB}$High	50		ns	
t_{AD}	$\overline{ACK}$ = 0 to Output		175	ns	
t_{KD}	$\overline{ACK}$ = 1 to Output Float	20	250	ns	
t_{WOB}	$\overline{WR}$ = 1 to $\overline{OBF}$ = O		150	ns	
t_{AOB}	$\overline{ACK}$ = 0 to $\overline{OBF}$ = 1		150	ns	
t_{SIB}	$\overline{STB}$ = 0 to IBF = 1		150	ns	
t_{RIB}	$\overline{RD}$ = 1 to IBF = 0		150	ns	
t_{RIT}	$\overline{RD}$ = 0 to INTR = 0		200	ns	
t_{SIT}	$\overline{STB}$ = 1 to INTR = 1		150	ns	
t_{AIT}	$\overline{ACK}$ = 1 to INTR = 1		150	ns	
t_{WIT}	$\overline{WR}$ = 0 to INTR = 0		200	ns	see note 1
t_{RES}	Reset Pulse Width	500		ns	see note 2

NOTE:
1. INTR ↑ may occur as early as $\overline{WR}$ ↓.
2. Pulse width of initial Reset pulse after power on must be at least 50 μSec. Subsequent Reset pulses may be 500 ns minimum.

WAVEFORMS

MODE 0 (BASIC INPUT)

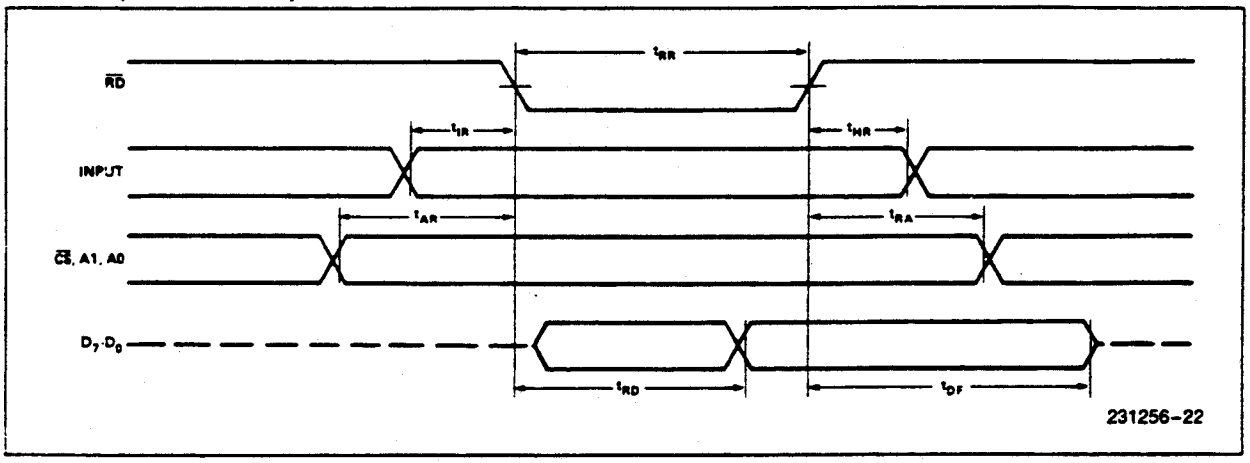

MODE 0 (BASIC OUTPUT)

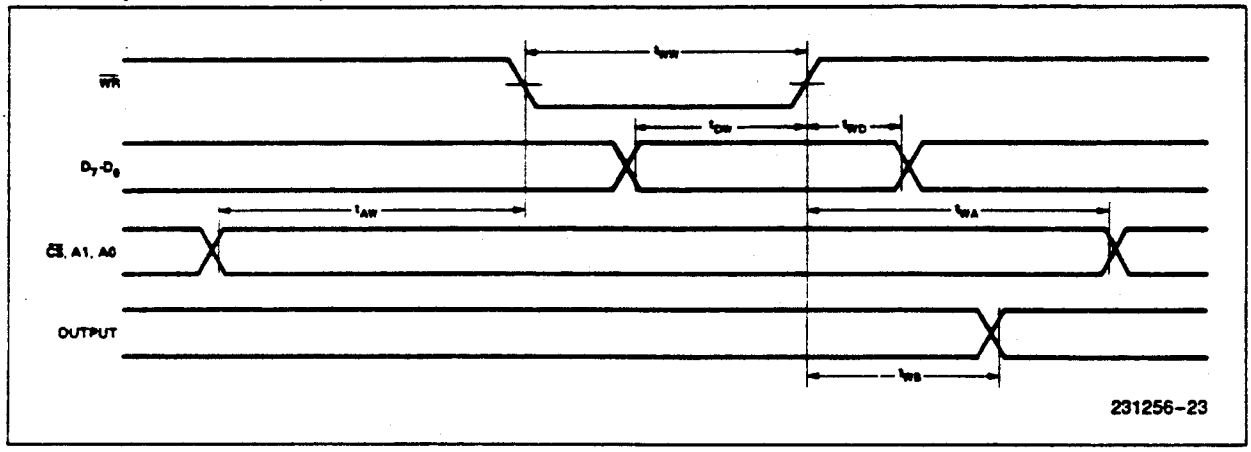

WAVEFORMS (Continued)

MODE 1 (STROBED INPUT)

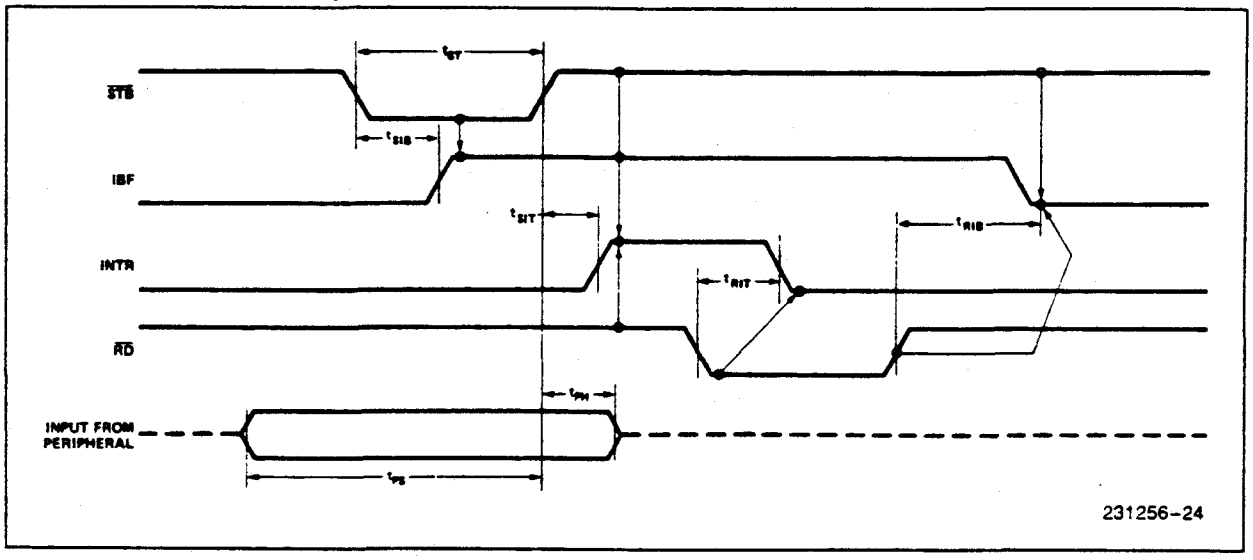

MODE 1 (STROBED OUTPUT)

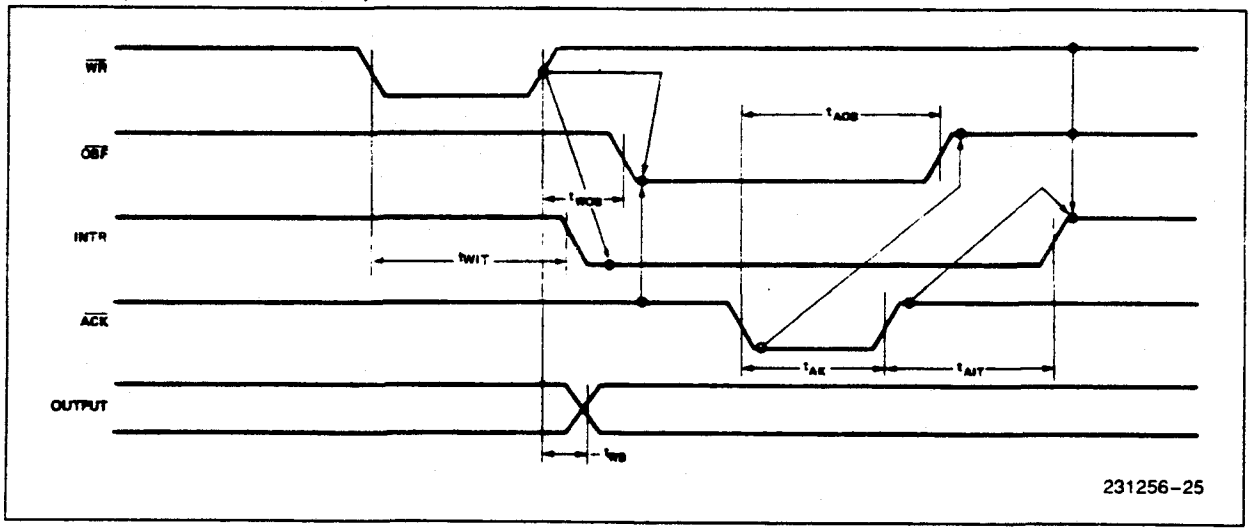

WAVEFORMS (Continued)

MODE 2 (BIDIRECTIONAL)

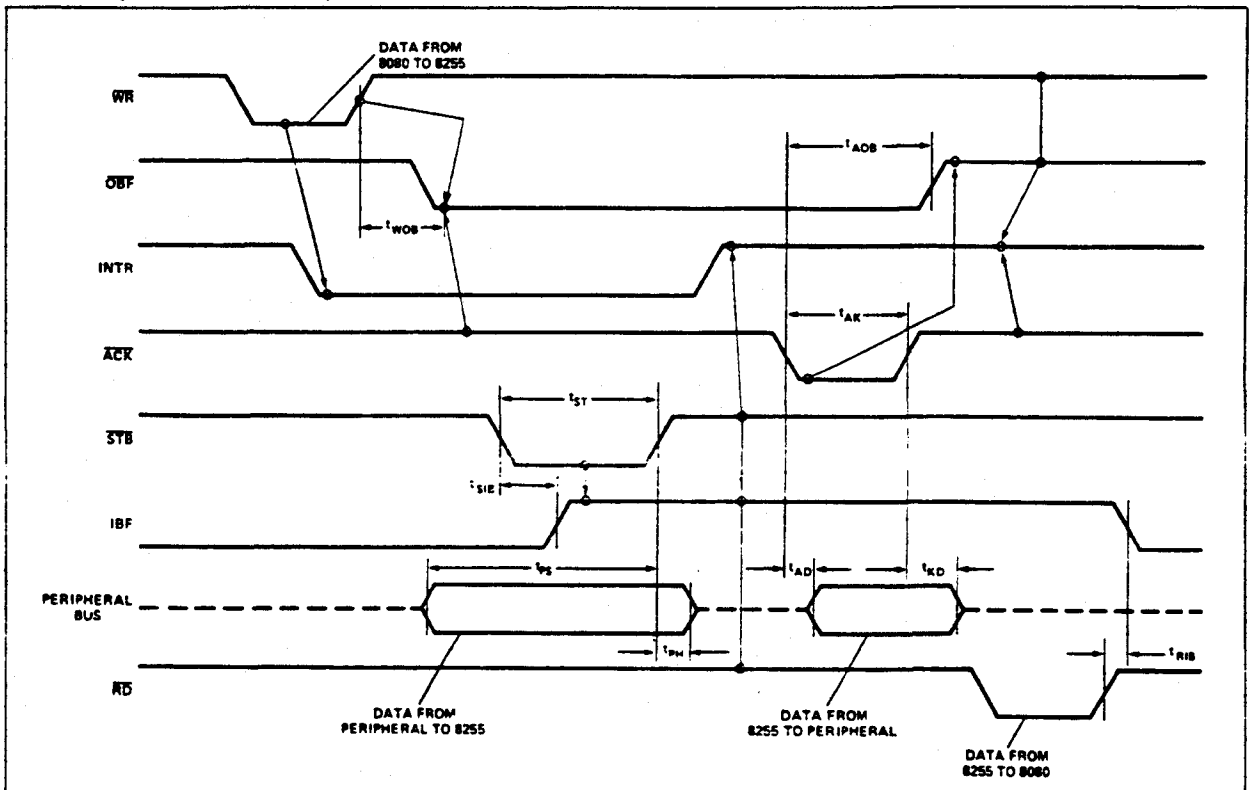

231256-26

Note:
Any sequence where $\overline{WR}$ occurs before $\overline{ACK}$ AND $\overline{STB}$ occurs before $\overline{RD}$ is permissible.
($INTR = IBF \bullet \overline{MASK} \bullet \overline{STB} \bullet \overline{RD} + \overline{OBF} \bullet \overline{MASK} \bullet \overline{ACK} \bullet \overline{WR}$)

WRITE TIMING

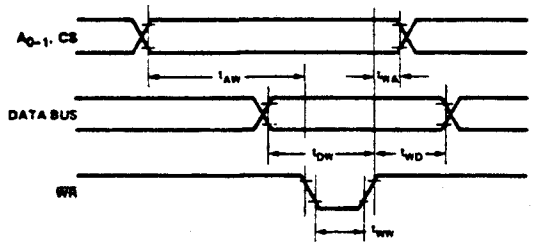

231256-27

READ TIMING

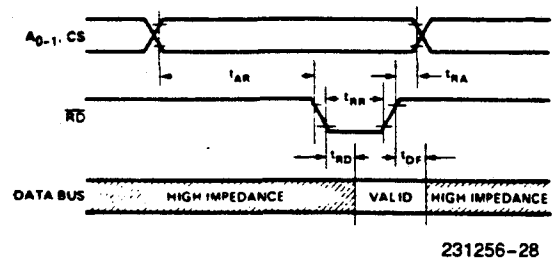

231256-28

A.C. TESTING INPUT, OUTPUT WAVEFORM

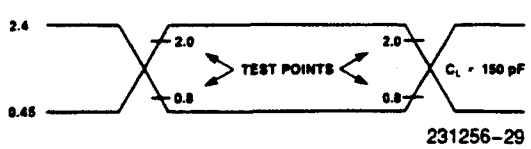

231256-29

A.C. Testing Inputs Are Driven At 2.4V For A Logic 1 And 0.45V For A Logic 0 Timing Measurements Are Made At 2.0V For A Logic 1 And 0.8 For A Logic 0.

A.C. TESTING LOAD CIRCUIT

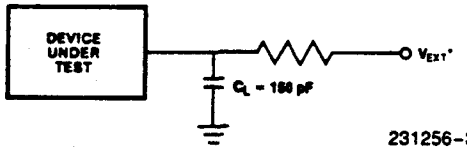

231256-30

*V_{EXT} Is Set At Various Voltages During Testing To Guarantee The Specification. C_L Includes Jig Capacitance.

APPENDIX D

CONFIGURING THE ADA2000 FOR SIGNAL*MATH

Jumper Settings

When running SIGNAL*MATH, you have to change some of the ADA2000's on-board jumpers from their factory-set positions. Before using SIGNAL*MATH on the ADA2000 board, check the following jumpers:

- P2 — Base address
- P3 — 8254 timer/counter I/O configuration
- P4, P5 & P7 — Interrupts
- P6 — End-of-Convert Monitor

The board layout is shown in Figure D-1.

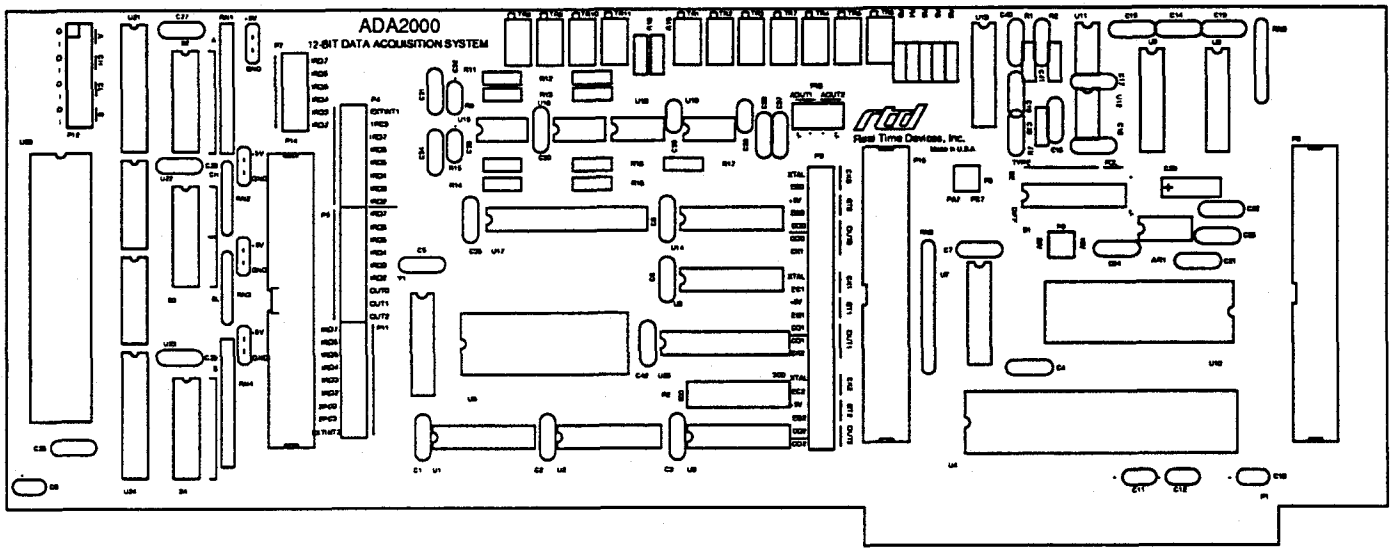

Fig. D-1 — ADA2000 Board Layout

P2 — Base Address

SIGNAL*MATH assumes that the base address of your ADA2000 is the factory setting of 300 hex (768 decimal). If you change this setting, you **must** run the ADAINST program and reset the base address.

NOTE: When using the ADAINST program, you can enter the base address in decimal or hexadecimal notation. When entering a hex value, you must precede the number by a dollar sign (for example, $300).

P3 — 8254 Timer/Counter I/O Configuration

The 8254 must be configured with the six jumpers placed between the pins as shown in Figure D-2. After setting the jumpers, verify that each is in the proper location. Any remaining jumpers must be removed from the P3 header connector.

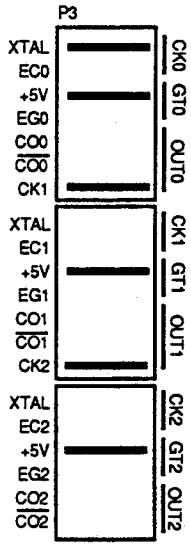

Fig. D-2 — 8254 Timer/Counter Jumpers, P3

P4, P5 & P7 — Interrupts

To select IRQ channels and interrupt sources for SIGNAL*MATH, you must install two jumpers on P5 and one jumper on P7. First install a jumper on P5-OUT2, and a second jumper across the pair of P5 pins for the IRQ channel you select.Then, install a jumper on the end-of-convert interrupt header, P7, across the pins of your desired IRQ channel. The IRQ selected on P7 **must be different from** the IRQ set on P5! Figure D-3 shows OUT2 jumpered to IRQ3 and EOC jumpered to IRQ4. Make sure that no jumpers are installed on P4.

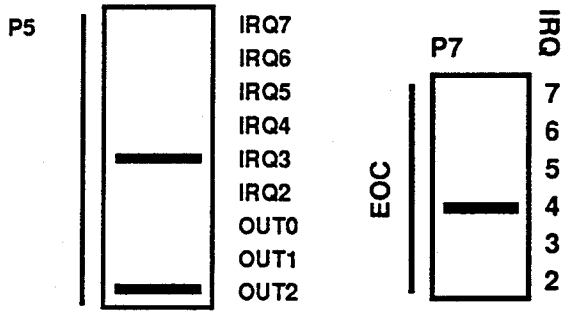

Fig. D-3 — Timer/Counter Out & End-of-Convert Interrupt Jumpers, P5 & P7

P6 — End-of-Convert Monitor

When running SIGNAL*MATH, place a jumper between EOC and PA7, as shown in Figure D-4.

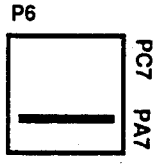

Fig. D-4 — End-of-Convert Monitor Jumper, P6

Running ADAINST

After the jumpers are set and the ADA2000 board is installed in the computer, you are ready to configure SIGNAL*MATH so that it is compatible with your board's settings. This is done by running the ADAINST driver installation program. After running the program, open ADA2000.EXE from the *Open a File* menu. You will see a screen similar to the screen shown in Figure D-5 below. The factory default settings are shown in the illustration. Your settings may or may not match the default settings, depending on whether you have made changes to these settings before.

Base Address. The board's base address setting is entered in the upper right block, as shown in the diagram. The factory setting for all Real Time Devices boards is 300 hex (768 decimal). The base address can be entered as a decimal or hexadecimal value (hex values must be preceded by a dollar sign (for example, $300)). Refer to your board's manual if you need help in determining the correct value to enter.

EOC IT (End-of-Convert Interrupt). In this block, enter the IRQ channel number which corresponds to your jumper setting on P7.

Timer IT (Timer/Counter Interrupt). In this block, enter the IRQ channel number which corresponds to your jumper setting on P5.

LabTech SW IT (LABTECH NOTEBOOK Software Interrupt). This sets the software interrupt address where LABTECH NOTEBOOK's labLINX driver is installed. The factory setting is $60. This setting can be ignored when running SIGNAL*MATH.

A/D Parameters. Six A/D board parameters are listed: resolution, number of channels, active DMA channel, gain, loss, and input voltage polarity.

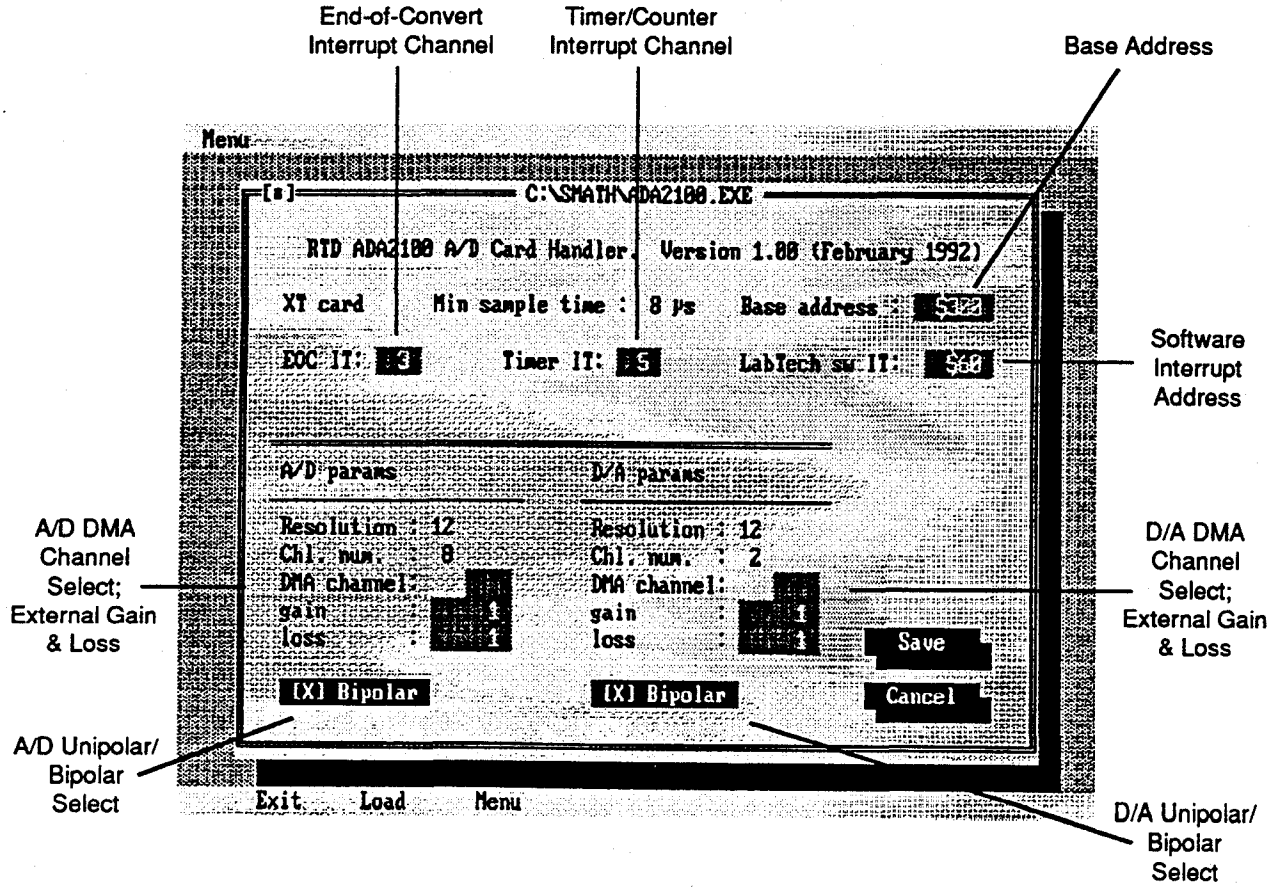

Fig. D-5 — ADAINST.EXE Screen

Resolution and number of channels are fixed by the program for your board.

The DMA channel number block is not valid on the ADA2000, and should be left blank.

The next two blocks, gain and loss, are provided so that you can make adjustments for **external** gain or loss, **other than** the programmable gain settings available on the board. If your input signal is externally attenuated, then you can adjust for this by setting a value other than 1 for loss. If you have an external gain factor, then you can adjust for this condition. Numbers must be entered as whole decimal values. The factory default setting for gain and loss is 1.

For a bipolar input range, an X should be placed before Bipolar on the screen (default setting). For unipolar operation, remove the X.

D/A Parameters. Six D/A board parameters are listed: resolution, number of channels, active DMA channel, gain, loss, and input voltage polarity. Resolution and number of channels are fixed. For the ADA2000, DMA is not used and should be left blank. Gain and loss are provided so that you can make adjustments for external gain or loss, as described above for the A/D parameters. For a bipolar output range, an X should be placed before Bipolar on the screen (default setting). For unipolar operation, remove the X.

APPENDIX E

CONFIGURING THE ADA2000 FOR ATLANTIS

Jumper Settings

When running ATLANTIS, you have to change some of the ADA2000's on-board jumpers from their factory-set positions. Before using ATLANTIS on the ADA2000 board, check the following jumpers:

- P2 — Base address
- P3 — 8254 timer/counter I/O configuration
- P4, P5 & P7 — Interrupts
- P6 — End-of-Convert Monitor

The board layout is shown in Figure E-1.

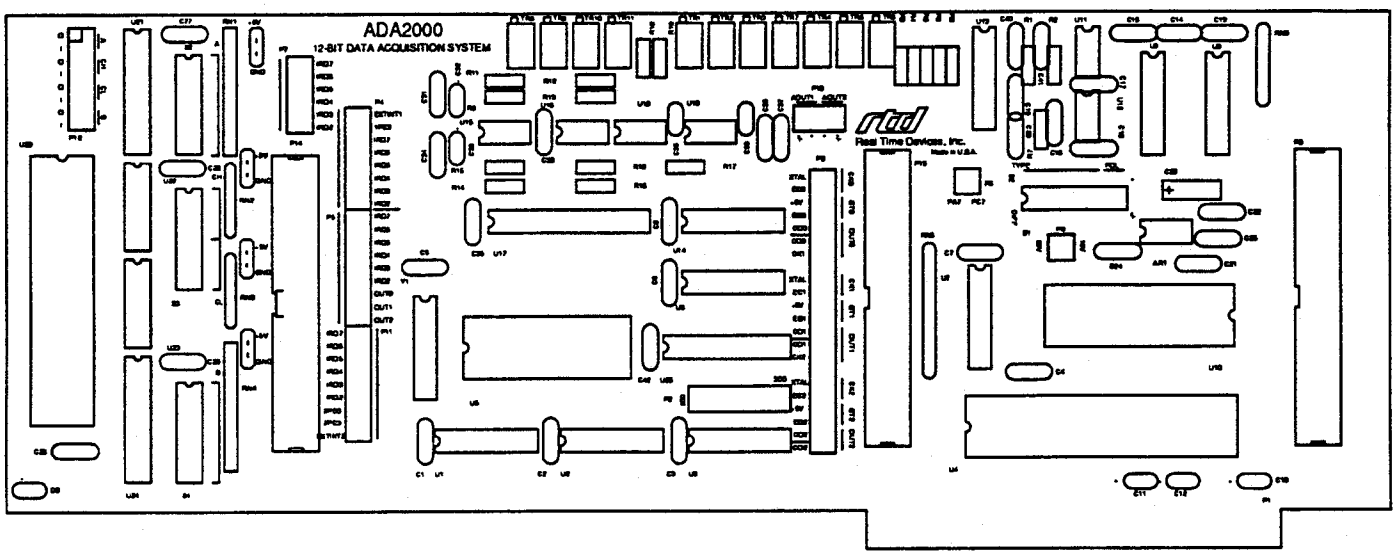

Fig. E-1 — ADA2000 Board Layout

P2 — Base Address

ATLANTIS assumes that the base address of your ADA2000 is the factory setting of 300 hex (see Chapter 1). If you changed this setting, you **must** run the ATINST program and reset the base address.

NOTE: The ATINST program requires the base address to be entered in **decimal** notation.

P3 — 8254 Timer/Counter I/O Configuration

The 8254 must be configured with the six jumpers placed between the pins as shown in Figure E-2. After setting the jumpers, verify that each is in the proper location. Any remaining jumpers must be removed from the P3 header connector.

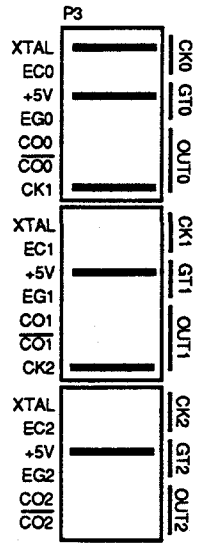

Fig. E-2 — 8254 Timer/Counter Jumpers, P3

P4, P5 & P7 — Interrupts

To select an IRQ channel and an interrupt source for ATLANTIS, you must install two jumpers on P5, the timer/counter output interrupt header. Jumpers must be installed across the OUT2 pins and across the pins of your desired IRQ channel. Figure E-3 shows OUT2 jumpered to IRQ3. Make sure that no jumpers are installed across the IRQ pins on header connectors P4 and P7.

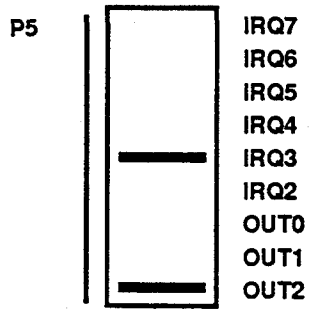

Fig. E-3 — End-of-Convert Interrupt Jumper, P7

P6 — End-of-Convert Monitor

When running ATLANTIS, place a jumper between EOC and PA7, as shown in Figure E-4.

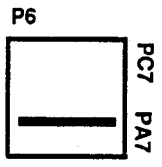

Fig. E-4 — End-of-Convert Monitor Jumper, P6

APPENDIX F

WARRANTY

LIMITED WARRANTY

Real Time Devices, Inc. warrants the hardware and software products it manufactures and produces to be free from defects in materials and workmanship for one year following the date of shipment from REAL TIME DEVICES. This warranty is limited to the original purchaser of product and is not transferable.

During the one year warranty period, REAL TIME DEVICES will repair or replace, at its option, any defective products or parts at no additional charge, provided that the product is returned, shipping prepaid, to REAL TIME DEVICES. All replaced parts and products become the property of REAL TIME DEVICES. **Before returning any product for repair, customers are required to contact the factory for an RMA number.**

THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCTS WHICH HAVE BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE (such as: use of incorrect input voltages, improper or insufficient ventilation, failure to follow the operating instructions that are provided by REAL TIME DEVICES, "acts of God" or other contingencies beyond the control of REAL TIME DEVICES), OR AS A RESULT OF SERVICE OR MODIFICATION BY ANYONE OTHER THAN REAL TIME DEVICES. EXCEPT AS EXPRESSLY SET FORTH ABOVE, NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND REAL TIME DEVICES EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED HEREIN. ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES FOR MECHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS WARRANTY. IN THE EVENT THE PRODUCT IS NOT FREE FROM DEFECTS AS WARRANTED ABOVE, THE PURCHASER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. UNDER NO CIRCUMSTANCES WILL REAL TIME DEVICES BE LIABLE TO THE PURCHASER OR ANY USER FOR ANY DAMAGES, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOST PROFITS, LOST SAVINGS, OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

ADA2000 User-Selected Options	
Base I/O Address:	
(hex)	(decimal)
IRQ Channel Selection:	
A/D EOC	IRQ CHANNEL:
PIT OUT0	IRQ CHANNEL:
PIT OUT1	IRQ CHANNEL:
PIT OUT2	IRQ CHANNEL:
PPI1 INTRA (1PC3)	IRQ CHANNEL:
PPI2 INTRA (2PC3)	IRQ CHANNEL:
PPI2 INTRB (2PC0)	IRQ CHANNEL:
EXTINT1	IRQ CHANNEL:
EXTINT2	IRQ CHANNEL:
A/D EOC/PPI Bit Assignment:	
A/D EOC	PA7: PC7: